

## KRAL flowmeters.

OMP Series

OIO 23en-GB  
Edition 2021-10  
Original instructions

<b>1 About this document</b> .....	<b>4</b>	8.4 Removing the flowmeter .....	18
1.1 General information .....	4	<b>9 Connection</b> .....	<b>18</b>
1.2 Target groups .....	4	9.1 Dangers during connection work .....	18
1.3 Symbols .....	4	9.2 Connecting the flowmeter to the pipe system .....	19
1.3.1 Danger levels .....	4	9.3 Connecting the pick up and temperature sensor .....	19
1.3.2 Danger signs .....	4	<b>10 Operation</b> .....	<b>20</b>
1.3.3 Symbols in this document .....	5	10.1 Dangers during operation .....	20
1.4 Associated documents .....	5	10.2 Commissioning .....	20
<b>2 Safety</b> .....	<b>5</b>	10.2.1 Cleaning the pipe system .....	20
2.1 Proper use .....	5	10.2.2 Checking the function .....	20
2.2 Foreseeable misuse .....	5	10.2.3 Commissioning the flowmeter .....	20
2.3 Obligations of the operator-owner .....	6	10.3 Decommissioning .....	21
2.4 Safety instructions .....	6	10.3.1 Switching off the flowmeter .....	21
2.4.1 Fundamental safety instructions .....	6	10.4 Recommissioning .....	21
<b>3 Identification</b> .....	<b>6</b>	10.4.1 Recommissioning the flowmeter .....	21
3.1 Type code .....	6	<b>11 Maintenance</b> .....	<b>22</b>
3.2 Rating plate .....	7	11.1 Required maintenance .....	22
<b>4 Technical data</b> .....	<b>7</b>	11.2 Maintaining flowmeters .....	22
4.1 Operating limits .....	7	11.3 Recalibration of the flowmeter .....	22
4.2 Pressure pulsation .....	8	<b>12 Servicing</b> .....	<b>23</b>
4.3 Maximum values .....	8	12.1 Dangers during servicing .....	23
4.4 Substitute operating data .....	9	12.2 Replacing seals and ball bearings .....	23
4.5 Sound pressure level .....	9	12.2.1 Removing seals and ball bearings OMP 13 .....	23
4.6 Dimensions and weights .....	9	12.2.2 Installing seals and ball bearings OMP 13 .....	24
4.6.1 OMP with pipe thread connection .....	9	12.2.3 Removing the seals and ball bearings OMP 20/ OMP 32 .....	24
4.6.2 OMP with flange connection .....	10	12.2.4 Installing seals and ball bearings OMP 20/OMP 32 .....	25
<b>5 Function description</b> .....	<b>10</b>	12.2.5 Removing seals and ball bearings OMP 52 .....	26
5.1 Structure .....	10	12.2.6 Installing seals and ball bearings OMP 52 .....	27
5.2 Functional principle .....	11	<b>13 Disposal</b> .....	<b>29</b>
5.3 Rolling bearings .....	11	13.1 Dangers during disposal .....	29
5.4 Signal generation .....	11	13.2 Dismantling and disposing of the flowmeter .....	29
5.5 Linearization .....	11	<b>14 Troubleshooting</b> .....	<b>29</b>
5.6 Temperature compensation .....	11	14.1 Possible faults .....	29
5.7 Recognition of flow direction .....	12	14.2 Troubleshooting .....	30
5.8 Junction box .....	12	<b>15 Spare parts</b> .....	<b>31</b>
<b>6 Transportation, storage</b> .....	<b>12</b>	15.1 Maintenance kits .....	31
6.1 Dangers during transportation .....	12	15.1.1 Maintenance kit OMP 13 .....	31
6.2 Dangers during storage .....	12	15.1.2 Maintenance kit OMP 20/OMP 32 .....	32
6.3 Unpacking and checking the state of delivery .....	12	15.1.3 Maintenance kit OMP 52 .....	33
6.4 Transporting flowmeters .....	12	<b>16 Accessories</b> .....	<b>34</b>
6.5 Storing the flowmeter .....	13	16.1 Trace heating .....	34
<b>7 Preservation</b> .....	<b>13</b>	16.2 Junction box .....	34
7.1 Preservation table .....	13	16.2.1 Function description .....	34
7.2 Preserving the inner surfaces .....	14	16.2.2 Technical data .....	35
7.3 Preserving the outer surfaces .....	14	16.2.3 Mounting junction box on OMP 13 - 52 .....	35
7.4 Removing the preservation .....	14	16.2.4 Connecting the junction box .....	36
<b>8 Installation, removal</b> .....	<b>15</b>	16.3 Extension cable .....	36
8.1 Dangers during installation .....	15	16.3.1 Function description .....	36
8.2 Dangers during removal .....	15	16.3.2 Technical data .....	36
8.3 Installing the flowmeter .....	15	16.3.3 Connecting the extension cable .....	36
8.3.1 Protecting the flowmeter against soiling .....	15	<b>17 Appendix</b> .....	<b>37</b>
8.3.2 Installation types .....	16	17.1 Tightening torques for screws with metric screw threads with and without wedge lock washers .....	37
8.3.3 Installation recommendation .....	16		
8.3.4 Installing the flowmeter .....	17		

17.2 Tightening torques for screw plugs with thread measured in inches and elastomer seal.....	37
17.3 Contents of the Declaration of Conformity.....	38

# 1 About this document

## 1.1 General information

### 1 About this document

#### 1.1 General information

These instructions form part of the product and must be kept for future reference. Furthermore please observe the associated documents.

#### 1.2 Target groups

The instructions are intended for the following persons:

- Persons who work with the product
- Operator-owners who are responsible for the use of the product

Persons who work with the product must be qualified. The qualification ensures that possible dangers and material damage that are connected to the activity are detected and avoided. These persons are qualified personnel who carry out the work properly due to their training, knowledge and experience and on the basis of the relevant provisions.




Information on the required qualification of the personnel is provided separately at the beginning of the individual chapters in these instructions. The following table provides an overview.

Target group	Activity	Qualification
Transport personnel	Transporting, unloading, setting up	Qualified personnel for transport, mobile crane operators, crane operators, forklift operators
Fitter	Mounting, connection	Qualified personnel for mounting
Electrician	Electrical connection	Qualified personnel for electric installation
Trained personnel	Delegated task	Personnel trained by the operator-owner who know the task delegated to them and the possible dangers arising through improper behaviour.




Tab. 1: Target groups




#### 1.3 Symbols

##### 1.3.1 Danger levels









	Signal word	Danger level	Consequences of non-observance
	DANGER	Immediate threat of danger	Serious personal injury, death
	WARNING	Possible threat of danger	Serious personal injury, invalidity
	CAUTION	Potentially dangerous situation	Slight personal injury
	ATTENTION	Potentially dangerous situation	Material damage

##### 1.3.2 Danger signs

	Meaning	Source and possible consequences of non-observance
	Electrical voltage	Electrical voltage causes serious physical injury or death.
	Raised load	Falling objects can result in serious physical injury or death.
	Heavy load	Heavy loads can result in serious back problems.

	Meaning	Source and possible consequences of non-observance
	Risk of slipping	Discharging pumped liquid and oils on the foundation or tread surfaces can cause falls with serious physical injury or death.
	Flammable substances	Discharging pumped liquid and oils can be easily inflammable and can result in serious burns.
	Hot surface	Hot surfaces can cause burns.

### 1.3.3 Symbols in this document

	Meaning
	Warning personal injury
	Safety instruction
	Request for action
1.  2.  3. 	Multi-step instructions for actions
	Action result
	Cross-reference

## 1.4 Associated documents

- Calibration certificate
- Declaration of Conformity according to EU Directive 2006/42/EC
- Manufacturer's declaration according to EU Directive 2014/68/EU
- Relevant operating instructions for attachments (e.g. pick up, temperature sensor, electronics)

## 2 Safety

### 2.1 Proper use

- Flowmeter solely for flow measurement of lubricating liquids that are chemically neutral and that do not contain gas or solid components.
- Flowmeters require operation with clean liquids. If coarse soiling, solid particles in the liquid or abrasive fine particles occur during operation, the flowmeter must be protected additionally by a correspondingly dimensioned operating filter in the pipe system.
- Use the flowmeter only within the operating limits specified on the rating plate and in the chapter "Technical data". Deviating operating data can result in damage to the flowmeter. If the operating data does not match the specifications on the rating plate, please contact the manufacturer.
- Strong changes in the flow rate (for example rapid shutdown, pulsations, etc.) cause marked pressure differences in the flowmeter and can damage the measuring unit. The pressure loss of the flowmeter must not exceed the values shown in the chapter "Technical data".

### 2.2 Foreseeable misuse

- Any use that extends beyond the proper use or any other use is misuse.
- The product is not suitable for pumping liquids outside the operational limits.
- Any bypassing or deactivation of safety equipment during operation is prohibited.

## 3 Identification

### 2.3 Obligations of the operator-owner

#### 2.3 Obligations of the operator-owner

The operator-owner is the person who operates the product commercially or permits a third party to use it and who bears the legal responsibility for the product, the protection of the personnel and third parties during its operation.

The product is used in industrial applications. The operator-owner is therefore subject to the statutory obligations concerning occupational health and safety.

In addition to the safety instructions in these instructions, the regulations on safety, accident prevention and environmental protection respectively valid for the range of application of the product are to be observed.

#### 2.4 Safety instructions

##### 2.4.1 Fundamental safety instructions



**The following safety instructions must be observed strictly:**

- Read these operating instructions carefully and observe them.
- Read the operating instructions for the electronic unit and the sensors carefully and observe them.
- Have work only carried out by qualified personnel / trained personnel.
- Wear personal protective equipment and work carefully.
- Pumped liquids can be subject to high pressure and can result in personal injury and damage to property in case of incorrect operation or damaged components.
- Pumped liquids can be hot, poisonous, combustible and caustic.
- Observe the associated data sheets and safety regulations when handling dangerous materials.
- Avoid skin contact with system parts carrying liquids at operating temperatures exceeding 60 °C.
- Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations. Neutralize residues.
- Keep the mounting surfaces, scaffolding, ladders, lifting platforms and tools clean in order to prevent slipping or stumbling.
- If pressurized or energized components are damaged, shut down the flowmeter immediately. Replace the components or flowmeter.

## 3 Identification

### 3.1 Type code

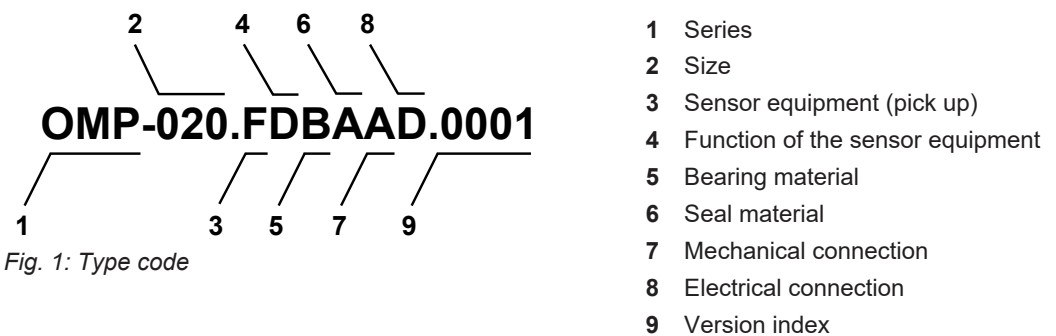


Fig. 1: Type code

Item	Designation	Description	
1	Series	OMP	Performance
2	Size		Corresponds to the diameter of the measuring screw large in [mm]
3	Sensor equipment (pick up)	E	BEG 45 + BEV 13
		F	BEG 47
		I	BEG 56
		X	Special design

Item	Designation	Description	
4	Function of the sensor equipment	A	Without flow direction recognition
		B	With flow direction recognition
		C	Without flow direction recognition, with temperature compensation
		D	With flow direction recognition, with temperature compensation
		X	Special design
5	Bearing material	B	Hybrid
6	Seal material	A	FPM (FKM)
		B	FFPM (FFKM)
		C	Low-temperature FPM
		D	EPDM
		X	Special design
7	Mechanical connection	A	Thread connection BSPP
		B	Flange connection DIN
		C	Thread connection NPT
		D	Flange connection ANSI
		E	Flange connection JIS
		X	Special design
8	Electrical connection	A	Loose cable end
		B	Cable gland junction box
		D	Fixing kit for display and processing unit
		E	Smart Solution version
		X	Special design
9	Version index		For internal administration

Tab. 2: Type code

### 3.2 Rating plate

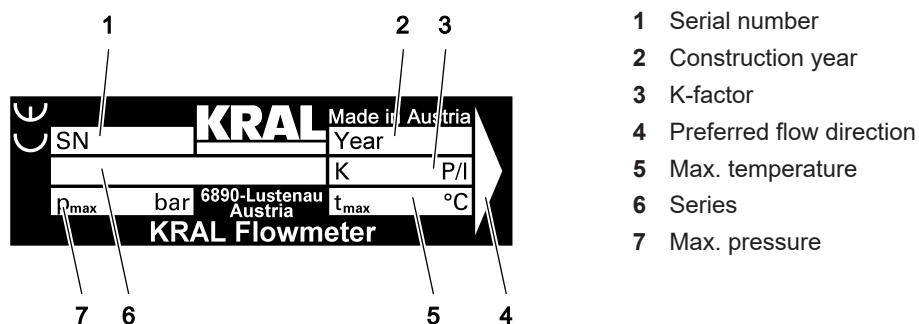


Fig. 2: Rating plate

## 4 Technical data

### 4.1 Operating limits

The values specified on the rating plate and the calibration certificate apply. The permissible operating limits of individual values influence each other so that every application is checked individually by the manufacturer when selecting the flowmeter.

If no operating data are provided by the orderer, standardized substitute operating data are used.

## 4 Technical data

### 4.2 Pressure pulsation

#### 4.2 Pressure pulsation

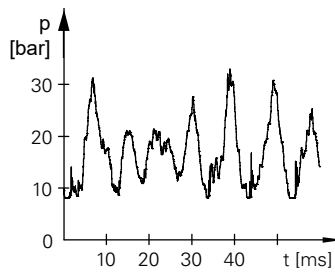


Fig. 3: Pressure pulses

Strong pressure pulsations in the system can reduce the service life of the flowmeter.

#### 4.3 Maximum values

The following table shows the respective maximum values that, however, may not occur simultaneously. In addition, the operating limits of the corresponding completion, of the sealing material and of the pick up must be observed.

Parameter	Unit	Size			
		13	20	32	52
<b>Flow rate</b>					
<input type="checkbox"/> $Q_{\max}$	[l/min]	15	45	150	525
<input type="checkbox"/> $Q_{\text{rated}}$	[l/min]	10	30	100	350
<input type="checkbox"/> $Q_{\min}$	[l/min]	0.1	0.3	1.0	3.5
<b>Max. pressure</b>	[bar]	40			
<b>Min. - max. temperature</b>	[°C]	-20 ... +200			
<b>Min.- max. viscosity</b>	[mm <sup>2</sup> /s]	1 – 1000000			
<b>Measuring chamber volume</b>	[ml/U]	1.65	6.25	25.6	112.8
<b>Speed</b>					
<input type="checkbox"/> $n (Q_{\max})$	[min <sup>-1</sup> ]	9120	7260	5850	4658
<input type="checkbox"/> $n (Q_{\text{rated}})$	[min <sup>-1</sup> ]	6060	4830	3900	3105
<input type="checkbox"/> $n (Q_{\min})$	[min <sup>-1</sup> ]	61	48	39	31
<b>Number of poles K1</b>		2			
<b>K factor K1</b>	[P/l]	1214	321	78	17.73
<b>Millilitres/pulse K1</b>	[ml/P]	0.824	3.12	12.8	56.4
<b>Pulse frequency</b>					
<input type="checkbox"/> $f1 (Q_{\max})$	[Hz]	304	242	195	155
<input type="checkbox"/> $f1 (Q_{\text{rated}})$	[Hz]	202	161	130	104
<input type="checkbox"/> $f1 (Q_{\min})$	[Hz]	2.0	1.6	1.3	1.0



#### 4.4 Substitute operating data

The following table shows standardised values for the flow rate, temperature and viscosity. These values can be used at the same time as maximum values without impairing the service life of the flowmeter. In addition, the operating limits of the corresponding completion, of the sealing material of the pick up and of the temperature sensor must be observed.

Parameter	Unit	Size			
		13	20	32	52
<b>Flow rate</b>					
□ $Q_{max}$	[l/min]	10	30	100	350
□ $Q_{rated}$	[l/min]	10	30	100	350
□ $Q_{min}$	[l/min]	0.2	0.6	2.0	7.0
<b>Max. pressure</b>	[bar]	40			
<b>Min. – max. temperature</b>	[°C]	-20 ... +125			
<b>Min. - max. viscosity</b>	[mm <sup>2</sup> /s]	1 – 200			


Tab. 3: Substitute operating data

#### 4.5 Sound pressure level

The sound pressure level of the flowmeters amounts to less than 70 dB(A).

#### 4.6 Dimensions and weights

##### 4.6.1 OMP with pipe thread connection

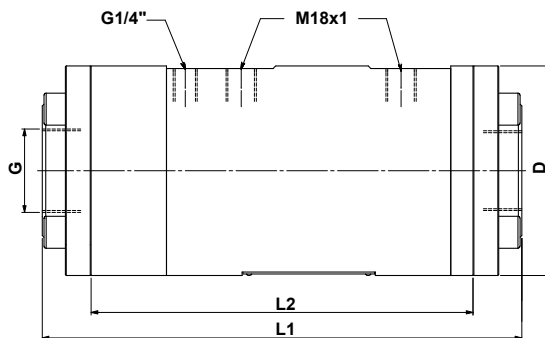

- G** Pipe thread
- M18x1** Pick up bore/connector attachment
- G1/4"** Temperature sensor hole
- D** Outer diameter
- L1** Total length
- L2** Length of the flowmeter without connections

Fig. 4: Dimensional drawing pipe thread connection


Parameter	Unit	Size			
		13	20	32	52
G	[inch]	1/2	3/4	1	1 1/2
Pressure stage	[bar]	40	40	40	40
D	[mm]	90	74	104	118
L1	[mm]	115	145	215	270
L2	[mm]	64	85	140	215
Weight	[kg]	3.4	3.5	11.0	18.0

Tab. 4: Dimensions and weights – pipe thread connection

## 5 Function description

### 5.1 Structure

#### 4.6.2 OMP with flange connection

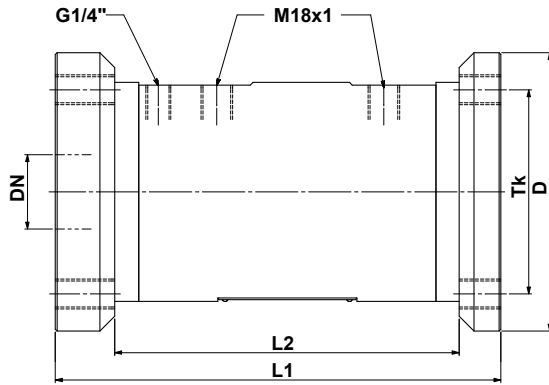

<b>DN</b>	Flange nominal diameter
<b>M18x1</b>	Pick up bore/connector attachment
<b>G1/4"</b>	Temperature sensor hole
<b>D</b>	Outer diameter
<b>L1</b>	Total length
<b>L2</b>	Length of the flowmeter without connections
<b>TK</b>	Pitch circle

Fig. 5: Dimensional drawing DIN flange connection

Parameter	Unit	Size			
		13	20	32	32
DN		15	20	25	32
Pressure stage	[bar]	40	40	40	40
D	[mm]	95	105	115	140
L1	[mm]	115	125	180	190
L2	[mm]	64.0	85.0	140.0	140.0
TK	[mm]	65	75	85	100
Weight	[kg]	3.7	5.0	11.2	13.5

Tab. 5: Dimensions and weights – DIN flange connection

## 5 Function description

### 5.1 Structure

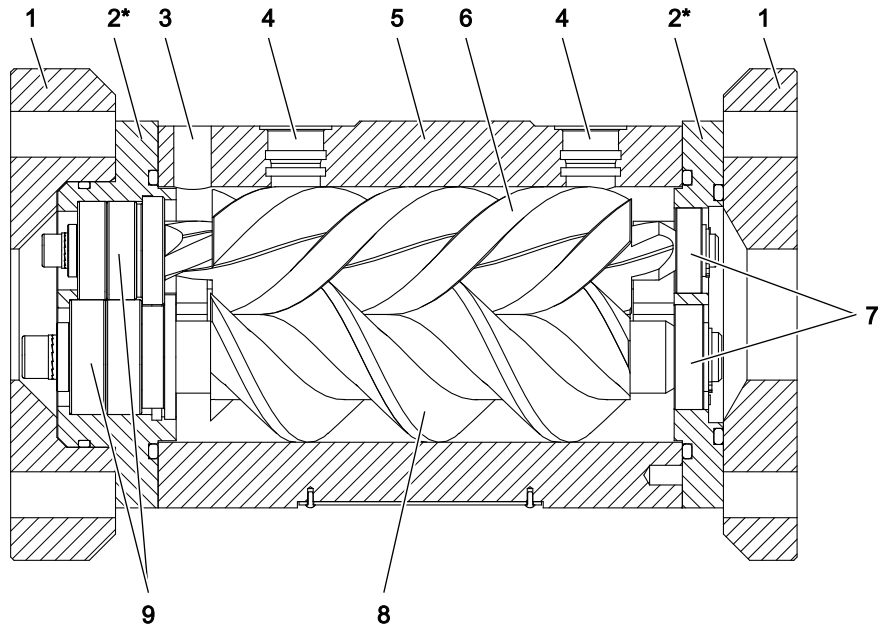


Fig. 6: Flowmeter structure

<b>1</b>	Connection	<b>6</b>	Small measuring screw
<b>2</b>	Bearing cover	<b>7</b>	Measuring housing
<b>3</b>	Temperature sensor hole	<b>8</b>	Large measuring screw
<b>4</b>	Pick up hole	<b>9</b>	Ball bearing fixed bearing end
<b>5</b>	Measuring housing	<b>*</b>	for OMP 52 only

## 5.2 Functional principle

Flowmeters belong to the group of rotating displacement meters as screw meters. The pumped liquid makes the measuring unit rotate. The displacement effect results from the continuous filling, axial displacement and discharge of the volumes that are formed by the measuring housing and measuring unit. The measured pumped liquid flows around and lubricates all the rotating parts. Thanks to the displacement principle, the flowmeter does not require inlet sections and smoothing sections at the feed line and outlet.

Depending on the customer requirements, the flowmeters can be equipped with suitable end connections for connection to various flanges.

## 5.3 Rolling bearings

Thanks to precision rolling bearings the measuring unit operates contact-free and with low friction in the flowmeter housing.

The following bearings are used depending on the size:

- Single-row deep-groove ball bearings
- Angular-contact ball bearings arranged in pairs

## 5.4 Signal generation

The measuring pulses are sampled by the pick up directly at the screw and - depending on the size and operating point - result in a certain number of pulses per volume unit of flow. This device-specific characteristic is called the K factor (unit: pulses/litre) and is specified on the rating plate as well as the enclosed calibration certificate.

Possible formats of the signals are:

- PNP
- NAMUR

The installation method of the pick up allows for assembly without contact with the liquid to be measured. Two different pick ups are employed, depending on the application (standard, or for use in areas where there is an explosion hazard):

- Pick ups based on the Hall effect
- Inductive pick up

## 5.5 Linearization

The calibration certificate of the flowmeter contains a mean K-factor that has been determined for the flow range 10:1 and that can therefore be used across a wide flow range. However, the K-factor shows slightly different values at different flow rates. These are also documented in the enclosed calibration certificate. If highest measuring precision is required, it is therefore advisable, especially at strongly varying flow rates, to take these different values into consideration by means of a "Linearization". The K-factors are therefore stored in a suitable electronic unit by means of several interpolation values of the flow rate. The K-factor relevant for the flow rate being measured is then determined by means of linear interpolation between the two nearest interpolation values.

The viscosity dependence of the K-factors must also be taken into account. These are determined during calibration at a viscosity of approximately 4.2 mm<sup>2</sup>/s. The influence of the flow rate on the K-factor decreases at higher viscosities so that the mean K-factor can then also be used in a considerably larger flow range without noteworthy errors.

## 5.6 Temperature compensation

If the flowmeter is equipped additionally with a temperature sensor, the current density of the flowing liquid can be calculated from the measured values by using a density table stored in the processing unit. This allows standardised volume measurement in which the readings are converted to a reference temperature that can be selected freely. This ensures that measuring errors caused by changes in the density due to temperature variations are avoided.

## 6 Transportation, storage

### 5.7 Recognition of flow direction

#### 5.7 Recognition of flow direction

Systems with a changing flow direction require the usage of a second pick up to recognize the change in direction. In the case of systems with pressure pulsation a reversal of the flow direction can also occur briefly.

The flow direction can be determined by means of the additional phase-shifted signal and the incremental encoder positions available in the KRAL electronic unit and then taken into account for the calculation of the total values.

#### 5.8 Junction box

For the flowmeter the manufacturer offers a junction box. This simplifies the electrical connection of the various sensors ↪ Accessories, Page 34.

## 6 Transportation, storage

### 6.1 Dangers during transportation



#### The following safety instructions must be observed:

- Have all work only carried out by authorized transport personnel.
- Use intact and correctly dimensioned hoisting equipment.
- Ensure that the means of transport is in a flawless state.
- Ensure that the centre of gravity of the load is taken into consideration.
- Do not stand under raised loads.

### 6.2 Dangers during storage



#### The following safety instructions must be observed:

- Observe the storage conditions.

### 6.3 Unpacking and checking the state of delivery

1. ➤ Upon delivery unpack the flowmeter and check it for damage during transportation.
2. ➤ Report damage during transportation immediately to the manufacturer.
3. ➤ Store the supplied sensors for the installation.
4. ➤ Dispose of packaging material in accordance with the locally applicable regulations.

### 6.4 Transporting flowmeters



#### **WARNING**

##### **Risk of injury and damage to equipment through falling and toppling parts.**

- ▶ Use intact and correctly dimensioned hoisting equipment in accordance with the total weight to be transported.
- ▶ Select the lift points for the hoisting equipment in accordance with the centre of gravity and the weight distribution.
- ▶ Use at least two load ropes.
- ▶ Do not stand under raised loads.

#### **ATTENTION**

##### **Damage to equipment through improper transportation.**

- ▶ Protect the flowmeter against damage, heat, sunlight, dust and moisture.

Requirement:

- ✓ Sufficiently dimensioned hoisting equipment
- ✓ The used hoisting equipment corresponding to the local rules and regulations for the prevention of accidents

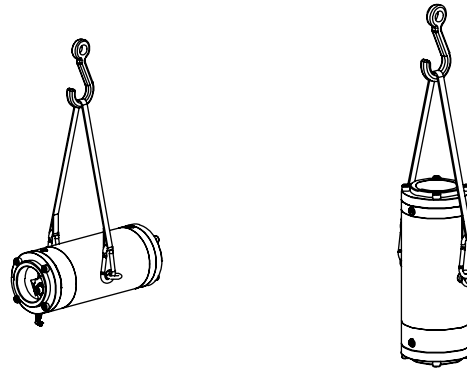


Fig. 7: Fastening of hoisting equipment - principle diagram

1. ► Fasten hoisting equipment on the flowmeter.
2. ► Transport the flowmeter to the installation location or temporary storage site.

## 6.5 Storing the flowmeter

As a result of the calibration, the internal components of the flowmeter are wetted with calibration liquid that has a preservative effect. In addition, a special anticorrosive agent is sprayed onto the interior of the flowmeter before being dispatched. The connections of the flowmeter are fitted with protective covers. The preservation applied at the factory will protect the flowmeter for up to six weeks, if it is stored in a dry and clean location. The manufacturer optionally offers a long-term preservation for storage times of up to 60 months. The flowmeter is additionally packed in hermetically sealing anti-corrosion paper.

### ATTENTION

**Damage to equipment and corrosion if stored improperly and during longer standstills.**

- Protect the flowmeter against damage, heat, sunlight, dust and moisture.
- Protect against corrosion during longer standstill.
- Observe measures for storing and preservation.

1. ► Store cool and dry and protect against sunlight.
2. ► Observe the information on preservation.

## 7 Preservation

### 7.1 Preservation table

Preservation has to be carried out additionally under the following conditions:

Type of delivery	Condition
Standard delivery	<input type="checkbox"/> Storage time exceeding six weeks <input type="checkbox"/> Unfavourable storage conditions such as high humidity, salty air, etc.
Delivery with long-term preservation	<input type="checkbox"/> Opened or damaged packaging

Tab. 6: Conditions for additional preservation

**Note** After a longer storage time the manufacturer recommends that you have the flowmeter recalibrated ↪ Maintenance, Page 22.

## 7 Preservation

### 7.2 Preserving the inner surfaces

#### 7.2 Preserving the inner surfaces

Personnel qualification:	<input type="checkbox"/> Trained personnel
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Preservative (acid-free and resin-free oil)

1. ➤ Close a connection of the flowmeter with a blind flange.
2. ➤ Position the flowmeter vertically.
3. ➤ Fill non-corrosive and resin-free oil into the pressure connection up to approx. 1 cm under the flange at the top while turning the measuring unit slowly, so that the measuring unit is also wetted.
4. ➤ Close the upper connection with a blind flange.
5. ➤ After about six months storage check the filling level of the oil and if necessary top up.

#### 7.3 Preserving the outer surfaces

Personnel qualification:	<input type="checkbox"/> Trained personnel
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Castrol Rustilo DWX 33 or other preservative offering comparable protection

1. ➤ Paint or spray the preservative onto all plain and unpainted parts.
2. ➤ At intervals of about six months check the preservation and if necessary repeat.

#### 7.4 Removing the preservation

Personnel qualification:	<input type="checkbox"/> Trained personnel
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Solvent <input type="checkbox"/> Collection tank



#### CAUTION

##### Risk of injury through discharging preservative.

- ▶ Wear personal protective equipment during all the work.
- ▶ Collect any discharging preservative safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.

1. ➤ Remove one of the blind flanges.
2. ➤ Drain the flowmeter, collecting the preservative oil in a suitable vessel.
3. ➤ Remove the second blind flange.
4. ➤ Either remove the residual oil with solvent or flush the flowmeter with pumped liquid.

## 8 Installation, removal

### 8.1 Dangers during installation



**The following safety instructions must be observed strictly:**

- Have all work only carried out by authorized qualified personnel.
- Do not take apart the flowmeter.
- Do not remove the protective caps from the dry sleeves.

### 8.2 Dangers during removal



**The following safety instructions must be observed strictly:**

- Have all work only carried out by authorized qualified personnel.
- Ensure that the collection tank for emitted liquids is sufficiently large.
- Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.
- Place the protective caps onto dry sleeves.

### 8.3 Installing the flowmeter

#### 8.3.1 Protecting the flowmeter against soiling

**Note** Soiling in the pipe system impairs the service life of the flowmeter. In order to protect the flowmeter against soiling the manufacturer generally recommends the installation of an operating filter.

Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots

## ATTENTION

### Damage to device through solid particles in the pipe system.

- ▶ During welding work attach protective covers in front of the connecting flanges.
- ▶ Ensure when welding that welding beads and abrasive dust cannot get into the pipe system and the flowmeter.
- ▶ Ensure that an operating filter is installed when the pipe system is flushed and cleaned using the flowmeter.

1. ▶ Install the operating filter in front of the flowmeter, mesh width ↗ Commissioning, Page 20.
2. ▶ After the connecting work clean the pipe system thoroughly ↗ Commissioning, Page 20.

## 8 Installation, removal

### 8.3 Installing the flowmeter

#### 8.3.2 Installation types

Flowmeters can be operated in different installation positions.

Both flow directions are possible. The preferred flow direction is indicated on the rating plate by means of an arrow → Identification, Page 6.

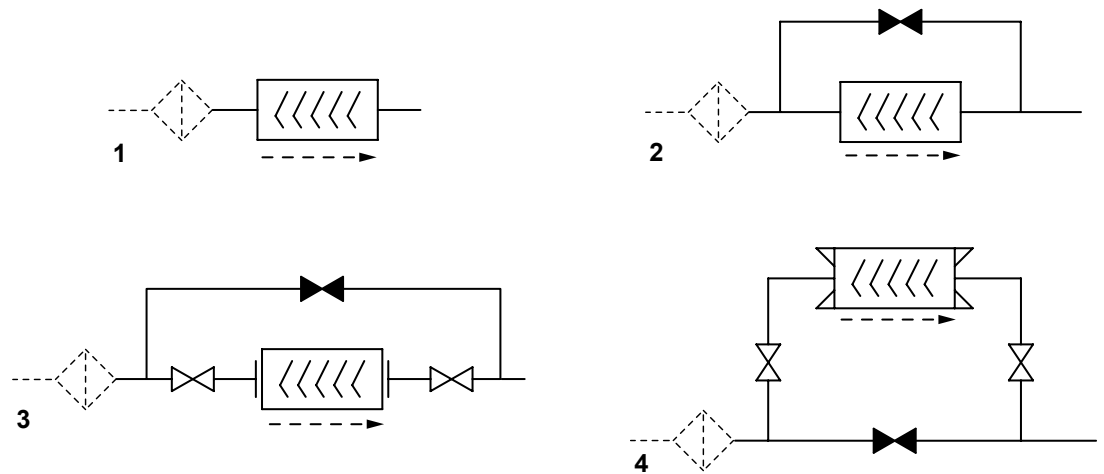


Fig. 8: Installation types


The arrow with dashed line identifies the preferred flow direction when an operating filter is used.

Installation type	Properties
<b>1</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Without bypass</li> <li><input type="checkbox"/> With or without operating filter</li> </ul>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Small space requirements</li> <li><input type="checkbox"/> Flowmeter can only be disassembled by interrupting operation</li> </ul>
<b>2</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Manual bypass</li> <li><input type="checkbox"/> With or without operating filter</li> </ul>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Manual opening of the bypass</li> <li><input type="checkbox"/> Flowmeter can only be disassembled by interrupting operation</li> </ul>
<b>3</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Bypass with 3 shut-off valves for flange connection</li> <li><input type="checkbox"/> With or without operating filter</li> </ul>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Flowmeter can be disassembled without interrupting operation</li> </ul>
<b>4</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Bypass with 3 shut-off valves for pipe thread connection</li> <li><input type="checkbox"/> With or without operating filter</li> </ul>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Flowmeter can be disassembled without interrupting operation</li> <li><input type="checkbox"/> Minimal higher pressure loss</li> </ul>

Tab. 7: Installation types

#### 8.3.3 Installation recommendation

In order to avoid measuring errors observe the following recommendations of the manufacturer when installing the flowmeter in the pipe system.

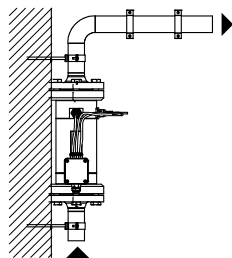


##### Preferred installation variant:

- Install the flowmeter vertically.
- Route the flow from the bottom upwards.




### Recommendations for alternative installation variants

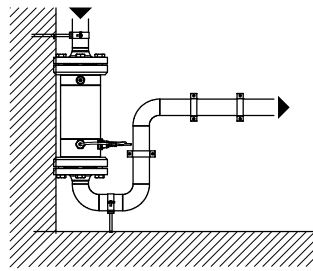


#### Alternative installation variant:

- Install the flowmeter vertically.
- Route the flow from the top downwards.
- Route the piping at the outlet upwards.

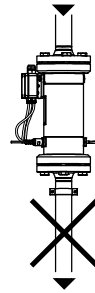


#### Source for measuring error:

- Lack of counter-pressure at the outlet through downv

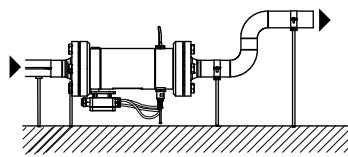


#### Alternative installation variant:

- Install the flowmeter horizontally.
- Route the piping at the outlet upwards.

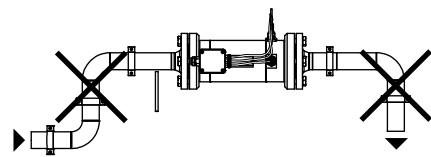


#### Source for measuring error:

- Formation of an air pocket through the installation o

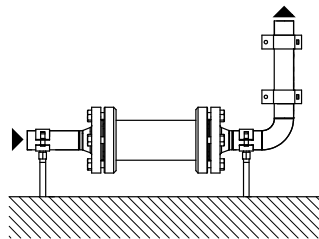

#### Recommendation:

- Carefully vent the pipe system during commissioning.
- Gas inclusions in the pipe system

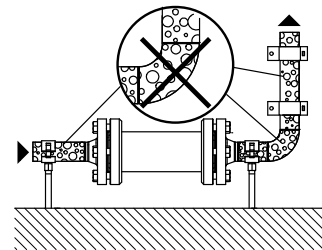

#### Source for measuring error:

- Gas inclusions in the pipe system

### 8.3.4 Installing the flowmeter

Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots

## ATTENTION

### Measuring error through air pocket in the flowmeter.

- During installation ensure that the flowmeter is not installed at the highest point in the pipe system.

## ATTENTION

### Measuring error through a lack of counter-pressure.

- During the installation ensure that the piping at the outlet of the flowmeter runs upwards or that the pipe diameter is reduced through a reducer so that the liquid generates a counter-pressure.

- During the installation of the flowmeter observe the recommendations for the installation variants and avoid error sources.

#### 8.4 Removing the flowmeter

Personnel qualification:	<input type="checkbox"/> Fitter <input type="checkbox"/> Electrician
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Face protection <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Collection tank



#### DANGER

##### Risk of death resulting from electric shock.

- ▶ Ensure that the electrical power supply is de-energized and is secured against being switched back on.
- ▶ Observe the operating instructions of the electrical components.



#### DANGER

##### Risk of death through emitted pumped liquid.

Pumped liquids can be hot, poisonous, combustible and caustic and can spray out under high pressure.

- ▶ Wear personal protective equipment during all the work. Ensure face protection.
- ▶ Before beginning work, let the flowmeter cool down to the ambient temperature.
- ▶ Ensure that the flowmeter is depressurized.
- ▶ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.

Requirement:

- ✓ System switched off
  - ✓ Disconnect the system from the power supply and secure it against being switched back on
  - ✓ Flowmeter cooled down to the ambient temperature
1. ▶ Drain the pipe system or divert the pumped liquid via bypass.
  2. ▶ Remove the flowmeter.
  3. ▶ Attach protective covers in front of connecting flanges.
  4. ▶ For storage of the flowmeter ↪ Transportation, storage, Page 12 and ↪ Preservation, Page 13.

## 9 Connection

### 9.1 Dangers during connection work



#### The following safety instructions must be observed strictly:

- Have all the work on the flowmeter and pipe system only carried out by authorized qualified personnel.
- Ensure that solid particles cannot get into the flowmeter and pipe system.
- Ensure that mechanical connections are mounted free of stress.
- Observe the tightening torques.
- Have all the work on the electrical equipment only carried out by electricians.
- Before beginning work on the flowmeter ensure that the electrical power supply is deenergized and is secured against being switched back on.
- If the insulation of the electrical cables or wires is damaged, disconnect the power supply immediately.
- The connecting line of the pick up/temperature sensor connection is to be shielded and laid separately from the supply lines.

### 9.2 Connecting the flowmeter to the pipe system

Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Protective helmet <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Hoisting equipment

#### ATTENTION

##### Damage to device through mechanical stress.

- ▶ Ensure that the flowmeter is mounted free of mechanical stresses in the pipe system.
- ▶ Observe the tightening torques.

#### ATTENTION

##### Damage to device through solid particles in the pipe system.

- ▶ During welding work attach protective covers in front of the connecting flanges.
- ▶ Ensure when welding that welding beads and abrasive dust cannot get into the pipe system and the flowmeter.
- ▶ Ensure that an operating filter is installed when the pipe system is flushed and cleaned using the flowmeter.


#### ATTENTION

##### Damage to device when the pipe threading is screwed in too far.

- ▶ Observe the thread length of the flowmeter.
- ▶ Use a standard cutting ring screw connection.

**Note** The screw-in length of the piping may not exceed the threaded length of the flowmeter, since the flow cross-section is narrowed and internal components can be damaged.

1. ▶ Remove the protective covers and store them.
2. ▶ Place the piping in position and support the weight of the piping.
3. ▶ Install the flowmeter stress-free into the pipe system. In the process take the preferred flow direction into account and ensure that the connections of the pick up remain accessible.

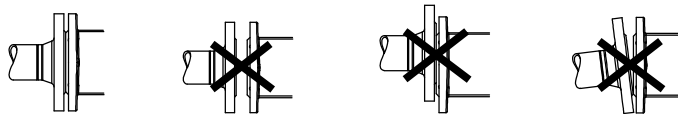

4. ▶ Check the linear offset, lateral offset and angular offset and correct if necessary. If the screws tighten easily, this is a sure sign that the installation is stress-free.
5. ▶ Tighten the connecting screws crosswise with torque ↪ Appendix, Page 37.

### 9.3 Connecting the pick up and temperature sensor

- ▶ When connecting the pick up, temperature sensor and electronic unit, observe the relevant operating instructions.

### 10 Operation

#### 10.1 Dangers during operation



The following safety instructions must be observed strictly:

- Have all work only carried out by authorized qualified personnel.
- Ensure that the flowmeter is only operated within the operating limits.
- Ensure that during cooling down or heating up the flowmeter is only subjected to slow temperature changes.
- Ensure that existing safety equipment is not bypassed or activated during operation.

#### 10.2 Commissioning

##### 10.2.1 Cleaning the pipe system

**Note** Soiling in the pipe system impairs the service life of the flowmeter. In order to protect the flowmeter against soiling the manufacturer generally recommends the installation of an operating filter.

**Note** Through the calibration, the internal components of the flowmeter are wetted with calibration liquid. If required, use an appropriate solvent to flush the flowmeter.

### ATTENTION

**Damage to device through usage of an incorrect flushing liquid.**

- ▶ Under no circumstances may water or superheated steam be used to flush the pipe system.

—▶ **Flushing via bypass:** Close the shut-off devices before and after the flowmeter.

- or -

—▶ **Flushing via flowmeter:** Install the operating filter in front of the flowmeter, while observing the mesh width of the operating filter, see the following table.

The operating filter mesh width is based on the size of the flowmeter.

Parameter	Unit	Size			
		13	20	32	52
Max. mesh width	[mm]	0.10	0.10	0.25	0.25

Tab. 8: Operating filter mesh width

##### 10.2.2 Checking the function

1. —▶ Check the flow direction of the flowmeter.
2. —▶ Check the installation and installation position of the pick up and of the temperature sensor.
3. —▶ Check leaks at the pipe thread/connecting flange.
4. —▶ Check the electrical installation. Observe the operating instructions for pick up and electronic unit.
5. —▶ Check the power supply. Observe the operating instructions for pick up and electronic unit.

##### 10.2.3 Commissioning the flowmeter

### ATTENTION

**Increased wear and/or blockade through solid particles or abrasive fine particles in the liquid.**

- ▶ Protect the flowmeter through correspondingly dimensioned operating filters in the pipe system.

### ATTENTION

**Measuring error when the pressure drops below the minimum pressure outlet at the outlet.**

- ▶ Ensure that sufficient counter-pressure exists at the outlet by routing the piping upwards.

## ATTENTION

### Measuring error through gas inclusion in the pipe system.

- ▶ Before commissioning, make sure that the flowmeter is filled.
- ▶ Vent the pipe system.

#### Requirement:

- ✓ The ambient conditions correspond to the operating data
  - ✓ Flowmeter installed correctly in the pipe system ↪ Installation, removal, Page 15
  - ✓ Flowmeter connection to the pipe system is stress-free
  - ✓ Pipe system is free of impurities
  - ✓ Pipe system vented
  - ✓ Shut-off devices in the feed line and outlet opened
- ▶ Switch on the measuring system.
- ⇒ The flowmeter measures when the pick up generates a signal.

## 10.3 Decommissioning

### 10.3.1 Switching off the flowmeter

## ATTENTION

### Damage to the measuring unit.

In the case of strong changes to the flow rate (for example, rapid shutdown, pulsations, etc.) there is a danger of excessive pressure differences.

- ▶ Ensure that the pressure loss of the flowmeter does not exceed the values specified on the rating plate or the substitute operating data.

—▶ Ensure that the pressure loss of the flowmeter does not exceed the values specified on the rating plate or the standardised substitute operating data.

- ⇒ When the flow through the flowmeter is stopped, the generation of the signal stops automatically. No further measures are required to switch off.

## 10.4 Recommissioning

### 10.4.1 Recommissioning the flowmeter

## ATTENTION

### Damage to device through hard, gummy or crystallized pumped liquid in the flowmeter.

- ▶ Before recommissioning, ensure that there is no hard, gummy or crystallized pumped liquid in the flowmeter.

#### Requirement:

- ✓ The ambient conditions correspond to the operating data
  - ✓ Flowmeter connection to the pipe system is stress-free
  - ✓ Pipe system is free of solid particles
  - ✓ Pipe system vented
  - ✓ Shut-off devices in the feed line and outlet opened
- ▶ Switch on the system.
- ⇒ The flowmeter is ready to operate.

## 11 Maintenance

### 11.1 Required maintenance

## 11 Maintenance

### 11.1 Required maintenance

Flowmeters are fundamentally maintenance-free. Under observance of the operating limits ↘ Technical data, Page 7, no significant change in the characteristics could be established, even after years of use in many cases. Stresses lying clearly above the rated flow rate can, however, result in excessive wear. In the case of liquids with higher abrasiveness (for example heavy fuel oil with catalyst residues, plastic components with fillers, etc.) strongly accelerated wear can occur in the flowmeter.

**Note** In cases of doubt the manufacturer recommends already carrying out the first inspection after twelve weeks operation time.

### 11.2 Maintaining flowmeters

The following table lists signs of progressive wear of individual elements of the flowmeter:

Finding	Cause	Elimination
Increased running noises	Incipient damage to bearing	—▶ Replace the bearing.
Leakage	Damage to sealing	—▶ Replace the seals or dry sleeve.
Measured values not realistic	↘ Troubleshooting, Page 29	—▶ ↘ Troubleshooting, Page 29

Tab. 9: Check table for required maintenance

Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Face protection <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots



### **WARNING**

#### **Risk of injury through emitted pumped liquid.**

Pumped liquids can be hot, poisonous, combustible and caustic.

- ▶ Wear personal protective clothing during all the work. Ensure face protection.
- ▶ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.

1. ▶ Check the flowmeter visually and acoustically every four weeks.
2. ▶ Check for signs of wear as listed in the table above and eliminate the cause.

### 11.3 Recalibration of the flowmeter

In order to maintain the high measuring precision of the flowmeter, the manufacturer recommends carrying out the first recalibration after about one year of operation. The results reveal any wear starting on the measuring unit. The interval at which recalibrations are actually required depends strongly on the operating conditions of the flowmeter.

The manufacturer provides the factory calibration as standard. If higher requirements are placed on the flowmeter, accredited calibration in accordance with EN/ISO/IEC 17025 is also possible.

## 12 Servicing

### 12.1 Dangers during servicing



The following safety instructions must be observed strictly:

- Have all work only carried out by authorized qualified personnel.
- To ensure the measuring precision, the measuring unit may only be replaced by the manufacturer.
- Before beginning work, let the flowmeter cool down slowly to the ambient temperature. Avoid rapid temperature changes.
- Pumped liquids can be hot, poisonous, combustible and caustic.
- Observe the tightening torques ↗ Appendix, Page 37.
- Observe the operating instructions and data sheets of the sensors.


### 12.2 Replacing seals and ball bearings

#### 12.2.1 Removing seals and ball bearings OMP 13


Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Extractor

Requirement:

- ✓ Flowmeter removed from system
- ✓ Pick up inserts removed

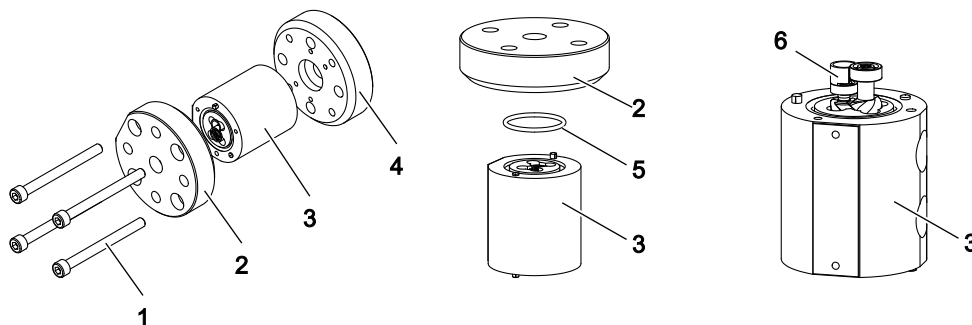

1. ➤ Remove the socket screws **1**, take off the flanges **2** and **4**.
2. ➤ Remove the O-rings.
3. ➤ Pull the spacer sleeve **6** together with the screw set out of the measuring housing **3**.

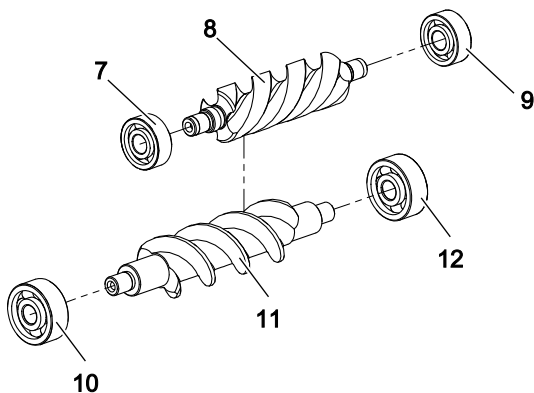


4. ➤ Pull the ball bearings **7**, **9**, **10** and **12** off the screws by using the extractor.
5. ➤ Clean all the parts using a suitable detergent.

## 12 Servicing

### 12.2 Replacing seals and ball bearings


#### 12.2.2 Installing seals and ball bearings OMP 13

Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Torque wrench

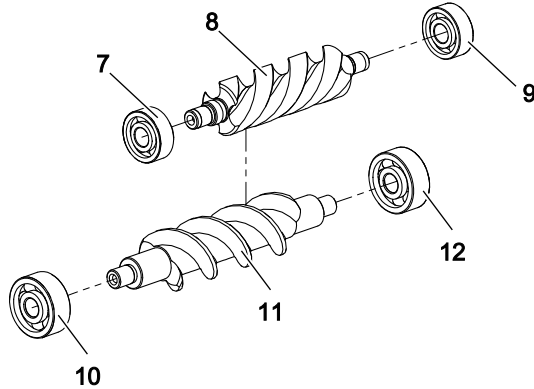

1. ➤ Press ball bearings **10** and **12** onto the large measuring screw **11** and ball bearings **7** and **9** onto the small measuring screw **8**.

**Note:** Press on the ball bearings only via the inner ring.

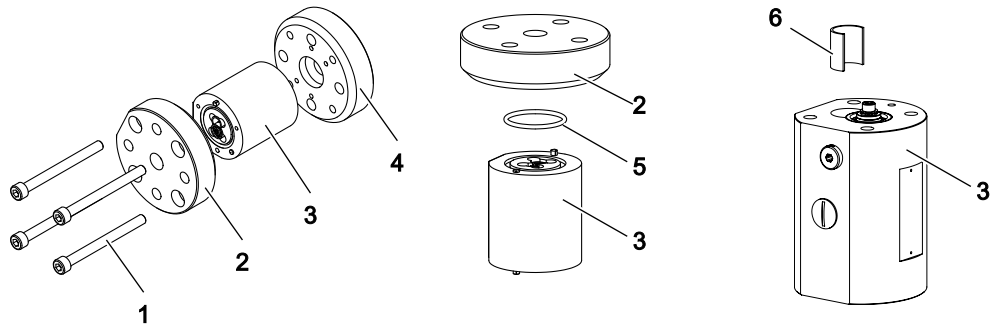

2. ➤ Insert the O-rings on both sides into the measuring housing **3**.
3. ➤ Place the flange **4** onto the measuring housing **3**.
4. ➤ Slide the screw set into the measuring housing **3**. Slide the spacer sleeve **6** into the hole of the small measuring screw **8**.
5. ➤ Place the flange **2** onto the measuring housing **3**.
6. ➤ Pretension the oiled socket screws **1** crosswise and tighten,


#### 12.2.3 Removing the seals and ball bearings OMP 20/OMP 32

Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Extractor


#### Requirement:

- ✓ Flowmeter removed from system
- ✓ Pick up inserts removed



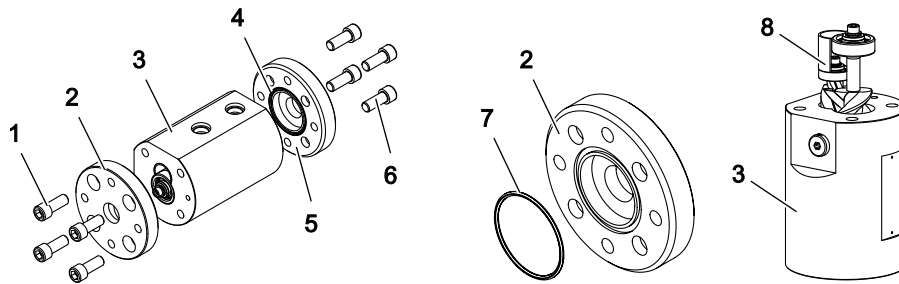


1. ➤ Remove the socket screws **1** and **6**, take off the flanges **2** and **5**.
2. ➤ Remove the O-rings **4** and **7**.
3. ➤ Pull the spacer sleeve **8** together with the screw set out of the measuring housing **3**.

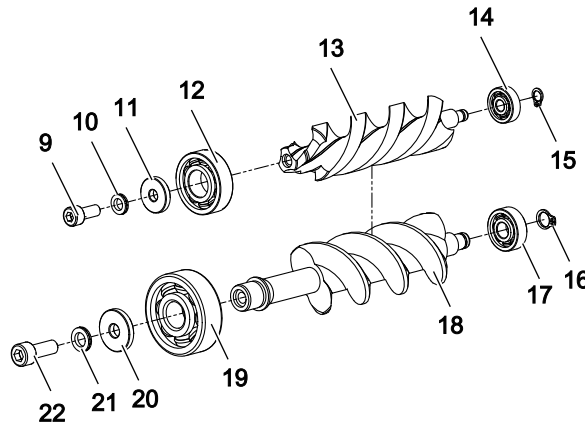

4. ➤ Remove the circlips **15** and **16** from the large measuring screw **18** and small measuring screw **13**.
5. ➤ Unscrew the socket screws **22** and **9** and remove the wedge lock washers **21**, **10** and supporting rings **20** and **11**.
6. ➤ Pull the ball bearings **12**, **19**, **17** and **14** off the screws by using the extractor.
7. ➤ Clean all the parts using a suitable detergent.

**12.2.4 Installing seals and ball bearings OMP 20/OMP 32**

Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Torque wrench <input type="checkbox"/> Threadlocker (for example Loctite 242)

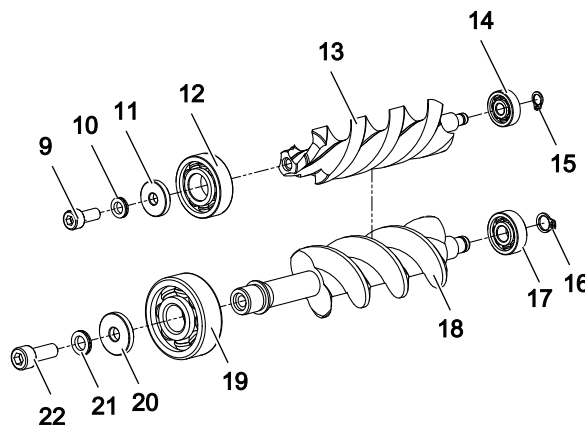


1. ➤ Press ball bearings **17** and **19** onto the large measuring screw **18** and ball bearings **12** and **14** onto the small measuring screw **13**.  
**Note:** Press on the ball bearings only via the inner ring.

## 12 Servicing

### 12.2 Replacing seals and ball bearings

2. ➤ Pull the wedge lock washers **10** and **21** and supporting rings **11** and **20** onto the socket screws **9** and **22**.  
**Note:** Ensure the correct positioning of the wedge lock washers (wedge on wedge),
3. ➤ Apply threadlocker to the socket screws **9** and **22**, and install and tighten them on the large measuring screw **18** and small measuring screw **13** with mounted washers,
4. ➤ Install the circlips **15** and **16** on the floating bearing end.

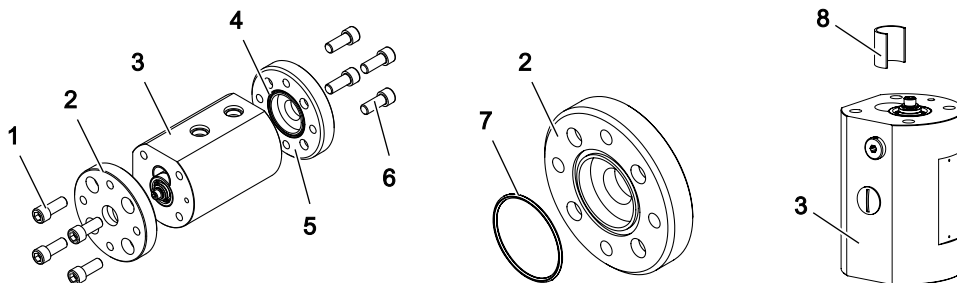


5. ➤ Insert the O-rings **7** and **4** into flanges **2** and **5**.
6. ➤ Place the flange **5** on the measuring housing **3**.
7. ➤ Pretension the oiled socket screws **6** crosswise and tighten.
8. ➤ Slide the screw set into the measuring housing **3**. Slide the spacer sleeve **8** into the hole of the small measuring screw **13**,
9. ➤ Place the flange **2** onto the measuring housing **3**.
10. ➤ Pretension the oiled socket screws **1** crosswise and tighten,

#### 12.2.5 Removing seals and ball bearings OMP 52


Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Extractor <input type="checkbox"/> Plastic hammer

#### Requirement:


- ✓ Flowmeter removed from system
- ✓ Pick up inserts removed
- ✓ Completion consisting of socket screws **8** and **13**, flanges **9** and **12** and seals **10** and **11** removed.

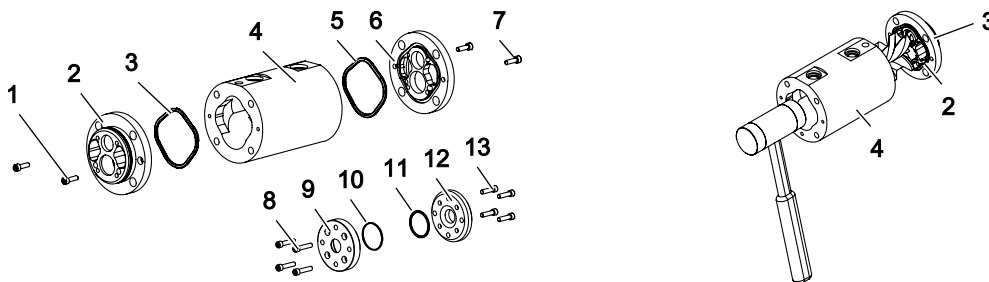

1. ➤ Remove the socket screws **1** and **7**, take off the bearing cover **6**. Remove the O-ring **5**,
2. ➤ Drive and pull the screw set together with the bearing cover **2** out of the measuring housing **4** using light blows of a plastic hammer,

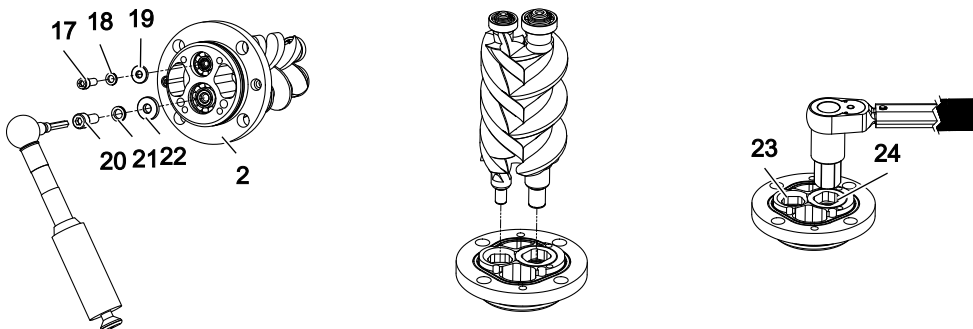


3. ➤ Unscrew the socket screw **20** with wedge lock washer **21** and supporting ring **22** from the large measuring screw **34**,
4. ➤ Unscrew the socket screw **17** with wedge lock washer **18** and supporting ring **19** from the small measuring screw **27**,
5. ➤ Pull out the screw set from the bearing cover **2** screws using an extractor.
6. ➤ Screw the threaded rings **23** and **24** out of the bearing cover **2**,

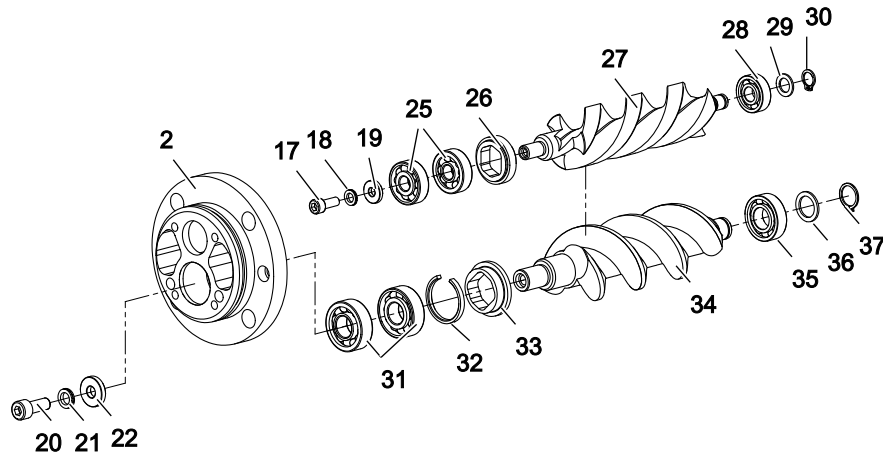


7. ➤ Take out the distance ring **32** and pull the ball bearings **31** and **25** off the bearing cover **2** using an extractor.
8. ➤ Remove the O-ring **3**.
9. ➤ Remove the circlips **30** and **37** and the support rings **29** and **36** from the measuring screws,
10. ➤ Pull the ball bearings **28** and **35** off the measuring screws using the extractor.
11. ➤ Clean all the parts using a suitable detergent.

### 12.2.6 Installing seals and ball bearings OMP 52


Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Torque wrench <input type="checkbox"/> Threadlocker (for example Loctite 242)

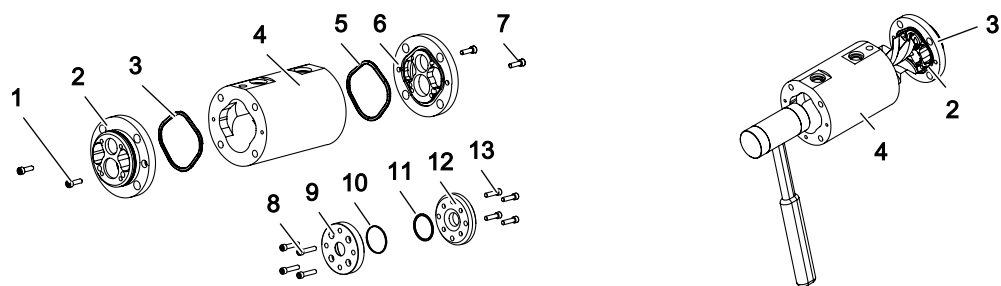


1. ➤ Insert the O-rings **3** and **5** into the bearing covers **2** and **6**.

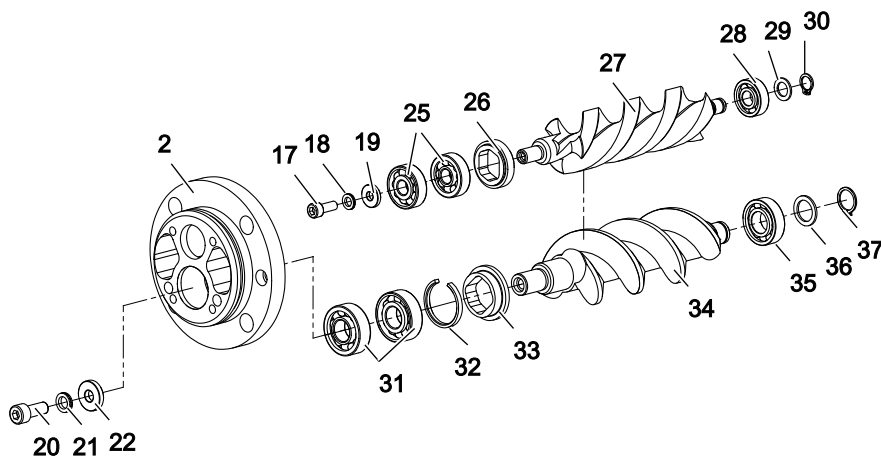

2. ➤ Press the ball bearings **25** and **31** into the bearing cover **2**.  
**Note:** Press in angular contact ball bearings in X arrangement. To avoid damaging the bearings, press in the ball bearings via the outer ring only.
3. ➤ Place the spacer ring **32** on the ball bearing **31**.
4. ➤ Press the ball bearing **35** onto the large measuring screw **34** and ball bearing **28** onto the small measuring screw **27**.  
**Note:** Press on the ball bearings only via the inner ring.

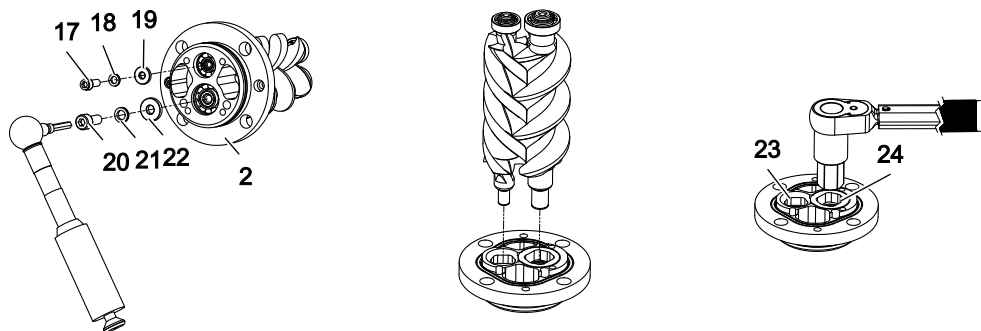

5. ➤ First screw the threaded ring **23** with spanner size 19 and tightening torque 60 Nm into the bearing cover **2**. Then screw the threaded ring **24** with spanner size 22 and tightening torque 52 Nm into the bearing cover **2**.
6. ➤ Press the measuring screws into the ball bearings in the bearing cover **2**.  
**Note:** To avoid damaging the bearings, support the respective inner ring when pressing in the measuring screws.
7. ➤ Pull the wedge lock washer **18** and supporting ring **19** onto the socket screw **17**.  
**Note:** Ensure the correct positioning of the wedge lock washer (wedge on wedge),
8. ➤ Apply threadlocker to the socket screw **17** and install and tighten it on the small measuring screw **27** with mounted washers,
9. ➤ Pull the wedge lock washer **21** and supporting ring **22** onto the socket screw **20**.
10. ➤ Apply threadlocker to the socket screw **20** and install and tighten it on the large measuring screw **34** with mounted washers.
11. ➤ Install the support rings **29** and **36** and the circlips **30** and **37** on the floating bearing end.

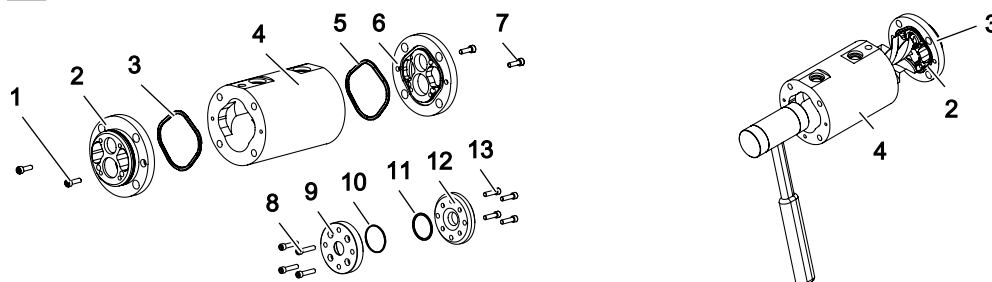

12. ➤ Place the bearing cover **6** on the measuring housing **4** and tighten the socket screws **7**.
13. ➤ Slide bearing cover **2** with ball bearing and pre-assembled measuring mechanism, consisting of screw set, into measuring housing **4**, tighten cap screws **1**.
14. ➤ Fit flange covers **9** and **12**, pre-tightening and tightening the oiled socket screws **8** and **13** crosswise.

## 13 Disposal

### 13.1 Dangers during disposal



The following safety instructions must be observed strictly:

- Neutralize residues.

### 13.2 Dismantling and disposing of the flowmeter

Personnel qualification:	<input type="checkbox"/> Fitter
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Face protection <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots
Aids:	<input type="checkbox"/> Solvents or industrial cleaners suitable for the pumped liquid <input type="checkbox"/> Collection tank



#### **WARNING**

**Danger of poisoning and environmental damage through residues.**

- ▶ Wear personal protective clothing during all the work. Ensure face protection.
- ▶ Before disposal collect any pumped liquid still present safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.
- ▶ Before disposing neutralize the residues.

Requirement:

- ✓ Flowmeter cooled down to the ambient temperature and disconnected from the pipe system
  - ✓ Flowmeter drained completely
  - ✓ Flowmeter placed at a location suitable for dismantling
1. ▶ Dismantle the flowmeter and disassemble it into its individual parts.
  2. ▶ Clean residues of the pumped liquid from the individual parts.
  3. ▶ Separate sealing elements made of elastomer from the flowmeter and dispose of them separately.
  4. ▶ Recycle iron parts.

## 14 Troubleshooting

### 14.1 Possible faults

Faults can have different causes. The following tables list the symptoms of a fault, the possible causes and measures for troubleshooting.

In the event of a fault please contact the manufacturer at [services@kral.at](mailto:services@kral.at).

ID	Fault
1	Flowmeter leaks
2	No flow rate
3	Flowmeter does not generate a pulse
4	Pressure loss too high
5	Readings unrealistic
6	Negative flow

## 14 Troubleshooting

### 14.2 Troubleshooting

#### 14.2 Troubleshooting

Fault identification							Cause	Remedy
1	-	-	-	-	-	-	Seal preload too low	<ul style="list-style-type: none"> <li>—&gt; Preload the screws.</li> </ul>
1	-	-	-	-	-	-	Seal damaged	<ul style="list-style-type: none"> <li>—&gt; Replace the seal.</li> <li>—&gt; Check the chemical resistance of the seal.</li> </ul>
-	2	3	-	5	-	-	Foreign particles in the liquid and/or flowmeter	<ul style="list-style-type: none"> <li>—&gt; Dismantle the flowmeter and clean it.</li> <li>—&gt; Use the commissioning filter.</li> </ul>
-	2	3	-	-	-	-	Inlet pressure too low	<ul style="list-style-type: none"> <li>—&gt; Increase the inlet pressure.</li> </ul>
-	-	-	4	-	-	-	Viscosity of the liquid too high	<ul style="list-style-type: none"> <li>—&gt; Increase the temperature. Observe the temperature range in the process.</li> </ul>
-	-	3	-	-	-	-	Flow rate too low	<ul style="list-style-type: none"> <li>—&gt; Increase the flow rate.</li> <li>-or-</li> <li>Use a flowmeter with a suitable size.</li> <li>-or-</li> <li>Use linearisation. Note the operating instructions of the electronic equipment.</li> </ul>
-	-	-	4	-	-	-	Flow rate too high	<ul style="list-style-type: none"> <li>—&gt; Reduce the flow rate.</li> <li>-or-</li> <li>Use a flowmeter with a suitable size.</li> </ul>
-	-	-	-	5	-	-	Airlocks	<ul style="list-style-type: none"> <li>—&gt; Deaerate the system and check for leaks.</li> </ul>
-	-	-	-	5	-	-	Outgassing	<ul style="list-style-type: none"> <li>—&gt; Increase the system pressure.</li> <li>—&gt; Reduce the temperature.</li> </ul>
-	-	-	-	5	6	-	Pulsations too high	<ul style="list-style-type: none"> <li>—&gt; Use another feed pump.</li> <li>—&gt; Carry out changes to the system.</li> </ul>
-	-	-	-	5	-	-	Back pressure too low	<ul style="list-style-type: none"> <li>—&gt; Increase the back pressure.</li> </ul>
-	-	-	-	5	6	-	Flow rate fluctuations too high	<ul style="list-style-type: none"> <li>—&gt; Ensure a continuous flow rate by taking suitable measures (using a different pump, valve, damper, etc.).</li> <li>-or-</li> <li>Smooth out the display. Note the operating instructions of the electronic equipment.</li> </ul>
-	-	3	-	5	-	-	Insufficient filling amount	<ul style="list-style-type: none"> <li>—&gt; Use a flowmeter with a suitable size.</li> <li>—&gt; Use a flowmeter from a suitable series.</li> </ul>
-	-	-	-	5	-	-	Significant deviations in operating data	<ul style="list-style-type: none"> <li>—&gt; Use a flowmeter from a suitable series.</li> <li>—&gt; Adapt the operating data to the flowmeter.</li> </ul>
-	-	-	4	5	-	-	Sluggishness through deposits	<ul style="list-style-type: none"> <li>—&gt; Disassemble the flowmeter and clean it carefully.</li> </ul>
-	2	3	-	-	-	-	Flow impaired at the system end	<ul style="list-style-type: none"> <li>—&gt; Check whether the fluid flows in the system (pump in operation, slide valve opened, etc.).</li> <li>—&gt; Check whether shut-off devices before and after the flowmeter are opened.</li> </ul>

Fault identification							Cause	Remedy
-	2	3	-	-	-	-	Flowmeter switched to bypass	
								→ Switch the flowmeter to through-flow.

Tab. 10: Fault table

## 15 Spare parts

### 15.1 Maintenance kits

#### 15.1.1 Maintenance kit OMP 13

**Note** The maintenance kit contains only the numbered parts and is only supplied complete.

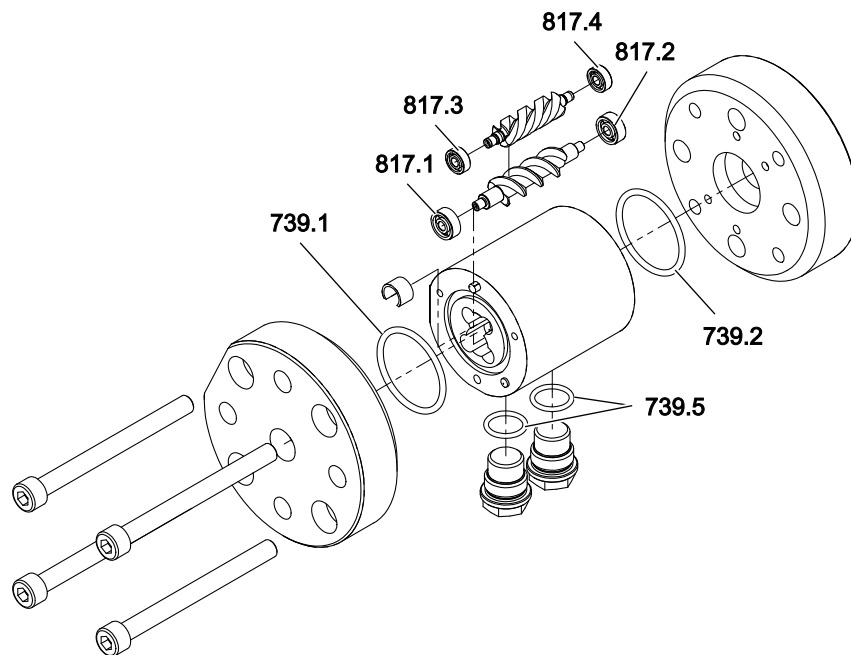


Fig. 9: Maintenance kit OMP 13

Qty.	Item no.	Part	Qty.	Item no.	Part
1	739.1	O-ring	1	817.2	Deep-groove ball bearing
1	739.2	O-ring	1	817.3	Deep-groove ball bearing
2	739.5	O-ring	1	817.4	Deep-groove ball bearing
1	817.1	Deep-groove ball bearing			

## 15 Spare parts

### 15.1 Maintenance kits

#### 15.1.2 Maintenance kit OMP 20/OMP 32

**Note** The maintenance kit contains only the numbered parts and is only supplied complete.

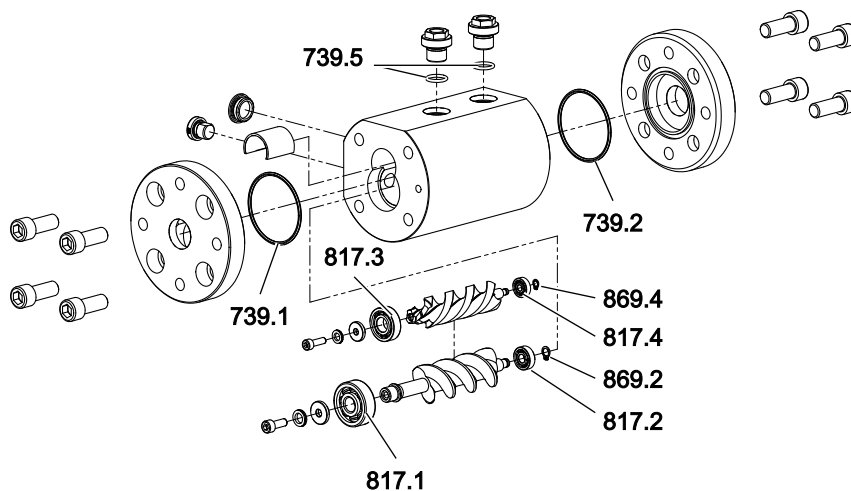


Fig. 10: Maintenance kit OMP 20/OMP 32

Qty.	Item no.	Part	Qty.	Item no.	Part
1	739.1	O-ring	1	817.3	Deep-groove ball bearing
1	739.2	O-ring	1	817.4	Deep-groove ball bearing
2	739.5	O-ring	1	869.2	Circlip
1	817.1	Deep-groove ball bearing	1	869.4	Circlip
1	817.2	Deep-groove ball bearing			



**15.1.3 Maintenance kit OMP 52**

**Note** The maintenance kit contains only the numbered parts and is only supplied complete.

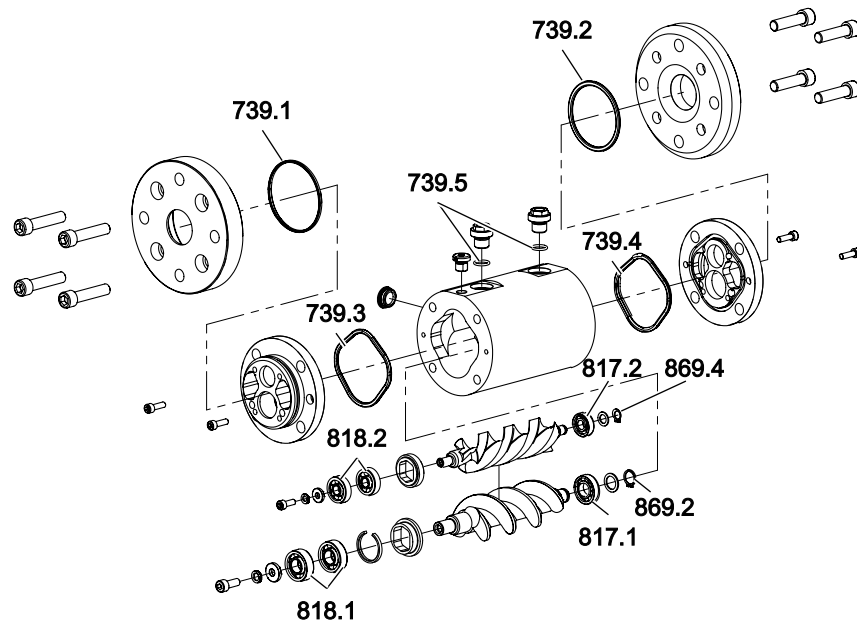


Fig. 11: Maintenance kit OMP 52

Qty.	Item no.	Part	Qty.	Item no.	Part
1	<b>739.1</b>	O-ring	2	<b>818.1</b>	Angular-contact ball bearing
1	<b>739.2</b>	O-ring	2	<b>818.2</b>	Angular-contact ball bearing
1	<b>739.3</b>	O-ring	1	<b>869.2</b>	Circlip
1	<b>739.4</b>	O-ring	1	<b>869.4</b>	Circlip
2	<b>739.5</b>	O-ring	1	<b>870.1</b>	Circlip
1	<b>817.1</b>	Deep-groove ball bearing	1	<b>870.2</b>	Circlip
1	<b>817.2</b>	Deep-groove ball bearing			

**16 Accessories**

**16.1 Trace heating**

Installation of a factory-fitted heater is not intended. Optionally, flowmeters of the OMP series can be equipped with a trace heating at the customer side. The manufacturer recommends heating systems for high-viscosity liquids that do not flow sufficiently if not heated, since this can result in bearing damage and destruction of the unit.

Contact the manufacturer before installing trace heating provided by the customer.

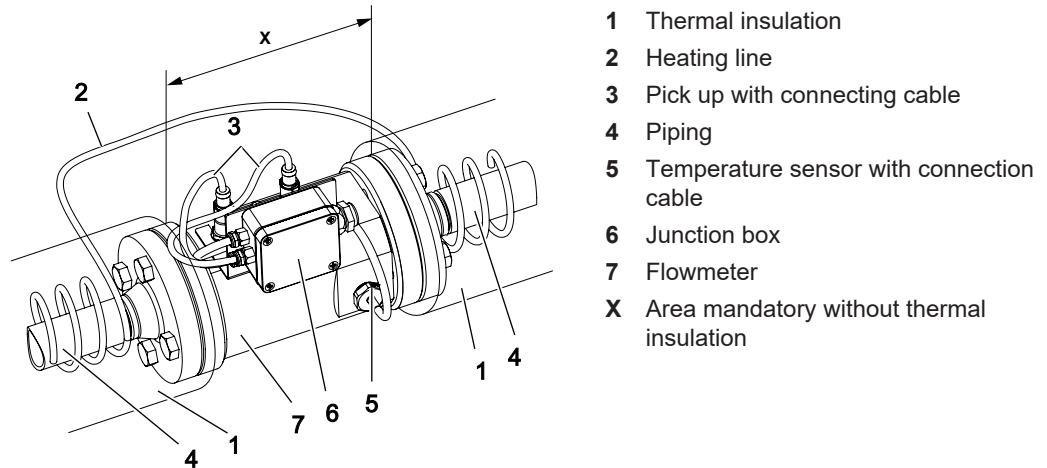


Fig. 12: Flowmeter with trace heating

**ATTENTION**

**Defective pick up, temperature sensors or wiring due to exceeding the maximum temperature.**

▶ Do not heat the pick up, temperature sensor, junction box and associated cables above the temperature specified in the relevant operating instructions.

▶ Make sure that the pick up 3, temperature sensor 5, junction box 6 and associated cables are not thermally insulated, i.e. area X must remain free of thermal insulation.

**16.2 Junction box**

**16.2.1 Function description**

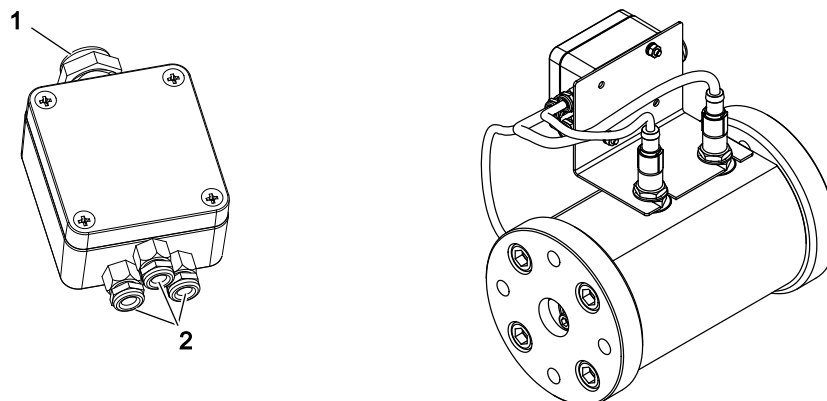


Fig. 13: OMP 32 with junction box

- 1 Output
- 2 Sensor inputs

For the OMP series flowmeters the manufacturer offers a junction box. This simplifies the electrical connection of the various sensors. Up to three sensors can be connected. The sensor cables are combined into a multi-core connection cable, which can be supplied as an option if required. The detailed assignment plan can be found on the inside of the cover of the junction box.


## 16.2.2 Technical data

Parameter	Unit	Junction box for OMP size			
		13	20	32	52
Pick up used		BEG 56			
<b>Electrical specification</b>					
<input type="checkbox"/> 2 sensor inputs		UZA103	UZA 56	UZA 59	UZA 84
<input type="checkbox"/> 3 sensor inputs		UZA104	UZA 57	UZA 60	UZA 83
<input type="checkbox"/> Outputs		1			
<b>Mechanical specification</b>					
<input type="checkbox"/> Housing material		Aluminium			
<input type="checkbox"/> Connection thread		M6			
<input type="checkbox"/> Fastening		With base plate			
<input type="checkbox"/> Max. temperature	[°C]	125			

Tab. 11: Junction box

## 16.2.3 Mounting junction box on OMP 13 - 52

Personnel qualification:	<input type="checkbox"/> Fitter <input type="checkbox"/> Electrician
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots

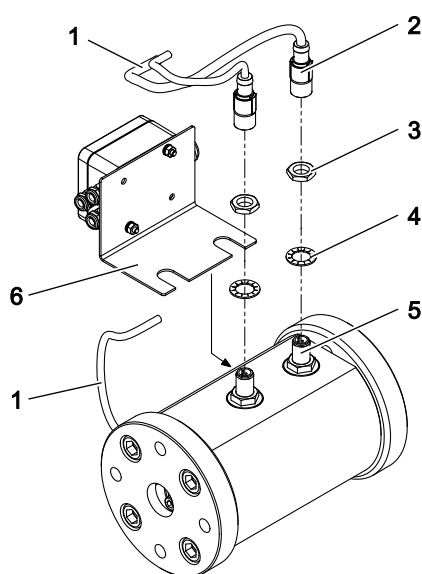


1. ➤ Disconnect the cables of the pick up and the temperature sensor 1. Ensure sufficient cable length.
2. ➤ Disconnect the plug of the pick up 2.
3. ➤ Unscrew the hexagon of the pick up 3.
4. ➤ Put the washers of the junction box 4 over the pick up inserts 5.
5. ➤ Slide the base plate of the junction box 6 under the washers and screw the hex. head back in.
6. ➤ Reconnect the pick up plug.

## 16 Accessories

### 16.3 Extension cable

#### 16.2.4 Connecting the junction box

Personnel qualification:	<input type="checkbox"/> Fitter <input type="checkbox"/> Electrician
Personal protective equipment:	<input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots

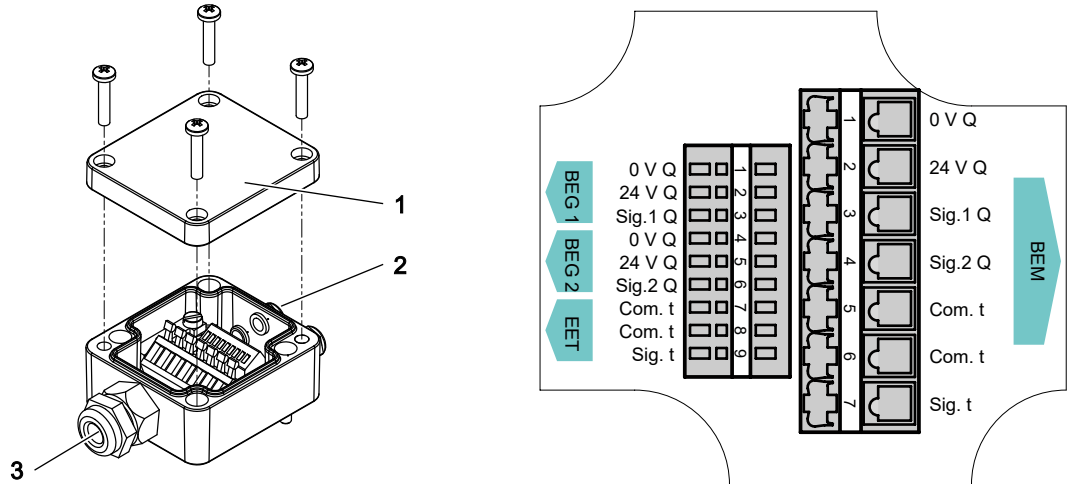

1. ➤ Remove the cover of the junction box 1.
2. ➤ Lead the cables of the pick ups and the temperature sensor through the sensor input 2 and make cable glands in the junction box. Observe the connection diagram,
3. ➤ Attach the connection cable to output 3.
4. ➤ Screw tight the cover of the junction box.

### 16.3 Extension cable

#### 16.3.1 Function description

Normally the cable length does not influence the functionality of the sensors. Nevertheless the manufacturer recommends that connecting cables of the junction box be extended to a maximum length of 100 m. Extension cables as well cable connectors and cable box are available as accessories from the manufacturer.

#### 16.3.2 Technical data

Parameter	Unit	Value
Max. length	[m]	100
Cable diameter	[mm]	6.0 – 10.5
Wire cross-section min. – max.	[mm <sup>2</sup> ]	0.25 – 2.50 (single wire)
	[mm <sup>2</sup> ]	0.25 – 1.50 (multiple wires)

Tab. 12: Extension cables

#### 16.3.3 Connecting the extension cable

Personnel qualification:	<input type="checkbox"/> Electrician
Personal protective equipment:	<input type="checkbox"/> Work clothing



### **⚠ DANGER**

#### Risk of death resulting from electric shock.

- ▶ Ensure that the electrical power supply is de-energized and is secured against being switched back on.
- ▶ Observe the operating instructions of the electrical components.

## 17.1 Tightening torques for screws with metric screw threads with and without wedge lock washers

**ATTENTION****Damage to equipment through incorrect connecting of the extension cable.**

- ▶ Use only a shielded extension cable.
- ▶ Lay extension cables separately from the supply lines.

1. ▶ Solder the cable connector onto the sensor cable.
2. ▶ Solder the cable box to the extension cable.
3. ▶ Connect the sensor cable and extension cable.
4. ▶ Connect the extension cable in accordance with the connection diagram.

**17 Appendix****17.1 Tightening torques for screws with metric screw threads with and without wedge lock washers**

Tightening torque [Nm]							
Screws with head contact surface					Countersunk screws		
Thread	Stainless steel screws A2 and A4				Property class		8.8
	5.6	8.8	10.9	8.8+ Alu*	70	80	
M 3	0.6	1.5	–	1.2	1.1	1.3	1.0
M 4	1.4	3.0	4.1	2.3	2.0	2.3	2.0
M 5	2.7	6.0	8.0	4.8	3.9	4.7	5.0
M 6	4.7	10.3	14.0	7.6	6.9	8.0	9.0
M 8	11.3	25.0	34.0	18.4	17.0	22.0	14.0
M 10	23.0	47.0	68.0	36.8	33.0	43.0	36.0
M 12	39.0	84.0	117	64.0	56.0	75.0	60.0
M 14	62.0	133	186	101	89.0	–	90.0
M 16	96.0	204	285	155	136	180	100
M 18	133	284	390	224	191	–	–
M 20	187	399	558	313	267	370	135
M 24	322	687	960	540	460	605	360

Tab. 13: Tightening torques metric screw thread

\*When screwing into aluminium, the tightening torque reduces by 20 % when the screw-in depth is less than double the thread diameter.

**17.2 Tightening torques for screw plugs with thread measured in inches and elastomer seal**

Tightening torque [Nm]	
Thread	Galvanized + stainless steel
G 1/8"	13.0
G 1/4"	30.0
G 3/8"	60.0
G 1/2"	80.0
G 3/4"	120
G 1"	200
G 1 1/4"	400
G 1 1/2"	450

Tab. 14: Tightening torques with thread measured in inches

#### 17.3 Contents of the Declaration of Conformity

The products described in these instructions are machinery in the sense of the Directive 2006/42/EC. The original of the EC Declaration of Conformity is enclosed with the machinery at delivery.

The machinery fulfils all the relevant provisions of the following directives:

Number	Name	Remark
2006/42/EC	Machinery Directive	–
2014/68/EU	Pressure Equipment Directive	–
2014/30/EU	Directive on Electromagnetic Compatibility	Only for machinery with electrical components
2014/35/EU	Low Voltage Directive	Only for machinery with electrical components
2014/34/EU	Directive on Use in Potentially Explosive Areas (ATEX)	Only for machinery in ATEX version

*Tab. 15: Directives observed*





# KRAL

