



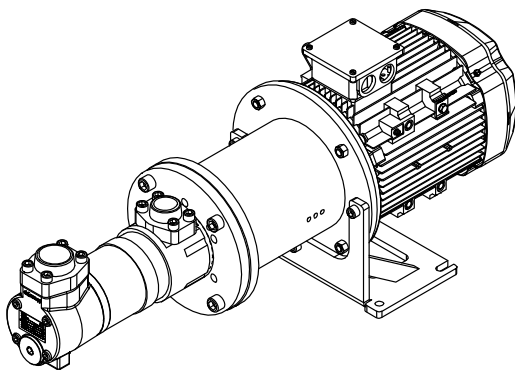

Operating instructions

KRAL

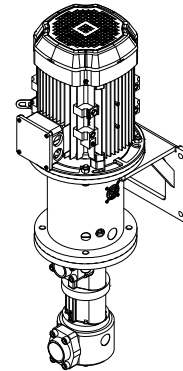

KRAL screw pumps.

Series CL

Type CLF/CLL

OIC 02en-GB
Edition 2022-11
Original instructions

| | | | |
|--|-----------|---|-----------|
| 1 About this document | 4 | 10.1 Dangers during operation | 20 |
| 1.1 General information | 4 | 10.2 Commissioning | 20 |
| 1.2 Associated documents | 4 | 10.2.1 Cleaning the pipe system | 20 |
| 1.3 Target groups | 4 | 10.2.2 Filling and venting the pump | 21 |
| 1.4 Symbols | 4 | 10.2.3 Checking the direction of rotation | 21 |
| 1.4.1 Danger levels | 4 | 10.2.4 Commissioning the pump | 22 |
| 1.4.2 Danger signs | 5 | 10.3 During operation | 23 |
| 1.4.3 Symbols in this document | 5 | 10.3.1 Checking the operating pressure | 23 |
| 2 Safety | 5 | 10.3.2 Monitoring the filter and/or strainer | 24 |
| 2.1 Proper use | 5 | 10.3.3 Adjusting the overflow valve | 24 |
| 2.2 Foreseeable misuse | 5 | 10.3.4 Switching off the pump unit | 25 |
| 2.3 Obligations of the operator-owner | 6 | 10.4 Decommissioning | 25 |
| 2.4 Safety instructions | 6 | 10.4.1 Decommissioning the pump | 25 |
| 2.4.1 Fundamental safety instructions | 6 | 10.5 Recommissioning | 26 |
| 3 Identification | 6 | 10.5.1 Recommissioning the pump | 26 |
| 3.1 Type code | 6 | 11 Maintenance | 26 |
| 3.2 Rating plate | 8 | 11.1 Dangers during maintenance | 26 |
| 4 Technical data | 8 | 11.2 Required maintenance | 26 |
| 4.1 Operating limits | 8 | 11.3 Ball bearing (inner bearing) | 27 |
| 4.2 Required NPSH values | 8 | 11.4 Ball bearing (outer bearing) | 27 |
| 4.3 Sound pressure level | 9 | 11.5 Maintaining the pump | 27 |
| 4.4 Weights | 9 | 12 Servicing | 27 |
| 5 Function description | 9 | 12.1 Dangers during servicing | 27 |
| 5.1 Pump structure | 9 | 12.2 Wear | 28 |
| 5.2 Functional principle | 9 | 12.2.1 Signs of wear | 28 |
| 5.3 Shaft seal | 10 | 12.2.2 Shaft seal | 28 |
| 5.3.1 Seal variants inner bearing | 10 | 12.3 Replacing the coupling | 28 |
| 5.3.2 Seal variants outer bearing | 11 | 12.3.1 Removing the coupling | 28 |
| 5.4 Overflow valve | 11 | 12.3.2 Installing the coupling | 29 |
| 5.5 Housing variant/accessories | 12 | 12.4 Replacing the mechanical seal (inner bearing) | 30 |
| 6 Transportation, storage | 12 | 12.4.1 Removing the mechanical seal | 30 |
| 6.1 Dangers during transportation | 12 | 12.4.2 Installing the mechanical seal | 31 |
| 6.2 Dangers during storage | 13 | 12.5 Replacing the radial shaft seal (inner bearing) | 33 |
| 6.3 Unpacking and checking the state of delivery | 13 | 12.5.1 Removing the radial shaft seal | 33 |
| 6.4 Transporting the pump/pump unit | 13 | 12.5.2 Installing the radial shaft seal | 34 |
| 6.5 Storing the pump | 14 | 12.6 Replacing the ball bearing and screw set (inner bearing) | 35 |
| 7 Preservation | 14 | 12.6.1 Removing the ball bearing and screw set | 35 |
| 7.1 Preservation table | 14 | 12.6.2 Installing the ball bearing and screw set | 36 |
| 7.2 Preserving the inner surfaces | 14 | 12.7 Replacing the mechanical seal and ball bearing (outer bearing) | 37 |
| 7.3 Preserving the outer surfaces | 15 | 12.7.1 Removing the mechanical seal and ball bearing | 37 |
| 7.4 Removing the preservation | 15 | 12.7.2 Installing the mechanical seal and ball bearing | 39 |
| 8 Installation, removal | 15 | 12.8 Replacing the screw set (outer bearing) | 40 |
| 8.1 Dangers during installation | 15 | 12.8.1 Removing the screw set | 40 |
| 8.2 Dangers during removing | 16 | 12.8.2 Installing the screw set | 41 |
| 8.3 Installing the pump | 16 | 13 Disposal | 43 |
| 8.4 Removing the pump | 17 | 13.1 Dismantling and disposing of the pump | 43 |
| 9 Connection | 18 | 14 Troubleshooting | 43 |
| 9.1 Dangers during connection work | 18 | 14.1 Possible faults | 43 |
| 9.2 Connecting the pump to the pipe system | 18 | 14.2 Troubleshooting | 43 |
| 9.3 Insulating the pump | 19 | 15 Accessories | 46 |
| 9.4 Assembling the pump and motor | 19 | 15.1 Heating | 46 |
| 9.5 Connecting the pump unit to the power supply | 20 | 15.1.1 Possible types of heating | 46 |
| 10 Operation | 20 | 15.1.2 Electrical heating system | 46 |

| | |
|---|-----------|
| 15.1.3 Fluid heating system | 48 |
| 15.1.4 Heating system special design | 49 |
| 16 Spare parts | 50 |
| 16.1 Overview of inner bearing | 50 |
| 16.2 Overview of outer bearing | 51 |
| 16.3 Repair kit, overflow valve | 52 |
| 16.4 Overview of accessories | 53 |
| 17 Appendix | 54 |
| 17.1 Tightening torques for screws with metric screw threads with and without wedge lock washers | 54 |
| 17.2 Tightening torques for screw plugs with thread measured in inches and elastomer seal | 54 |
| 17.3 Contents of the Declaration of Conformity | 55 |

1 About this document

1.1 General information

1 About this document

1.1 General information

These instructions form part of the product and must be kept for future reference. Furthermore please observe the associated documents.

1.2 Associated documents

- ☐ Declaration of conformity according to EU Directive 2006/42/EC
- ☐ Manufacturer's declaration according to EU Directive 2014/68/EU
- ☐ Data sheet of the pump
- ☐ Technical documentation of the supplied components

1.3 Target groups

The instructions are intended for the following persons:

- ☐ Persons who work with the product
- ☐ Operator-owners who are responsible for the use of the product

Persons who work with the product must be qualified. The qualification ensures that possible dangers and material damage that are connected to the activity are detected and avoided. These persons are qualified personnel who carry out the work properly due to their training, knowledge and experience and on the basis of the relevant provisions.


Information on the required qualification of the personnel is provided separately at the beginning of the individual chapters in these instructions. The following table provides an overview.

| Target group | Activity | Qualification |
|---------------------|-------------------------------------|--|
| Transport personnel | Transporting, unloading, setting up | Qualified personnel for transport, mobile crane operators, crane operators, forklift operators |
| Fitter | Mounting, connection | Qualified personnel for mounting |
| Electrician | Electrical connection | Qualified personnel for electric installation |
| Trained personnel | Delegated task | Personnel trained by the operator-owner who know the task delegated to them and the possible dangers arising through improper behaviour. |







Tab. 1: Target groups

1.4 Symbols









1.4.1 Danger levels

| | Signal word | Danger level | Consequences of non-observance |
|---|-------------|---------------------------------|-------------------------------------|
|  | DANGER | Immediate threat of danger | Serious personal injury, death |
|  | WARNING | Possible threat of danger | Serious personal injury, invalidity |
|  | CAUTION | Potentially dangerous situation | Slight personal injury |
| | ATTENTION | Potentially dangerous situation | Material damage |

1.4.2 Danger signs

| | Meaning | Source and possible consequences of non-observance |
|---|----------------------|---|
|  | Electrical voltage | Electrical voltage causes serious physical injury or death. |
|  | Raised load | Falling objects can result in serious physical injury or death. |
|  | Heavy load | Heavy loads can result in serious back problems. |
|  | Risk of slipping | Discharging pumped liquid and oils on the foundation or tread surfaces can cause falls with serious physical injury or death. |
|  | Flammable substances | Discharging pumped liquid and oils can be easily inflammable and can result in serious burns. |
|  | Hot surface | Hot surfaces can cause burns. |

1.4.3 Symbols in this document

| | Meaning |
|--|-------------------------------------|
|  | Warning personal injury |
|  | Safety instruction |
|  | Request for action |
| 1.  | Multi-step instructions for actions |
| 2.  | |
| 3.  | |
|  | Action result |
|  | Cross-reference |

2 Safety

2.1 Proper use

- ☐ Use the pump solely for transporting lubricating liquids that are chemically neutral and that do not contain gas or solid components.
- ☐ Use the pump only within the operating limits specified on the rating plate and in the chapter "Technical data". In the case of operating data that do not agree with the specifications on the rating plate, please contact the manufacturer.
- ☐ The pump is designed specially for the operating pressure named by the customer. If the actual operating pressure deviates notably from this design pressure, damage to the pump can also arise within the specified operating limits. This applies both to notably higher as well as to notably lower operating pressures. Under no circumstances may the minimum pressure lie below 2 bar. In case of any doubt, please contact the manufacturer.

2.2 Foreseeable misuse

- ☐ Any use that extends beyond the proper use or any other use is misuse.
- ☐ The product is not suitable for pumping liquids outside the operational limits.
- ☐ Any bypassing or deactivation of safety equipment during operation is prohibited.

3 Identification

2.3 Obligations of the operator-owner

2.3 Obligations of the operator-owner

The operator-owner is the person who operates the product commercially or permits a third party to use it and who bears the legal responsibility for the product, the protection of the personnel and third parties during its operation.

The product is used in industrial applications. The operator-owner is therefore subject to the statutory obligations concerning occupational health and safety.

In addition to the safety instructions in these instructions, the regulations on safety, accident prevention and environmental protection respectively valid for the range of application of the product are to be observed.

2.4 Safety instructions

2.4.1 Fundamental safety instructions



The following safety instructions must be observed strictly:

- ☐ Read these operating instructions carefully and observe them.
- ☐ Read the operating instructions of the components carefully and observe them.
- ☐ Have work only carried out by qualified personnel/trained personnel.
- ☐ Wear personal protective equipment and work carefully.
- ☐ Pumped liquids can be subject to high pressure and can result in personal injury and damage to property in case of incorrect operation or damaged components.
- ☐ Pumped liquids can be hot, poisonous, combustible and caustic. Use corresponding protective equipment.
- ☐ Observe the associated data sheets and safety regulations when handling dangerous materials.
- ☐ Avoid skin contact with system parts carrying liquids at operating temperatures exceeding 60 °C.
- ☐ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations. Neutralize residues.
- ☐ Keep the mounting surfaces, scaffolding, ladders, lifting platforms and tools clean in order to prevent slipping or stumbling.
- ☐ If pressurized or energized components are damaged, shut down the pump immediately. Replace the components or pump.

3 Identification

3.1 Type code

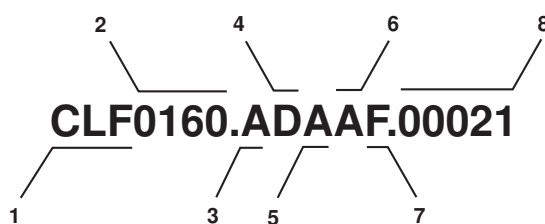


Fig. 1: Type code

| Item | Classification | Description |
|------|----------------|--|
| 1 | Type | CLF <input type="checkbox"/> Pump with free shaft end <input type="checkbox"/> Pump unit with flanges, large flange <input type="checkbox"/> Pump unit with or without pump bracket foot |
| | | CLL <input type="checkbox"/> Pump with free shaft end <input type="checkbox"/> Pump unit with flanges, large flange with pressure housing |
| 2 | Size | Corresponds to delivery rate in [l/min] at 1450 rpm |

| Item | Classification | Description | |
|------|--|-----------------------------|--|
| 3 | Shaft seal | A | Standard mechanical seal |
| | | B | Hard material mechanical seal |
| | | C | Standard radial shaft seal |
| | | D | Magnetic coupling |
| | | E | Mechanical seal with receiver |
| | | F | Shaft seal PTFE with quench |
| | | G | High-temperature radial shaft seal |
| | | H | Mechanical seal balanced |
| | | J | Stuffing box packing |
| | | L | Mechanical seal with throttle ring |
| | | X | Special design |
| 4 | Pressure stage overflow valve | A | Pressure stage 0.0 – 9.9 bar |
| | | B | Pressure stage 10.0 – 19.9 bar |
| | | C | Pressure stage 20.0 – 29.9 bar |
| | | D | Pressure stage 30.0 – 39.9 bar |
| | | E | Pressure stage 40.0 – 55.0 bar |
| | | Z | Without overflow valve |
| | | X | Special design |
| 5 | Bearings, heating system and pump housing material | A | Inside bearing without heating system, Silafont pump housing |
| | | B | External bearing without heating system, Silafont pump housing |
| | | C | Inside bearing with electrical heating system, Silafont pump housing |
| | | D | External bearing with electrical heating system, Silafont pump housing |
| | | E | Inside bearing with fluid heating system, Silafont pump housing |
| | | F | External bearing with fluid heating system, Silafont pump housing |
| | | X | Special design |
| 6 | Suction-side accessories | A | Suction housing |
| | | B | Suction strainer |
| | | C | Connection for suction pipe |
| | | Z | Without accessories |
| | | X | Special design |
| 7 | Completion | P | Pump with free shaft end |
| | | K | Pump with completion (without motor) |
| | | F | Pump unit with completion |
| 8 | Version index | For internal administration | |

Tab. 2: Type code

4.3 Sound pressure level

Guide values at 1 m distance, 1450 min⁻¹, 20 bar, 21 mm²/s

| | Size | | | | | | | | | |
|-----------|--------------------------------------|------------|------------|------------|--------------|--------------|--------------|--------------|--------------|--|
| | 5 – 10 | 15 – 26 | 32 – 42 | 55 – 85 | 105 – 118 | 160 – 210 | 235 – 275 | 370 – 450 | 550 – 880 | |
| | Max. sound pressure level ±3 [dB(A)] | | | | | | | | | |
| Pump | 53.0 | 57.0 | 59.0 | 63.0 | 65.0 | 69.0 | 71.0 | 74.0 | 80.5 | |
| Motor | 52.0 | 59.0 | 63.0 | 65.0 | 67.0 | 67.0 | 73.0 | 73.0 | 75.0 | |
| Pump unit | 55.5 | 61.0 | 64.5 | 67.0 | 69.0 | 71.0 | 75.0 | 76.5 | 82.0 | |

Tab. 4: Sound pressure level

4.4 Weights

The weight is specified on the rating plate.

5 Function description

5.1 Pump structure

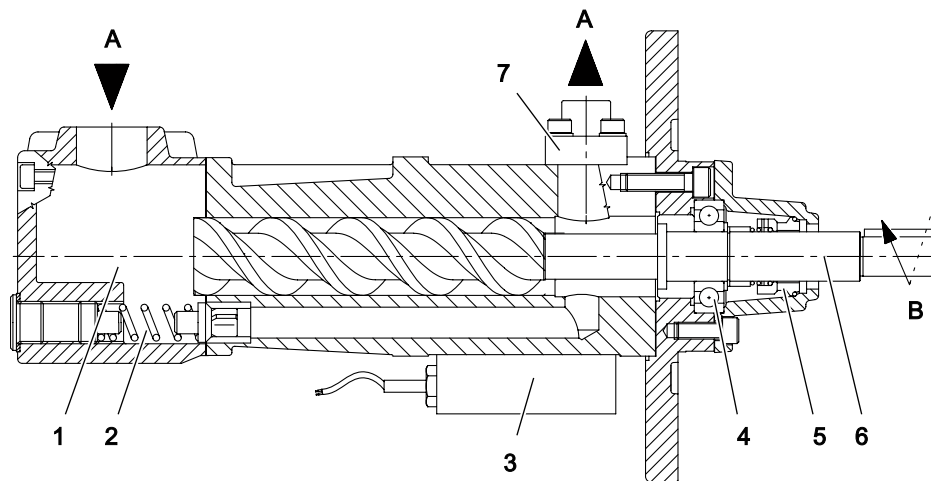


Fig. 3: Pump structure

- | | | | |
|---|-------------------------------|---|-----------------------|
| 1 | Suction housing (accessories) | 6 | Main screw |
| 2 | Overflow valve (integrated) | 7 | Counter flange |
| 3 | Heating (accessories) | A | Flow direction |
| 4 | Ball bearing | B | Direction of rotation |
| 5 | Shaft seal | | |

5.2 Functional principle

Screw pumps are rotating displacement pumps. The displacement effect results from three rotating screws and the enclosing pump housing.

Radial support of the screw set is provided through the sliding contact in the pump housing that depends on lubrication by the pumped liquid. Screw pumps are therefore not suitable for dry running and can only be used up to specific pressure limits and viscosity limits. Due to the narrow gap dimensions, suspended solids cannot be pumped.

The axial support of the main screw is provided by a lifetime-lubricated ball bearing 4. Various shaft seals 5 are available for sealing the main screw at the outlet from the housing. In order to reduce the pressure at the shaft seal a balancing cylinder is mounted at the main screw. The sealing chamber is connected with the suction chamber via a relief line. An integrated overflow valve 2 protects against excessive pressure that could cause housing parts to burst.

The standard direction of rotation B of the spindle set is clockwise as seen from the motor.

The flow direction A is marked on the pump housing by an arrow.

5 Function description

5.3 Shaft seal


5.3 Shaft seal

The following types of shaft seals are offered:

- ☐ Mechanical seal standard or hard material
- ☐ Mechanical seal with quench
- ☐ Mechanical seal with throttle ring
- ☐ Radial shaft seal standard or high-temperature

5.3.1 Seal variants inner bearing


Mechanical seal standard/hard material

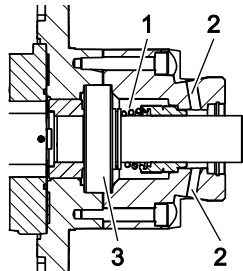

- 1 Mechanical seal
- 2 Leakage vent hole
- 3 Ball bearing

The lubrication of the mechanical seal **1** inevitably results in a low leak, that as a rule evaporates. However, at low-volatile liquids such as heavy fuel oil the leak becomes visible. The integrated leakage vent holes **2** allow draining of this leakage. The drainage through these holes has to be kept free. Dry running must be avoided at all costs, as the seal will overheat and be destroyed in a matter of seconds.


Mechanical seal with quench

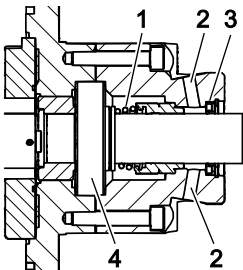

- 1 Mechanical seal
- 2 Leakage vent hole for quench tank connection
- 3 Radial shaft seal ring
- 4 Ball bearing

If low-volatile liquids or liquids that tend to harden when coming into contact with the atmosphere are used, a mechanical seal **1** can also be used in combination with a radial shaft seal ring **3**. This allows the sealing chamber to be connected via the leakage vent holes **2** with a quench tank so that the side of the mechanical seal facing away from the liquid will always be kept under the exclusion of air.


Mechanical seal with throttle ring

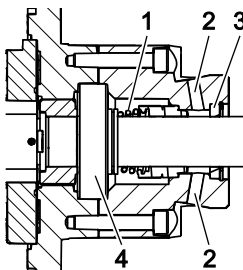

- 1 Mechanical seal
- 2 Leakage vent hole for quench tank connection
- 3 Throttle ring
- 4 Ball bearing

The throttle ring **3** serves as a secondary seal in connection with a mechanical seal **1**. This lightly contacting seal is for example used to seal a steam quench, whereby a certain leakage is emitted permanently via the throttle ring. Such a quench system is used for the heating and flushing of single action mechanical seals. The throttle ring furthermore reduces the leak rate at a total failure of the mechanical seal.

Radial shaft seal standard/high-temperature

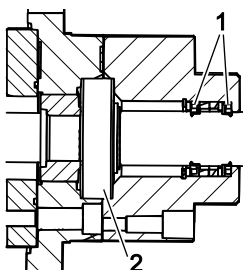


- 1 Radial shaft seal ring
- 2 Ball bearing

Depending on the material used, radial shaft seals can be used for temperatures of up to 150 °C (standard) or 90 °C (high pressure) respectively.

The used radial shaft seal rings **1** have one a lip each used to seal against liquid outlet and air inlet.

5.3.2 Seal variants outer bearing


Mechanical seal standard/hard material

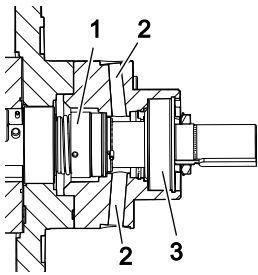

- 1 Mechanical seal
- 2 Leakage vent hole
- 3 Ball bearing

The lubrication of the mechanical seal 1 inevitably results in a low leak, that as a rule evaporates. However, at low-volatile liquids such as heavy fuel oil the leak becomes visible. The integrated leakage vent holes 2 allow draining of this leakage. The drainage through these holes has to be kept free. Dry running must be avoided at all costs, as the seal will overheat and be destroyed in a matter of seconds.

Mechanical seal with quench

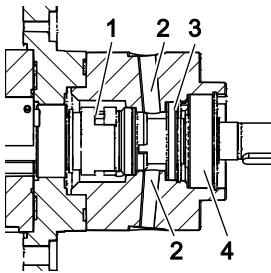


- 1 Mechanical seal
- 2 Leakage vent hole for quench tank connection
- 3 Radial shaft seal ring
- 4 Ball bearing

If low-volatile liquids or liquids that tend to harden when coming into contact with the atmosphere are used, a mechanical seal 1 can also be used in combination with a radial shaft seal ring 3. This allows the sealing chamber to be connected via the leakage vent holes 2 with a quench tank so that the side of the mechanical seal facing away from the liquid will always be kept under the exclusion of air.

5.4 Overflow valve

- Note** ☐ The protection of the pump must be ensured either through an integrated overflow valve or through an overflow valve/safety valve installed on the system side. The overflow valve/safety valve must be installed pressure-side between the pump and the first shut-off valve.
- ☐ Observe the associated operating instructions and dimensioning sheet of the pump to set an overflow valve/safety valve installed on the system side.
- Note** ☐ A function test of the overflow valve at least every 5 years is essential for the safe operation ➤ During operation, Page 23.
- ☐ Scope and if necessary shorter test intervals must be specified by the operator-owner in accordance with the requirements and national provisions (for example Austrian Ordinance of Safety and Health (BetrSichV)).
- ☐ The first function test must take place directly after the commissioning.
- ☐ After longer downtimes (> 4 weeks) the function of the overflow valve must be tested again.

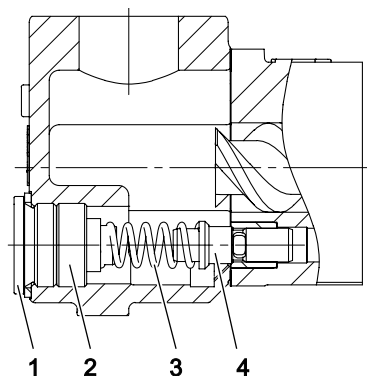

- 1 Screw plug
- 2 Adjusting screw
- 3 Pressure spring
- 4 Valve body

Fig. 4: Overflow valve, integrated

The overflow valve ensures that very high pressures that could result in housing parts bursting do not arise.


The overflow valve is purely there as a safety element for the pump and should not be used for control or regulation purposes such as maintaining pressure. If the valve is kept open for too long under adverse operating conditions (high differential pressures and/or low viscosities) it will only take a few minutes for the overflow valve and the valve seating to become damaged. As a result, the overflow valve will leak permanently and there will be a corresponding reduction in the delivery rate. In addition to this, circulation through the overflow valve for too long results in excess heating of the pump. This reduces viscosity and can ultimately lead to pump failure.

6 Transportation, storage

5.5 Housing variant/accessories





It therefore has to be ensured through a safety valve at the system that the maximum allowable working pressure always lies under the opening pressure of the overflow valve.

Note The opening pressure of the overflow valve is set to 110% of the differential pressure in the factory. The overflow valve is accessible through a screw plug 1 and can be adjusted from the outside ↗ During operation, Page 23.

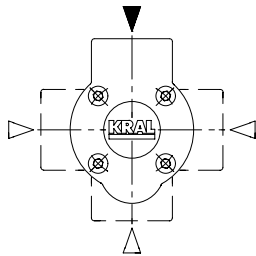

Note At pumps without integrated overflow valve the suction housing can be mounted with a respective rotation of 90°.

5.5 Housing variant/accessories
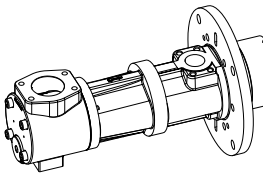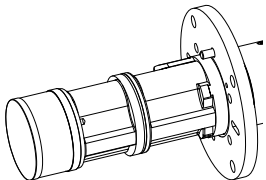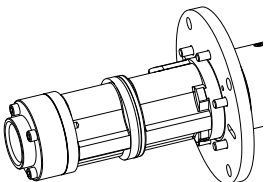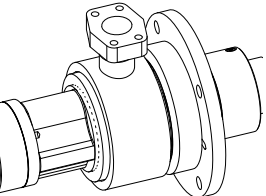
| Housing variant/accessories | Type | Description |
|---|------|---|
|  | CLF | Suction housing with/without overflow valve |
|  | CLF | Suction strainer |
|  | CLF | Connection for suction pipe |
|  | CLL | Pressure housing |

6 Transportation, storage

6.1 Dangers during transportation



The following safety instructions must be observed:

- ☐ Have all work only carried out by authorized transport personnel.
- ☐ Use intact and correctly dimensioned hoisting equipment.
- ☐ Ensure that the means of transport is in a flawless state.
- ☐ Ensure that the centre of gravity of the load is taken into consideration.
- ☐ Do not stand under raised loads.

6.2 Dangers during storage



The following safety instructions must be observed:

- ☐ Observe the storage conditions.

6.3 Unpacking and checking the state of delivery

| | |
|---|--|
| Personnel qualification: | <input type="checkbox"/> Trained personnel |
| <ol style="list-style-type: none"> 1. ➤ Upon delivery check the pump/pump unit for damage during transportation. 2. ➤ Report damage during transportation immediately to the manufacturer. 3. ➤ Dispose of packaging material in accordance with the locally applicable regulations. | |

6.4 Transporting the pump/pump unit

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Transport personnel |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective helmet <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Mobile crane, forklift, hoisting equipment |



WARNING

Risk of injury and damage to equipment through falling and toppling parts.

- ▶ Use intact and correctly dimensioned hoisting equipment in accordance with the total weight to be transported.
- ▶ Select the lift points for the hoisting equipment in accordance with the centre of gravity and the weight distribution.
- ▶ Use at least two load ropes.
- ▶ In the case of vertical transportation secure the motor against tipping.
- ▶ Do not stand under raised loads.

ATTENTION

Damage to equipment through improper transportation.

- ▶ Protect the pump against damage, heat, sunlight, dust and moisture.

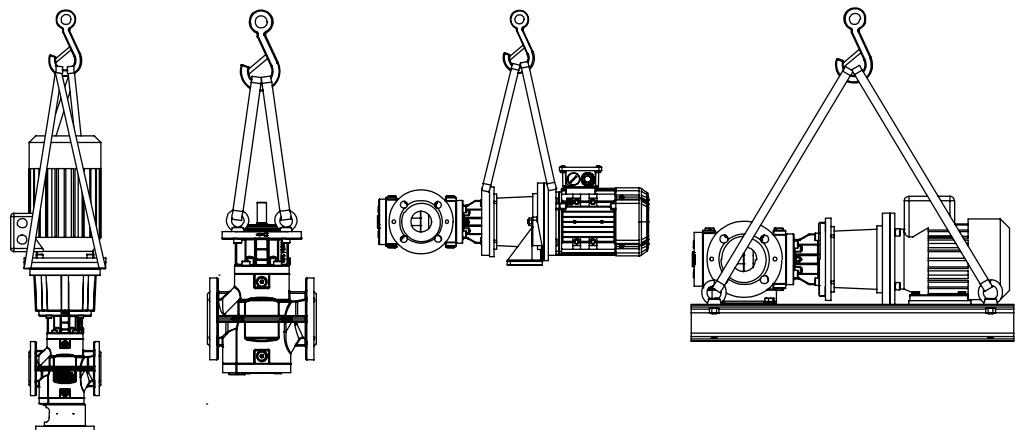


Fig. 5: Fastening of hoisting equipment - principle diagrams

1. ➤ Attach the hoisting equipment to the pump/pump unit and tighten. Ensure that the centre of gravity lies exactly under the crane hook.

7 Preservation

6.5 Storing the pump

2. ➤ Lift the pump/pump unit carefully and put it down shock-free.
3. ➤ Before loosening the transport belts ensure that the pump/pump unit is secured against tilting.

6.5 Storing the pump

During the test run, the internal components of the pump are wetted with test oil, which has a preservative effect. Pressure connection and suction connection are closed with protective caps. Unless otherwise specified, the outer surfaces of the pump are preserved with a single-coat PU-based two-component paint.

The preservative applied at the factory will protect the pump for about six weeks, if it is stored in a dry and clean location.

The manufacturer offers a long-term preservation for storage times of up to 60 months. The pump is additionally packed in hermetically sealing anti-corrosion paper.

| | |
|--------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Transport personnel |
| Aids: | <input type="checkbox"/> Mobile crane, forklift, hoisting equipment |

ATTENTION

Damage to equipment and corrosion if stored improperly and during longer standstills.

- ▶ Protect the pump against damage, heat, sunlight, dust and moisture.
- ▶ Protect against corrosion during longer standstill.
- ▶ Observe measures for storing and preservation.

1. ➤ Store cool and dry and protect against sunlight.
2. ➤ Ensure that the anti-corrosion paper is not damaged.
3. ➤ Observe the intervals for preservation ↪ Preservation, Page 14.

7 Preservation

7.1 Preservation table

Preservation has to be carried out additionally under the following conditions:

| Type of delivery | Condition |
|--------------------------------------|--|
| Standard delivery | <input type="checkbox"/> Storage time exceeding six weeks <input type="checkbox"/> Unfavourable storage conditions such as high humidity, salty air, etc. |
| Delivery with long-term preservation | <input type="checkbox"/> Opened or damaged packaging |

Tab. 5: Conditions for additional preservation

7.2 Preserving the inner surfaces

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Trained personnel |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Preservative (acid-free and resin-free oil) |

1. ➤ Open the packaging carefully. If the pump is protected additionally by anti-corrosion paper, ensure that it is not damaged.
2. ➤ Close the suction connection of the pump with a blind flange.
3. ➤ Pour the preservative into the pressure connection until it reaches approx. 2 cm under the rim, while slowly turning the main screw against the direction of rotation.
4. ➤ Close the pressure connection of the pump with a new blind flange.
5. ➤ Close the packaging carefully.
6. ➤ After about six months storage check the filling level of the preservative and if necessary top up.

7.3 Preserving the outer surfaces

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Trained personnel |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Face protection <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Calcium complex grease (for example TEVI-ER® GREASE WAVE 100 with adhesive additive) <input type="checkbox"/> Castrol Rustilo DWX 33 or other preservative offering comparable protection |

1. ➤ Brush calcium complex grease corrosion protection (for example TEVIER® FETT WAVE 100 with adhesive additive) to the mounting surfaces.
2. ➤ Brush or spray preservative (for example Castrol Rustilo DWX 33) onto the process connections and remaining plain and unpainted parts.
3. ➤ At intervals of about six months check the preservation and if necessary repeat.

7.4 Removing the preservation

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Trained personnel |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Face protection <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Solvent <input type="checkbox"/> Collection tank <input type="checkbox"/> Steam-jet cleaning device with wax-dissolving additives |

**CAUTION****Risk of injury through discharging preservative.**

- Wear personal protective equipment during all the work.
- Collect any discharging preservative safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.

1. ➤ Clean the outside of the pump with solvents, if necessary using a steam-jet cleaning device.
2. ➤ Remove the pressure-side blind flange carefully in order to reduce any pressure that may exist in the pump.
3. ➤ Drain the pump, collecting the preservative in a suitable vessel.
4. ➤ Remove the blind flange on the suction side.
5. ➤ To remove the residual preservative, flush the pump with the pumped liquid.

8 Installation, removal**8.1 Dangers during installation****The following safety instructions must be observed strictly:**

- ☐ Have all work carried out only by authorized qualified personnel.
- ☐ Before installation ensure that the operating limits, NPSH values and ambient conditions are observed.
- ☐ Observe the tightening torques ↗ Appendix, Page 54.
- ☐ Ensure that all the components can be accessed and that maintenance work can be carried out easily.

8.2 Dangers during removing



The following safety instructions must be observed strictly:

- ☐ Have all work carried out only by authorized qualified personnel.
- ☐ Before beginning work, let the pump unit cool down to the ambient temperature.
- ☐ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.
- ☐ Ensure that the collection tank for discharging pumped liquid is sufficiently large.

8.3 Installing the pump

The pumps can be operated in horizontal and vertical installation position.

Note Soiling in the pipe system impair the service life of the pump. If the pipe system is flushed using the pump during the initial commissioning, an additional commissioning filter has to be installed temporarily before the pump at the system (mesh width: 0.02 mm).

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Transport personnel <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective helmet <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Mobile crane, forklift, hoisting equipment |



WARNING

Risk of injury and damage to equipment through falling and toppling parts.

- ▶ Only fasten the pump on a stable load-bearing underground or stable load-bearing load support.
- ▶ Ensure that fastening elements and pipings are fastened sufficiently.

ATTENTION

Damage to motor through discharging pumped liquid.

- ▶ Do not install the pump above the motor.

ATTENTION

Damage to device through impurity in the pipe system.

- ▶ During welding work attach protective covers in front of the connecting flanges.
- ▶ Ensure when welding that welding beads and abrasive dust cannot get into the pipe system and the pump.
- ▶ Ensure that a commissioning filter is installed when the pipe system is flushed and cleaned using the pump.

Note Ensure an oil level of at least 60 - 70 cm over the suction strainer in case of operation with a suction strainer.

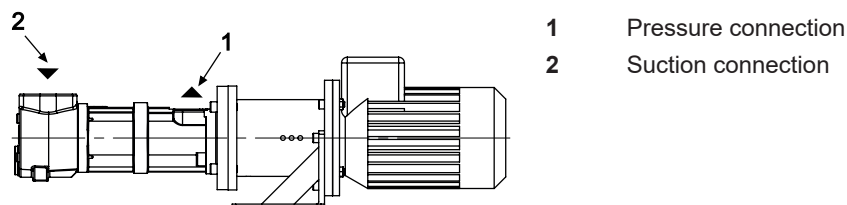


Fig. 6: Flow direction

Requirement:

- ✓ Pump protection: Integrated overflow valve or system-side overflow valve/safety valve installed.
 - ✓ Pump connections protected against soiling, for example by using the protective cover mounted in the factory
 - ✓ If required, hoisting equipment prepared
1. ➤ Bring the pump in the installation position, while observing the position of the motor and the arrows for the flow direction on the pump housing (1 pressure connection, 2 suction connection).
 2. ➤ Fasten the pump with fastening elements securely on the underground.

8.4 Removing the pump

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Transport personnel <input type="checkbox"/> Fitter <input type="checkbox"/> Electrician |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective helmet <input type="checkbox"/> Face protection <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Mobile crane, forklift, hoisting equipment <input type="checkbox"/> Collection tank |



DANGER

Risk of death resulting from electric shock.

- Ensure that the electrical power supply is de-energized and is secured against being switched back on.
- Observe the operating instructions of the electrical components.



DANGER

Risk of death through emitted pumped liquid.

Pumped liquids can be hot, poisonous, combustible and caustic and can spray out under high pressure.

- Wear personal protective clothing during all the work. Ensure face protection.
- Before beginning work, let the pump unit cool down to the ambient temperature.
- Ensure that the pump is depressurized.
- Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.

Requirement:

- ✓ Pump unit cooled down to the ambient temperature
 - ✓ Pump unit disconnected from the electrical power supply, deenergized and secured against being switched back on
1. ➤ Close the pressure-side and suction-side shut-off devices.
 2. ➤ Empty the pump at the lowest point. Collect the discharging pumped liquid in a collection tank.
 3. ➤ Dismantle the pressure-side and suction-side connecting flanges.
 4. ➤ Disconnect the pump unit from the pipe system and empty it. Collect any discharging pumped liquid.
 5. ➤ Screw out the fastening elements used to fasten the pump.
 6. ➤ Dismantle the pump unit on site or transport it to a suitable location ➤ Transportation, storage, Page 12.

9 Connection

9.1 Dangers during connection work



The following safety instructions must be observed strictly:

- ☐ Have all work on the pump and pipe system only carried out by authorized qualified personnel.
- ☐ Ensure that impurities cannot get into the pump and pipe system.
- ☐ Ensure that mechanical connections are mounted stress-free.
- ☐ Observe the tightening torques ↗ Appendix, Page 54.
- ☐ Have all the work on the electrical equipment only carried out by electricians.
- ☐ Before beginning work on the pump ensure that the electrical power supply is deenergized and is secured against being switched back on.
- ☐ If the insulation of the electrical cables or wires is damaged, disconnect the power supply immediately.

9.2 Connecting the pump to the pipe system

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Transport personnel <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Protective helmet <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Mobile crane, forklift, hoisting equipment |

ATTENTION

Damage to device through impurity in the pipe system.

- ▶ During welding work attach protective covers in front of the connecting flanges.
- ▶ Ensure when welding that welding beads and abrasive dust cannot get into the pipe system and the pump.
- ▶ Ensure that a commissioning filter is installed when the pipe system is flushed and cleaned using the pump.

ATTENTION

Damage to device through mechanical stress.

- ▶ Ensure that the pump is mounted free of mechanical stresses in the pipe system.
- ▶ Observe the tightening torques.




Fig. 7: Connection to pipe system

1. ➤ Turn the pump shaft or the fan impeller of the motor. This tests that the pump runs smoothly. If the pump shaft cannot be turned by hand, remedy the fault before installing the pump ↗ Troubleshooting, Page 43.
2. ➤ Before carrying out welding work mount a protective cover on the suction connection and pressure connection.
3. ➤ Place the piping in position and support the weight of the piping.
4. ➤ Check the linear, height and angular offset and correct if necessary.
⇒ If the screws tighten easily, this is a sure sign that the installation is stress-free.
5. ➤ Tighten the connecting screws crosswise with torque, Table of tightening torques ↗ Appendix, Page 54.

9.3 Insulating the pump

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Insulation material |



WARNING

Hot surface.

Touching of uninsulated hot surfaces results in burns.

- Insulate components and pipings in which hot liquids (> 60 °C) flow before commissioning.

► Before commissioning, carefully insulate all potentially hot surfaces of the pump and the connected piping or provide suitable protection against accidental contact.

9.4 Assembling the pump and motor

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |

ATTENTION

Damage to coupling and bearing through incorrect alignment of the coupling.

- To guarantee a long service life of the coupling, align shaft ends exactly.
- After assembly check permissible displacement figures of the coupling according to table below.

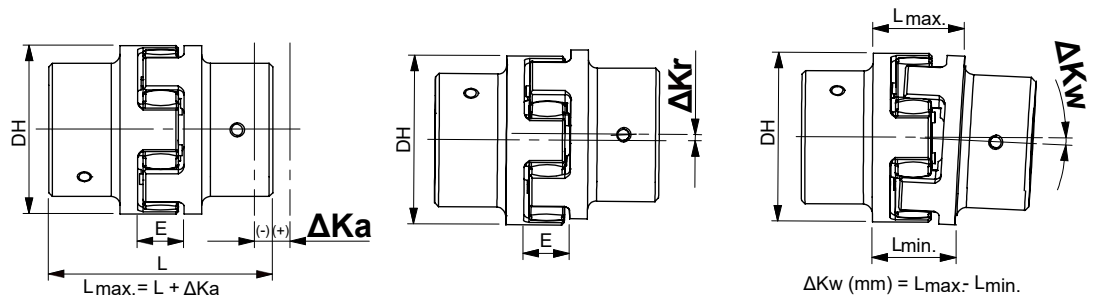


Fig. 8: Coupling alignment measuring points

| Outer diameter | Coupling distance | Max. axial displacement | Max. radial displacement | Max. angular displacement | |
|----------------|-------------------|-------------------------|--------------------------|---------------------------|------|
| DH | E | ΔKa | ΔKr | ΔKw | |
| [mm] | [mm] | [mm] | [mm] | [°] | [mm] |
| 40 | 16 | -0.5/ +1.2 | 0.20 | 1.2 | 0.8 |
| 55 | 18 | -0.5/ +1.4 | 0.22 | 0.9 | 0.9 |
| 65 | 20 | -0.7/ +1.5 | 0.25 | 0.9 | 1.1 |
| 80 | 24 | -0.7/ +1.8 | 0.28 | 1.0 | 1.4 |
| 95 | 26 | -1.0/ +2.0 | 0.32 | 1.0 | 1.7 |
| 120 | 30 | -1.0/ +2.2 | 0.38 | 1.1 | 2.3 |
| 135 | 35 | -1.0/ +2.6 | 0.42 | 1.2 | 2.7 |
| 160 | 40 | -1.5/ +3.0 | 0.48 | 1.2 | 3.3 |

Tab. 6: Limit values for aligning the shaft coupling

10 Operation

9.5 Connecting the pump unit to the power supply

1. ➤ Check the radial displacement ΔK_r of the coupling using a hairline gauge and feeler gauge. Check several points along the periphery of the coupling.
2. ➤ Check the angular displacement ΔK_w of the coupling using a hairline gauge.
3. ➤ Check the axial displacement ΔK_a of the coupling using a slide gauge or feeler gauge.
4. ➤ If the limit values of the above table are exceeded, loosen the fastening of the pump or motor and move pump or motor in order to reduce the respective offset.

9.5 Connecting the pump unit to the power supply

| | |
|--------------------------|--|
| Personnel qualification: | <input type="checkbox"/> Electrician |
| Aids: | <input type="checkbox"/> Operating instructions of the motor <input type="checkbox"/> Motor circuit diagram |



DANGER

Risk of death resulting from electric shock.

- ▶ Ensure that the electrical power supply is de-energized and is secured against being switched back on.
- ▶ Before commissioning ensure correct grounding and equipotential bonding.
- ▶ Observe the operating instructions of the electrical components.

1. ➤ Ensure that the operating data on the rating plate of the motor agree with the operating data of the pump and with the local power supply.
2. ➤ Carefully earth the pump bracket foot, base frame or pedestal via the screwing.
3. ➤ Connect the motor in accordance with the operating instructions and circuit diagram in the motor terminal block.
4. ➤ When connecting the pump unit to the complete system continue equipotential bonding.

10 Operation

10.1 Dangers during operation



The following safety instructions must be observed strictly:

- ☐ Have all work carried out only by authorized qualified personnel.
- ☐ Before commissioning ensure that a safety valve has been installed in the pipe system on the pressure side before the first shut-off device.
- ☐ Before commissioning, make sure that the suction line and pump are filled.
- ☐ Pumped liquids can be hot, poisonous, combustible and caustic. Use corresponding protective equipment.
- ☐ Ensure that the pump station is only operated within the operating limits.
- ☐ Wear hearing protection if you work for a longer time directly at the pump.
- ☐ Ensure that the maximum permissible system pressure is not exceeded.
- ☐ Ensure that during cooling down or heating up the pump is only subjected to slow temperature changes.
- ☐ Ensure that existing safety equipment is not bypassed or activated during operation.
- ☐ Before decommissioning ensure that the electrical power supply is deenergized and is secured against being switched back on.

10.2 Commissioning

10.2.1 Cleaning the pipe system

Note Soiling in the pipe system impair the service life of the pump. If the pipe system is flushed using the pump during the initial commissioning, an additional commissioning filter has to be installed temporarily before the pump at the system.

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |

ATTENTION

Damage to equipment through additional pressure loss in the commissioning filter/commissioning strainer.

- ▶ Calculate the flow resistance and determine the remaining pump intake.
- ▶ Monitor the suction-side pressure.
- ▶ Check the commissioning filter/commissioning strainer regularly.

Requirement:

✓ If required, commissioning filter installed (mesh width 0.02 mm)

1. ▶ Clean the complete pipe system before commissioning in order to protect the pump.
2. ▶ Flush the pipe system at least 50 – 100 hours.

10.2.2 Filling and venting the pump

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Face protection <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |

**DANGER**

Risk of death through discharging pumped liquid.

Pumped liquids can be hot, poisonous, combustible and caustic and can spray out under high pressure.

- ▶ Wear personal protective equipment during all the work. Ensure face protection.
- ▶ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.

1. ▶ Connect the suction connection or pressure connection of the surrounding pipe system for example with a higher tank.
2. ▶ Vent the pipe system at the highest point, for example via a pressure gauge shut-off device.
3. ▶ Open the suction-side or pressure-side shut-off device and fill the pump via the suction connection or pressure connection until pumped liquid is emitted at the vent hole.
4. ▶ While filling, turn the pump shaft or the motor fan impeller manually in order to speed up the filling process:
 Filling via suction connection: Turn the pump shaft in the direction of the arrow on the pump flange.
 Filling via pressure connection: Turn the pump shaft against the direction of the arrow on the pump flange.
5. ▶ Close the vent point, for example the pressure gauge shut-off device.

10.2.3 Checking the direction of rotation

The direction of rotation is indicated by an arrow on the pump flange/pump housing. The direction of rotation of the motor specifies the direction of rotation of the pump. The fan impeller of the motor must rotate in the same direction in which the arrow for the direction of rotation on the pump flange points.

Note Standard direction of rotation: clockwise (viewed from the motor)


| | |
|--------------------------|---------------------------------|
| Personnel qualification: | <input type="checkbox"/> Fitter |
|--------------------------|---------------------------------|

ATTENTION

Dry running can damage pump equipment.

- ▶ Ensure that the pump is filled properly.
- ▶ Switch the pump on for a maximum of one second and then off again immediately.

1. ➤ Switch on the power supply and then turn it off again immediately.

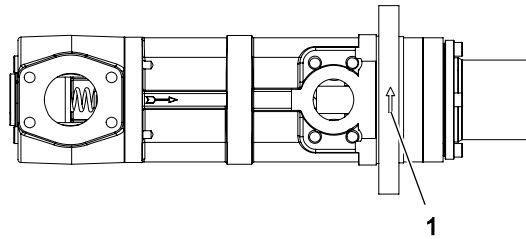

2. ➤ Compare the direction of rotation of the fan impeller with the arrow for the direction of rotation 1.
3. ➤ If the directions do not match, swap the two electrical connection phases. Repeat Steps 1 and 2.

10.2.4 Commissioning the pump

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter <input type="checkbox"/> Electrician |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Face protection <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Collection tank |



DANGER

Risk of death resulting from bursting components and discharging pumped liquid.

As a result of impermissibly high pressure, components can burst with high energy, for example through the pressure-side pipe system being shut off.

- ▶ Wear personal protective equipment during all the work.
- ▶ System protection: Before carrying out commissioning ensure that a safety valve is installed in the pressure-side pipe system at the system end.
- ▶ Pump protection: Ensure before commissioning that an integrated overflow valve or system-side overflow valve/safety valve is installed.



WARNING

Risk of injury through emitted pumped liquid.

Pumped liquids can be hot, poisonous, combustible and caustic.

- ▶ Wear personal protective clothing during all the work. Ensure face protection.
- ▶ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.



WARNING

Hot surface.

Touching of uninsulated hot surfaces results in burns.

- ▶ Insulate components and pipings in which hot liquids (> 60 °C) flow before commissioning.



WARNING

Danger of injury through rotating parts.

- ▶ Ensure that the coupling protection is mounted.

ATTENTION

Dry running can damage pump equipment.

- ▶ Ensure that the pump and the connected pipe system are filled properly.
- ▶ If the pump does not deliver after 10 – 15 seconds, abort commissioning.

Note Ensure an oil level of at least 60 - 70 cm over the suction strainer in case of operation with a suction strainer.

Requirement:

- ✓ Pump unit set up correctly
 - ✓ Coupling aligned correctly ↪ Connection, Page 18
 - ✓ Connections connected sealingly
 - ✓ Motor connected correctly
 - ✓ Pipe system is free of impurities
 - ✓ System protection: Safety valve in accordance with EN ISO 4126-1 installed in the pressure-side pipe system before the first shut-off device
 - ✓ Pump protection: Integrated overflow valve or system-side overflow valve/safety valve installed.
 - ✓ Pump filled with pumped liquid
 - ✓ Shut-off devices in the suction line and pressure line opened
1. ▶ Turn the pump shaft or the fan impeller of the motor. This tests that the pump runs smoothly. If the pump shaft cannot be turned by hand, remedy the fault. ↪ Troubleshooting, Page 43
 2. ▶ Switch on the pump unit.
 - ⇒ The pump delivers when the pressure on the pressure side of the pump rises or a flow indicator at the system side triggers.
 3. ▶ If the pump does not deliver after 10 – 15 seconds of operation, abort commissioning. Eliminate the cause of the fault and only then continue with commissioning. Take the information from the troubleshooting table into account ↪ Troubleshooting, Page 43.
 4. ▶ Run the pump for a few minutes to allow the pipe system to vent fully.
 - ⇒ The pipe system is fully vented when the pump operating noise is smooth and a pressure gauge on the pressure side shows no more fluctuations.
 5. ▶ Checking overflow valve functions ↪ During operation, Page 23.

10.3 During operation

10.3.1 Checking the operating pressure

Personnel qualification: ☐ Trained personnel

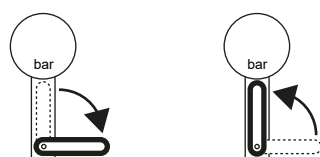


Fig. 9: Pressure gauge shut-off valves closed/open - principle diagram

ATTENTION

Leak in the pressure gauge through permanently opened pressure gauge shut-off valve.

- ▶ Close the pressure gauge shut-off valve immediately after completing reading.

1. ▶ Open the pressure gauge shut-off valve.
2. ▶ Read the operating pressure and close the pressure gauge shut-off valve.

10.3.2 Monitoring the filter and/or strainer


| | |
|--------------------------|--|
| Personnel qualification: | <input type="checkbox"/> Trained personnel |
| 1. ➤ | After commissioning monitor the degree of soiling of the filter and/or strainer by means of a suction-side pressure gauge or a differential pressure indication. |
| 2. ➤ | Also check the filters/strainers in the event of a pressure drop on the suction side. Observe the dimensioning data of the manufacturer of the filters and/or strainers. |
| 3. ➤ | Check the suction-side pressure every two weeks during operation. |
| 4. ➤ | Regularly check the magnetic separator in the filter/strainer during operation and clean it if necessary. |

10.3.3 Adjusting the overflow valve

| | |
|--------------------------|------------------------------------|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Aids: | <input type="checkbox"/> Allen key |

- Note** ☐ The protection of the pump must be ensured either through an integrated overflow valve or through an overflow valve/safety valve installed on the system side. The overflow valve/safety valve must be installed pressure-side between the pump and the first shut-off valve.
- ☐ Observe the associated operating instructions and dimensioning sheet of the pump to set an overflow valve/safety valve installed on the system side.

Note The opening pressure of the overflow valve is set to 110% of the differential pressure in the factory.

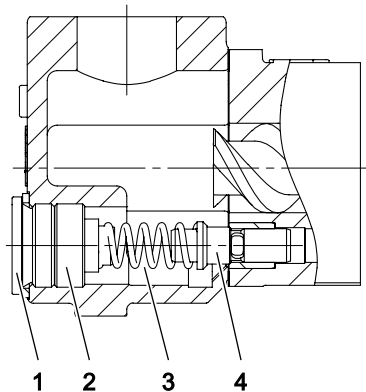

- 1 Screw plug
- 2 Adjusting screw
- 3 Pressure spring
- 4 Valve body

Fig. 10: Overflow valve



WARNING

Risk of injury through emitted pumped liquid.

Pumped liquids can be hot, poisonous, combustible and caustic.

- ▶ Wear personal protective clothing during all the work. Ensure face protection.
- ▶ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.

Requirement:

- ✓ Pressure-side pressure gauge installed

1. ➤ Switch on the pump unit and remove the screw plug **1** of the overflow valve.
2. ➤ Increase the supply pressure step-by-step to check the opening pressure of the overflow valve. Keep an eye on the pressure gauge and make sure that the operating limits are observed.
⇒ The opening pressure is reached, when the displayed pressure falls.
3. ➤ Turn the adjusting screw **2** to set the opening pressure:
Turning clockwise: Increase the opening pressure
Turning counter-clockwise: Reduce the opening pressure
4. ➤ Repeat Steps 2 and 3 until the desired opening pressure is reached.
5. ➤ Tighten the screw plug **1** again.

10.3.4 Switching off the pump unit

Personnel qualification: ☐ Trained personnel

ATTENTION

Seal damage through pressurizing during standstill.

- ▶ Ensure that the maximum permissible system pressure is not exceeded.

1. ▶ Switch off the motor.
2. ▶ Close the pressure-side shut-off device.

10.4 Decommissioning

10.4.1 Decommissioning the pump

Decommissioning is an operation interruption that requires different measures depending on the scope and duration of the interruption as well as the properties of the pumped liquid.

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter <input type="checkbox"/> Electrician |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Collection tank |



WARNING

Risk of injury through emitted pumped liquid.

Pumped liquids can be hot, poisonous, combustible and caustic.

- ▶ Wear personal protective clothing during all the work. Ensure face protection.
- ▶ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.

ATTENTION

Damage to equipment through excessively fast temperature change.

- ▶ Subject the pump only to slow temperature changes.
- ▶ Under no circumstances heat the pump with an open flame.

—▶ Carry out the following measures during operation interruptions:

| Scope of the operation interruption | Measure |
|---|---|
| <input type="checkbox"/> Shutting down the pump for a longer period | —▶ Depending on the pumped liquid |
| <input type="checkbox"/> Draining the pump | —▶ Close the pressure-side and suction-side shut-off devices. |
| <input type="checkbox"/> Dismantling the pump | —▶ Disconnect the motors from the power supply and secure against being switched back on. |
| <input type="checkbox"/> Storing the pump | —▶ Observe measures for storing and preservation ↪ Transportation, storage, Page 12. |

Tab. 7: Measures during operation interruptions

11 Maintenance

10.5 Recommissioning

| Behaviour of the pumped liquid | Duration of the operation interruption | |
|--|--|--------------------------|
| | Short | Long |
| <input type="checkbox"/> Solids sediment | —> Rinse the pump. | —> Rinse the pump. |
| <input type="checkbox"/> Congealed/frozen | —> Heat or drain the pump. | —> Drain the pump. |
| <input type="checkbox"/> No corrosive burden | | |
| <input type="checkbox"/> Congealed/frozen | —> Heat or drain the pump. | 1. —> Drain the pump. |
| <input type="checkbox"/> Corrosive burden | | 2. —> Preserve the pump. |
| <input type="checkbox"/> Remains liquid | — | — |
| <input type="checkbox"/> No corrosive burden | | |
| <input type="checkbox"/> Remains liquid | — | 1. —> Drain the pump. |
| <input type="checkbox"/> Corrosive burden | | 2. —> Preserve the pump. |

Tab. 8: Measures depending on the behaviour of the pumped liquid

—> Drain the pump via the pressure line, suction line, vent screws and screw plugs.

10.5 Recommissioning

10.5.1 Recommissioning the pump

—> Depending on the extent and duration of the interruption of operation, carry out steps as for commissioning ↪ Commissioning, Page 20.

11 Maintenance

11.1 Dangers during maintenance



The following safety instructions must be observed strictly:

- ☐ Have all work carried out only by authorized qualified personnel.
- ☐ Before beginning work, let the pump unit cool down slowly to the ambient temperature. Avoid rapid temperature changes.
- ☐ Pumped liquids can be hot, poisonous, combustible and caustic. Use corresponding protective equipment.
- ☐ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.
- ☐ Ensure that the collection tank for discharging pumped liquid is sufficiently large.
- ☐ Observe the operating instructions and data sheets of the components.

11.2 Required maintenance

The service life depends on the observance of the operating conditions of the pump and the requirements from the operating instructions of the components.

| Component | Required maintenance | Cycle |
|-------------------------------|--|-----------|
| Pump | <input type="checkbox"/> Visual inspection <input type="checkbox"/> Acoustic inspection | 4 weeks |
| Leakage vent hole | <input type="checkbox"/> Visual inspection <input type="checkbox"/> If required, clean | 4 weeks |
| Filter/strainer (system side) | <input type="checkbox"/> Check of the suction-side pressure | 2 weeks |
| Overflow valve | <input type="checkbox"/> Function test | ≤ 5 years |

Tab. 9: Required maintenance

11.3 Ball bearing (inner bearing)

The ball bearings used are lubricated by the pumped liquid. Maintenance is therefore not required. The manufacturer recommends renewing the ball bearings every 20,000 operating hours. When using the pump in lubrication oil applications a bearings replacement at the latest after 5 years (40000 h) is sufficient.

11.4 Ball bearing (outer bearing)

The ball bearings used are lifetime lubricated. Maintenance is therefore not required. The manufacturer recommends renewing the ball bearings every 20,000 operating hours.

11.5 Maintaining the pump

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots <input type="checkbox"/> Face protection |



WARNING

Risk of injury through emitted pumped liquid.

Pumped liquids can be hot, poisonous, combustible and caustic.

- ▶ Wear personal protective clothing during all the work. Ensure face protection.
- ▶ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.

1. ▶ Check the pump visually and acoustically every four weeks.
2. ▶ If there are signs of wear, eliminate the cause ↪ Servicing, Page 27.

12 Servicing

12.1 Dangers during servicing



The following safety instructions must be observed strictly:

- ☐ Have all work carried out only by authorized qualified personnel.
- ☐ Before beginning work on the pump ensure that the electrical power supply is deenergized and is secured against being switched back on.
- ☐ Before beginning work, let the pump unit cool down slowly to the ambient temperature. Avoid rapid temperature changes.
- ☐ Pumped liquids can be hot, poisonous, combustible and caustic. Use corresponding protective equipment.
- ☐ Ensure that the pump is depressurized and that shut-off devices are not operated uncontrolled.
- ☐ Collect any discharging pumped liquid safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.
- ☐ Ensure that the collection tank for discharging pumped liquid is sufficiently large.
- ☐ Observe the tightening torques ↪ Appendix, Page 54.
- ☐ Observe the operating instructions and data sheets of the components.

12.2 Wear

12.2.1 Signs of wear

The following table lists signs of progressive wear of individual pump elements:

| Finding | Cause | Elimination |
|--|---|--|
| Increased running noises | Incipient damage to bearing | —► Replace the ball bearing. |
| Increased leaking | Incipient damage to seal | —► Replace the shaft seal. |
| Deposits at the shaft seal (only applies for mechanical seal) | Low-volatile liquids | —► Clean the mechanical seal. |
| Increased play in the coupling | Advanced wear of the coupling intermediate ring | —► Replace the coupling intermediate ring. |
| Reduction in the delivery rate or pressure under constant operating conditions | Advanced wear of screws and housing | —► Replace the pump. |

Tab. 10: Signs of wear

12.2.2 Shaft seal

Shaft seals are subject to natural wear that depends strongly on the respective conditions of use. General statements about the service life can therefore not be given.

Mechanical seal

In case of strong soiling through solidified or sticky leakage residues the manufacturer recommends that you dismantle the mechanical seal completely and clean it, together with the inner surfaces of the pump housing.

12.3 Replacing the coupling

12.3.1 Removing the coupling

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Extractor |




WARNING

Risk of injury and damage to equipment through falling and toppling parts.


- Use intact and correctly dimensioned hoisting equipment in accordance with the total weight to be transported.
- Select the lift points for the hoisting equipment in accordance with the centre of gravity and the weight distribution.
- Use at least two load ropes.
- In the case of vertical transportation secure the motor against tipping.
- Do not stand under raised loads.

Requirement:

- ✓ Pump unit disconnected from the electrical power supply, deenergized and secured against being switched back on

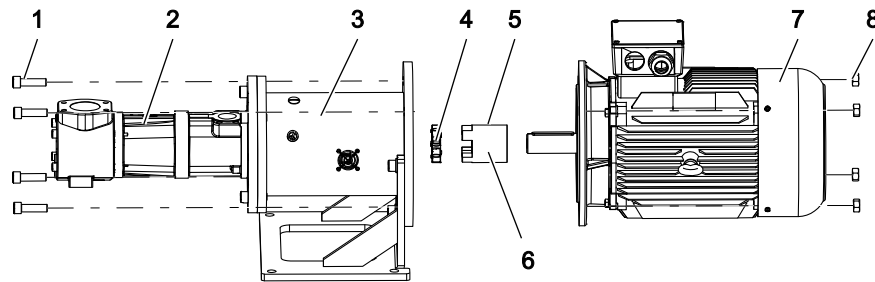

1. ➤ Secure the motor with eye bolts/hoisting equipment in such a way that the motor can be pulled out exactly axially.
2. ➤ Remove the socket screws 1 between the motor 7 and the pump bracket 3 and pull off the motor.
3. ➤ Loosen the fixing screw 6 at the motor-side coupling half 5.
4. ➤ Remove the coupling intermediate ring 4 and pull off the coupling half using an extractor.

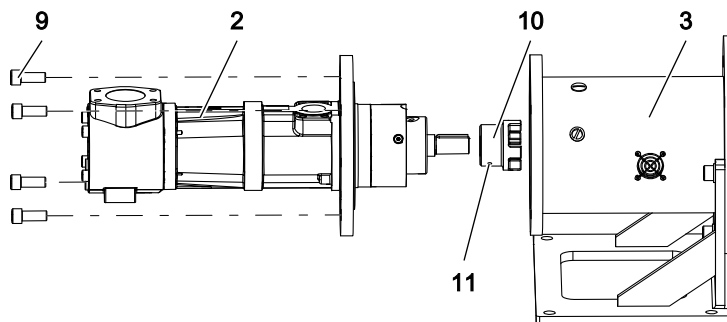

5. ➤ Secure the pump 2 with eye bolts/hoisting equipment in such a way that the pump bracket can be pulled exactly axially from the pump.
6. ➤ Remove the socket screws 9 between the pump 2 and pump bracket 3 and pull off the pump bracket.
7. ➤ Loosen the fixing screw 11 at the pump-side coupling half 10 and pull off the coupling half using an extractor.

12.3.2 Installing the coupling

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Measuring stick <input type="checkbox"/> Lubricating grease <input type="checkbox"/> Torque wrench |



WARNING

Hot surface.

Touching hot coupling halves results in burns.

- Wear personal protective equipment during all the work. Be sure to wear protective gloves.

Note The coupling halves can be mounted more easily if they are heated to 80 °C – 100 °C.


Requirement:

- ✓ Position of the pump in the pipe system secured with eye bolts/hoisting equipment


1. ➤ Grease the shaft of the pump with lubricating grease.

12 Servicing


12.4 Replacing the mechanical seal (inner bearing)

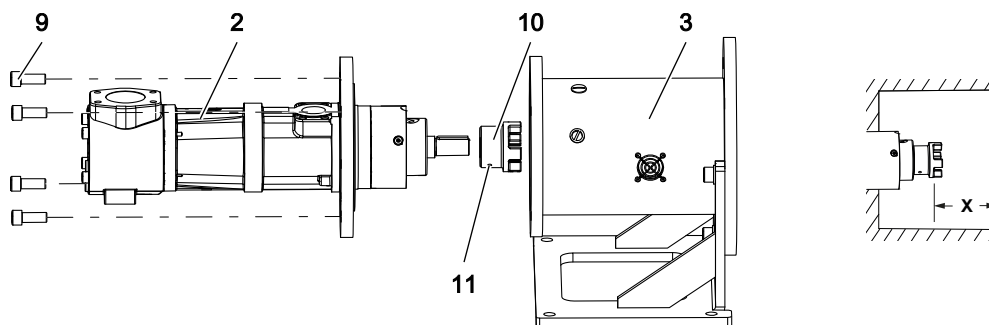

2. ➤ Ensure that the fixing screw **11** of the pump-side coupling half **10** is loosened.
3. ➤ Slide the pump-side coupling half onto the shaft until it stops and tighten the fixing screw.
4. ➤ Tighten the socket screws **9** between the pump **2** and pump bracket **3** with torque.
5. ➤ Measure and write down the distance **X** between the face of the coupling claws and the fitting surface of the pump bracket.

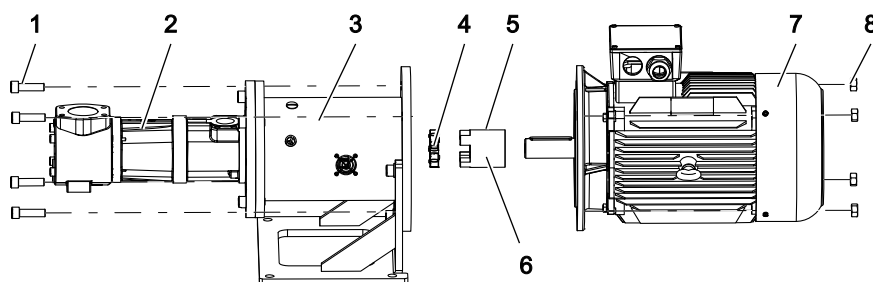

6. ➤ Ensure that the fixing screw **6** of the motor-side coupling half **5** is loosened.
7. ➤ Slide the motor-side coupling half onto the shaft end of the motor **7**.

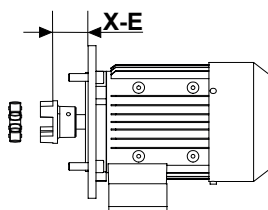

8. ➤ Check the distance between the face of the coupling teeth pump-side and the fitting surface of the motor flange. The distance has to be adjusted to the measured value **X** minus coupling distance **E**, see table of limit values for aligning the shaft coupling ↗ Connection, Page 18.
9. ➤ Tighten the fixing screw **6** on the motor-side coupling half **5** and insert the coupling intermediate ring **4**.
10. ➤ Secure the motor with eye bolts/hoisting equipment so that the motor can be pushed exactly into the pump bracket and the coupling halves interlock.
11. ➤ Tighten the socket screws **1** between the motor and pump bracket with torque.


12.4 Replacing the mechanical seal (inner bearing)

12.4.1 Removing the mechanical seal


| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Plastic hammer <input type="checkbox"/> Extractor |

Requirement:

✓ Coupling removed

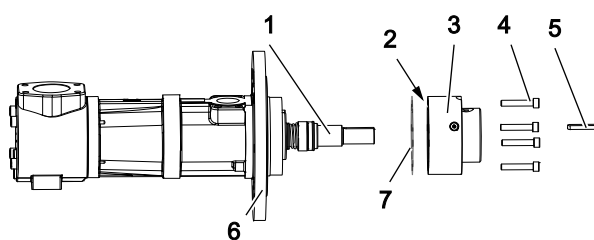


1. ➔ Remove the feather key **5** from the main screw **1**.
2. ➔ Remove the socket screws **4** and seal housing **3**.
3. ➔ Remove the flat gasket **7** and carefully clean the fitting surface of the seal housing.
4. ➔ **Attention:** Ensure that the adapter sleeve **2** is not damaged.

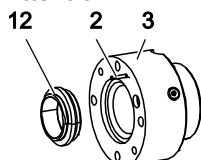


Mechanical seal standard/hard material: Press the stationary seal ring **12** from the seal housing.

-or-

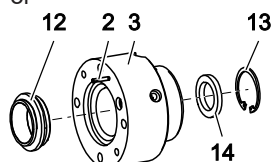


Mechanical seal with throttle ring: Remove the circlip **13** and throttle ring **14** and press the stationary seal ring **12** from the seal housing.

-or-

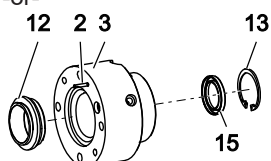

Mechanical seal with quench: Remove the circlip **13** and radial shaft seal ring **15** and press the stationary seal ring **12** from the seal housing.

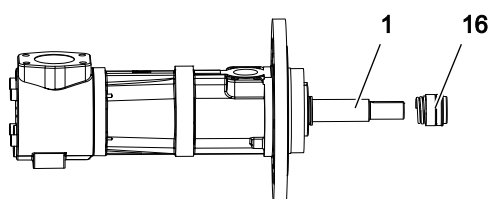

5. ➔ **Mechanical seal standard/with throttle ring/with quench:** Remove the rotary seal ring **16** from the main screw **1**.


-or-

Mechanical seal of hard material (without figure): Loosen the fixing screws of the mechanical seal (number depends on size). Remove the rotary seal ring **16** from the main screw **1**.


12.4.2 Installing the mechanical seal

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Tool set mechanical seal or radial shaft seal ➔ Spare parts, Page 50 <input type="checkbox"/> Torque wrench <input type="checkbox"/> Silicone grease |


12.4 Replacing the mechanical seal (inner bearing)

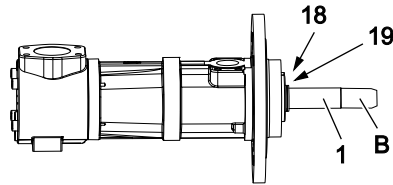

1. ➔ Ensure that all parts of the mechanical seal are dismantled so that the supporting ring **18** with circlip **19** is visible on the shaft of the main screw **1**.
2. ➔ Clean the main screw around the mechanical seal carefully and grease it, and push the mounting sleeve main screw **B** onto the main screw.


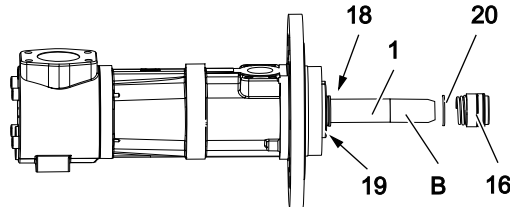


3. ➔ **Mechanical seal standard/with throttle ring/with quench:** Slide the supporting ring **20** and the rotary seal ring **16** onto the main screw to the end.
-or-
Mechanical seal of hard material (without figure): Loosen the fixing screws of the mechanical seal (number depends on size). Slide the supporting ring **20** and rotary seal ring **16** onto the main screw until it stops and retighten the fixing screws.
4. ➔ **Attention:** When pressing the components into the seal housing ensure that the adapter sleeve **21** is not damaged. Take the recess into account.

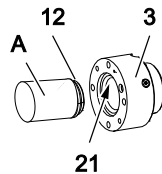

Mechanical seal standard/hard material: Use the mounting arbour stationary seal ring **A** to press the stationary seal ring **12** with mounted O-ring into the seal housing **3**.



-or-

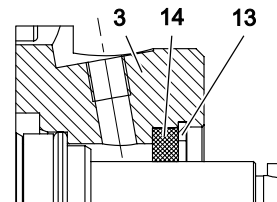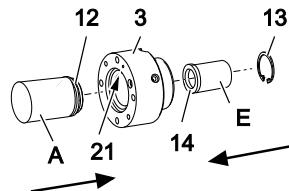

Mechanical seal with throttle ring Use the mounting arbour radial shaft seal ring **E** to press the throttle ring **14** into the seal housing **3** and insert the circlip **13**.

Use the mounting arbour stationary seal ring **A** to press the stationary seal ring **12** with mounted O-ring into the seal housing.


-or-

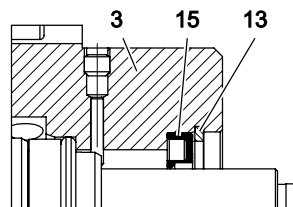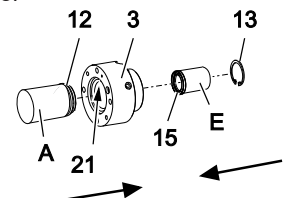

Mechanical seal with quench Use the mounting arbour radial shaft seal ring **E** to press the radial shaft seal ring **15** into the seal housing **3** and insert the circlip **13**.

Use the mounting arbour stationary seal ring **A** to press the stationary seal ring **12** with mounted O-ring into the seal housing.

5. ➔ Clean the sliding surfaces of the mechanical seal carefully and grease with silicone grease.

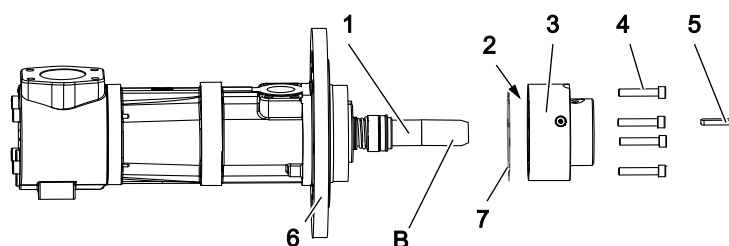

6. ➤ Position the flat gasket 7 at the seal housing.
7. ➤ **Attention:** Ensure that the spring ring 2 is not damaged while mounting the seal housing. Take the holes in the pump flange into account.
Carefully slide the seal housing with flat gasket until the pump flange stops at the main screw.
8. ➤ Tighten the socket screws 4 between the seal housing and pump with torque.
9. ➤ Remove the mounting sleeve main screw B and mount the feather key 5.


12.5 Replacing the radial shaft seal (inner bearing)

12.5.1 Removing the radial shaft seal


| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Tool set, radial shaft seal ➤ Spare parts, Page 50 |

Requirement:

- ✓ Pump unit disconnected from the electrical power supply, deenergized and secured against being switched back on
- ✓ Coupling removed

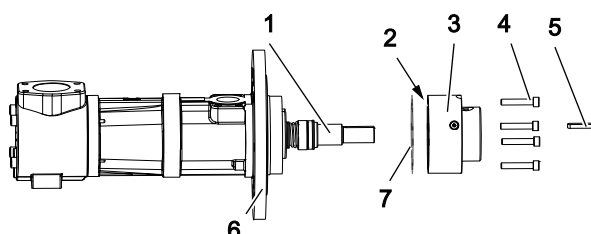

1. ➤ Remove the feather key 5 from the main screw 1.
2. ➤ Remove the socket screws 4 and seal housing 3.

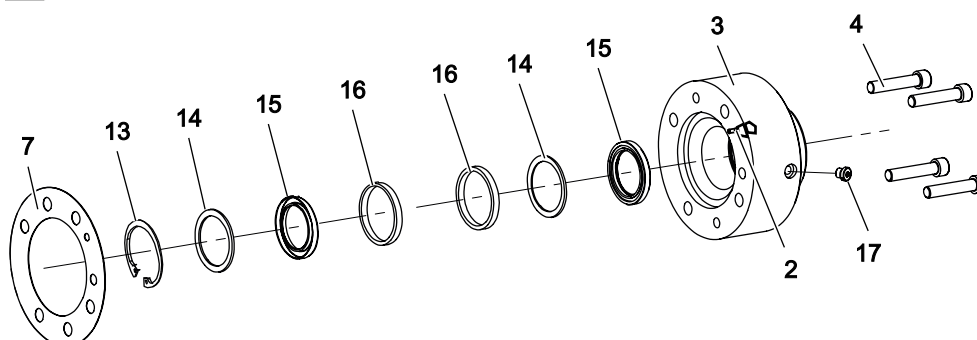


3. ➤ Remove the circlip 13.
4. ➤ Press the radial shaft seal from the seal housing 3 with the mounting arbour radial shaft seal ring E. (The sequence of the components can deviate from the figure.)
5. ➤ Remove the flat gasket 7 and carefully clean the fitting surface of the seal housing.



12.5.2 Installing the radial shaft seal

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Tool set, radial shaft seal ↗ Spare parts, Page 50 <input type="checkbox"/> Torque wrench <input type="checkbox"/> Thread sealant (for example Loctite 572) <input type="checkbox"/> Molybdenum disulphide paste (for example Fenkart T4) |

Note The thread sealant serves during installation of the radial shaft seal as a lubricant, and after it has cured as an anti-rotation measure.

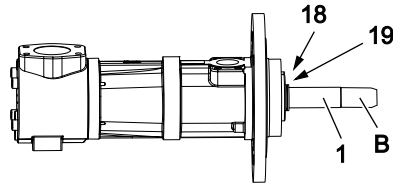


1. ➔ Ensure that all parts of the radial shaft seal are dismantled so that the supporting ring **18** with circlip **19** are visible on the shaft of the main screw **1**.
2. ➔ Clean the main screw around the radial shaft seal carefully and grease it, and push the mounting sleeve main screw **B** onto the main screw.
3. ➔ Carefully clean the fitting surface of the radial shaft seal in the seal housing **3**.
4. ➔ Apply thread sealant (for example Loctite 572). Ensure that no thread sealant comes into contact with the sealing lip.

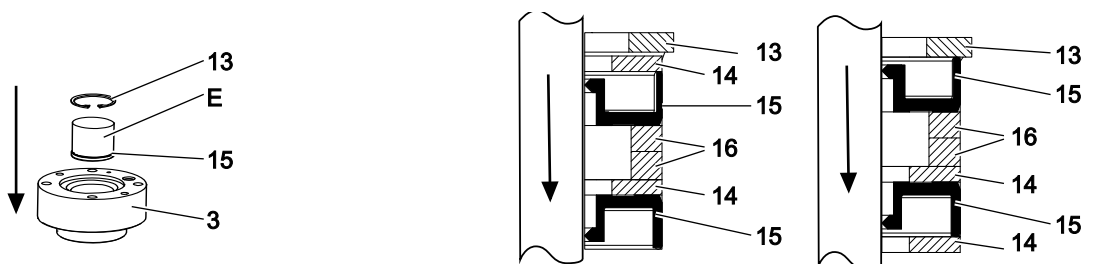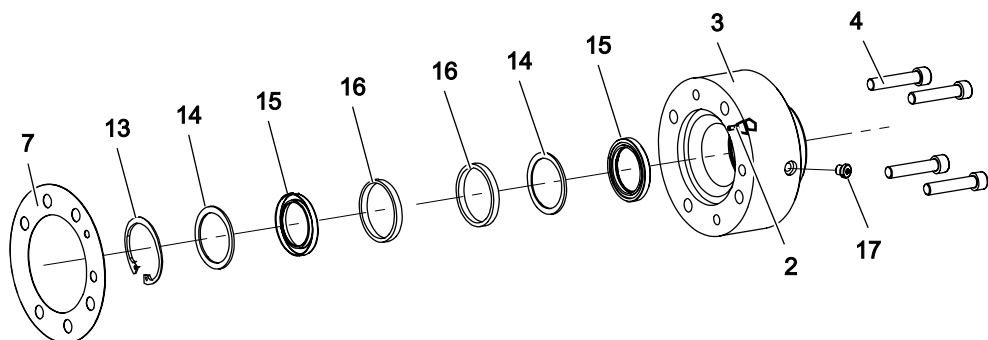

5. ➔ Ensure that the mounting arbour radial shaft seal ring **E** contacts the support of the radial shaft seal ring **15** completely and that there are no sharp edges in the area of the sealing lip.
6. ➔ **Attention:** Take the mounting direction of both radial shaft seal rings **15** into account. Supporting rings **14** of the radial shaft seal can be positioned differently. Use the mounting arbour to carefully press the components of the radial shaft seal into the seal housing in accordance with the sectional view (radial shaft seal ring **15** (2x), supporting ring **14** (2x), distance ring **16** (2x)). In the case of excessive resistance apply additional thread sealant.
7. ➔ Remove the mounting arbour **E** and mount the circlip **13**.
8. ➔ Fill the intermediate space of the radial shaft seal rings with molybdenum disulphide paste.

12.6 Replacing the ball bearing and screw set (inner bearing)

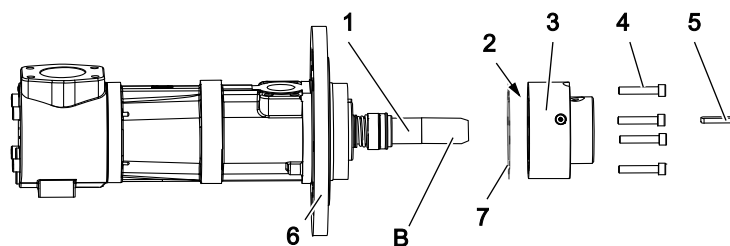

9. ➤ Position the flat gasket **7** on the seal housing.
10. ➤ **Attention:** Ensure that the adapter sleeve **2** is not damaged while mounting the seal housing. Take the recess into account.
Slide the seal housing **3** onto the main screw until it stops.
11. ➤ Tighten the socket screws **4** between the seal housing and pump with torque.
12. ➤ Remove the mounting sleeve main screw **B** and mount the feather key **5**.


12.6 Replacing the ball bearing and screw set (inner bearing)

12.6.1 Removing the ball bearing and screw set

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Plastic hammer <input type="checkbox"/> Extractor |


Requirement:

- ✓ Shaft seal removed

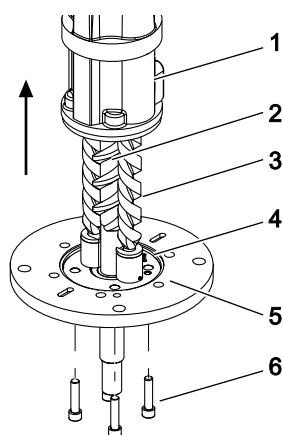

1. ➤ Clamp the pump at the main screw. Ensure that the shaft is not damaged in the process.
2. ➤ Remove the socket screws **6** at the flange cover **5**.
3. ➤ Lift the pump housing **1** off the flange cover. Hold the idle screws **3** in the process.
4. ➤ Remove the idle screws.


12.6 Replacing the ball bearing and screw set (inner bearing)

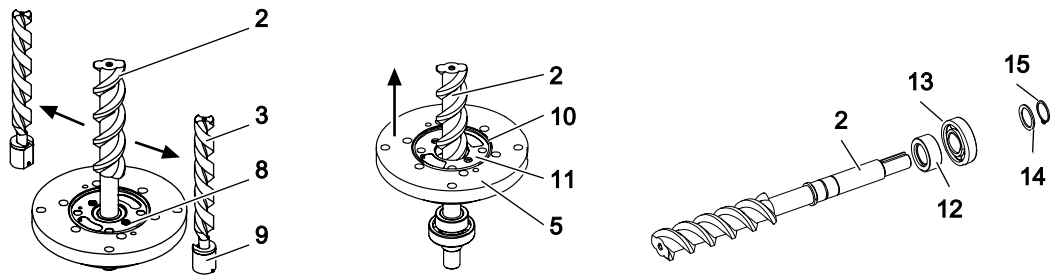


5. ➤ Take the bearing bush set **9**, consisting of bearing bush and segment washer, off the idle screws and keep it for mounting.
6. ➤ Remove the edge sealing rings **8** from the flange cover.
7. ➤ Remove the flat gasket **11** at the flange cover.
8. ➤ **Series CLL:** Remove the O-ring **10** from the flange cover.
9. ➤ Lift the flange cover from the main screw.
10. ➤ Unclamp the main screw **2**, rotate it by 180° and clamp again.
11. ➤ Remove the circlip **15** and supporting ring **14**.
12. ➤ Use an extractor to pull the ball bearing **13** off the main screw.
13. ➤ Pull off the balancing cylinder **12**.

12.6.2 Installing the ball bearing and screw set

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Mounting sleeve ball bearing <input type="checkbox"/> Torque wrench |

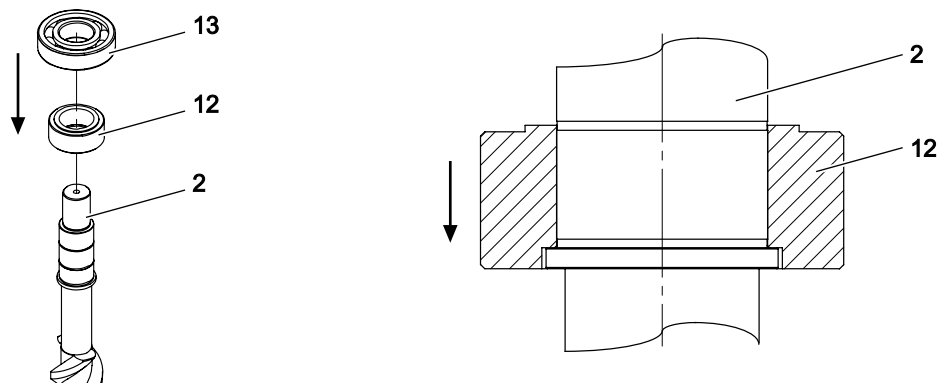


1. ➤ Press the balancing cylinder **12** onto the shaft of the main screw **2**.
2. ➤ Press on the ball bearing **13**.

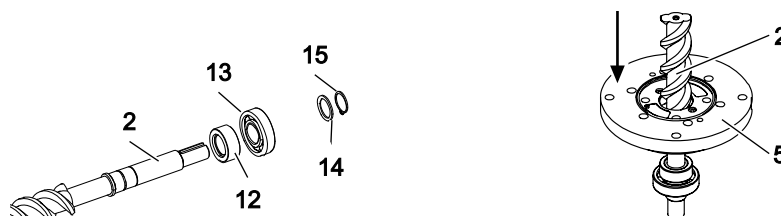

3. ➤ Slide the supporting ring **14** onto the main screw and mount the circlip **15**.
4. ➤ Unclamp the main screw, rotate it by 180° and clamp again.
5. ➤ Mount the flange cover **5** onto the main screw.

12.7 Replacing the mechanical seal and ball bearing (outer bearing)

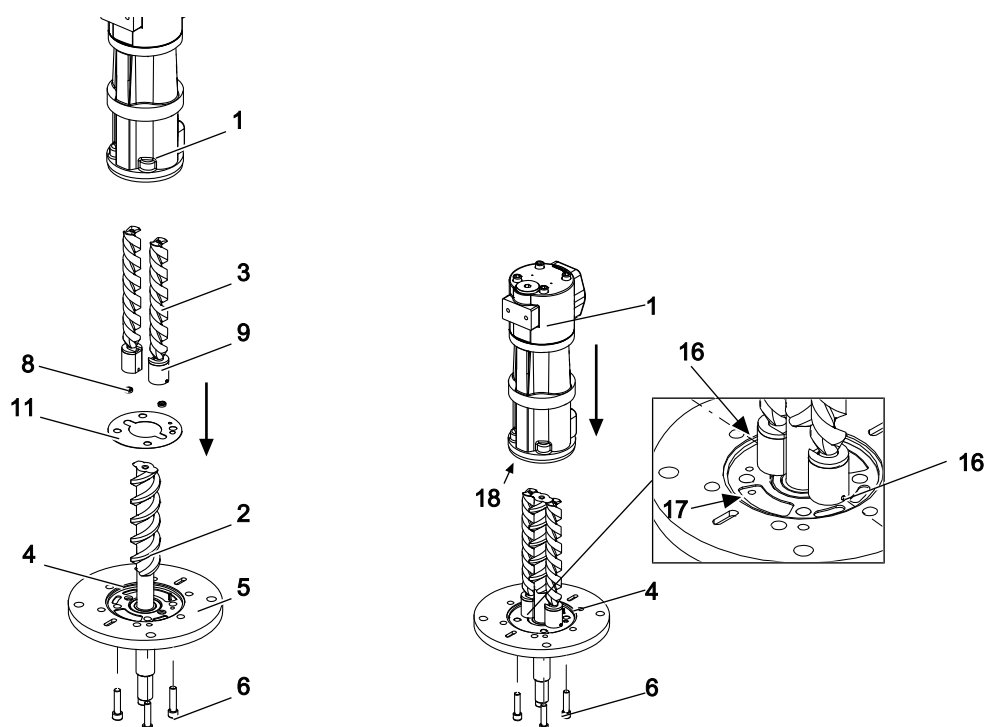

6. ➔ Clean the fitting surfaces carefully, position the flat gasket **11** in the flange cover.
7. ➔ Position the edge sealing rings **8** in the flange cover. Take the recesses for the edge sealing rings into account.
8. ➔ Mount the bearing bush set **9**, consisting of the bearing bush and segment washer, on the shafts of the idle screws **3**.
9. ➔ Place the idle screws left and right of the main screw so that the fitting surfaces of the bearing bushes contact the shaft of the main screw. Observe the alignment of the positioning pins **16**.
10. ➔ **Attention:** Ensure that the adapter sleeve **18** is not damaged when mounting the pump housing. Take the hole **17** into account.
Slide the pump housing **1** over the pre-mounted idle screws and main screw.
11. ➔ Tighten the socket screws **6** with torque.
12. ➔ **Series CLL:** Mount and lightly grease the O-ring **4** in the flange cover.


12.7 Replacing the mechanical seal and ball bearing (outer bearing)

12.7.1 Removing the mechanical seal and ball bearing

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Tool set, mechanical seal ➔ Spare parts, Page 50 <input type="checkbox"/> Extractor |

Requirement:


- ✓ Pump unit disconnected from the electrical power supply, deenergized and secured against being switched back on
- ✓ Coupling removed

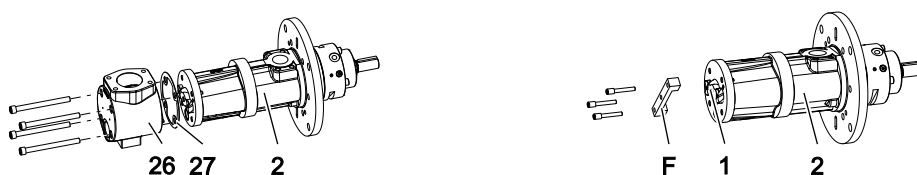

1. ➔ Remove the suction housing **26** from the pump housing **2**, remove the flat gasket **27** and carefully clean the fitting surfaces.

12.7 Replacing the mechanical seal and ball bearing (outer bearing)


2. ➔ Secure the position of the main screw **1** in the pump housing **2**. To do so, mount the main screw stop for the outer bearing **F** to the pump housing.

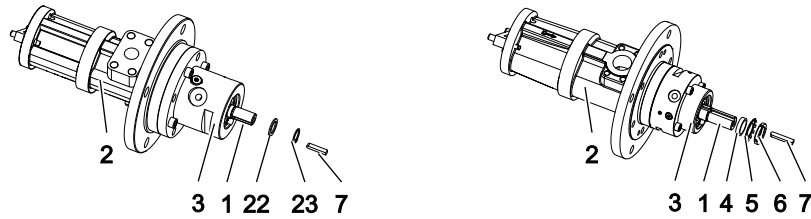

3. ➔ Remove the feather key **7** from the main screw **1**.
 4. ➔ **Size 32 – 42:** Remove the circlip **23** and supporting ring **22** from the main screw.
 -or-
Size 160 – 660, 880: Remove the groove nut **6**, locking plate **5** and distance ring **4** from the main screw.




5. ➔ Remove the socket screws **9** and seal housing **3** with the extractor from the pump flange.
 6. ➔ **Size 32 – 42:** Remove the O-ring.
 -or-
Size 55 – 118, 160 – 660:
 Remove the flat gasket **8** and carefully clean the fitting surface of the seal housing.
 7. ➔ Remove the circlip **13**, pull the ball bearing **12** with the extractor from the seal housing **3** and remove the supporting ring **11**.
 8. ➔ **Size 370 – 450:** Remove the seal (Nilos ring) **10**.
 9. ➔ **Attention:** Ensure that the adapter sleeve/threaded pin is not damaged.



Mechanical seal standard/hard material:


Press the stationary seal ring **14** from the seal housing.

-or-

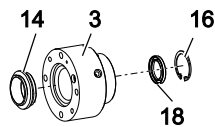

Mechanical seal with quench:

Remove the circlip **16** and radial shaft seal ring **18** and press the stationary seal ring **14** from the seal housing.

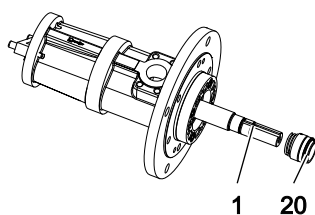

10. **Mechanical seal standard/with quench:**

Remove the rotary seal ring 20 from the main screw.


-or-

Mechanical seal of hard material (without figure):

Loosen the fixing screw of the mechanical seal (quantity depends on size) and remove the rotary seal ring from the main screw.

12.7.2 Installing the mechanical seal and ball bearing

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Tool set, mechanical seal ↗ Spare parts, Page 50 <input type="checkbox"/> Torque wrench <input type="checkbox"/> Silicone grease |

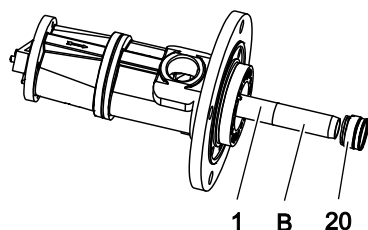

1. Clean the main screw 1 carefully in the area of the mechanical seal and grease it.

2. Slide the mounting sleeve main screw B onto the main screw.

3. **Mechanical seal standard/with quench:**


Slide the rotary seal ring 20 onto the main screw until it stops.

-or-

Mechanical seal hard material:

Loosen the fixing screws of the mechanical seal (quantity depends on size). Slide the rotary seal ring onto the main screw until it stops and retighten the fixing screws.



4. **Attention:** When pressing the components into the seal housing ensure that the adapter sleeve 21 is not damaged. Take the recess into account.

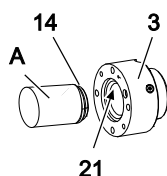

Mechanical seal standard/hard material::

Use the mounting arbour radial shaft seal ring A to press the stationary seal ring 14 with mounted O-ring into the seal housing 3.

-or-

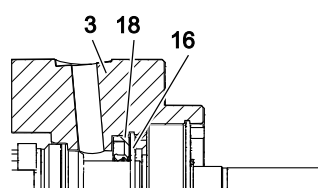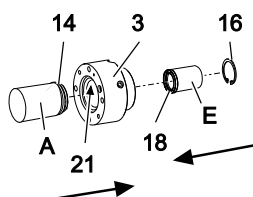

Mechanical seal with quench:


Use the mounting arbour radial shaft seal ring E to press the radial shaft seal ring 18 into the seal

12.8 Replacing the screw set (outer bearing)

housing **3** and mount the circlip **16**.

Use the mounting arbour stationary seal ring **A** to press the stationary seal ring **14** with mounted O-ring into the seal housing.

5. ➤ Clean the sliding surfaces of the mechanical seal carefully and grease with silicone grease.

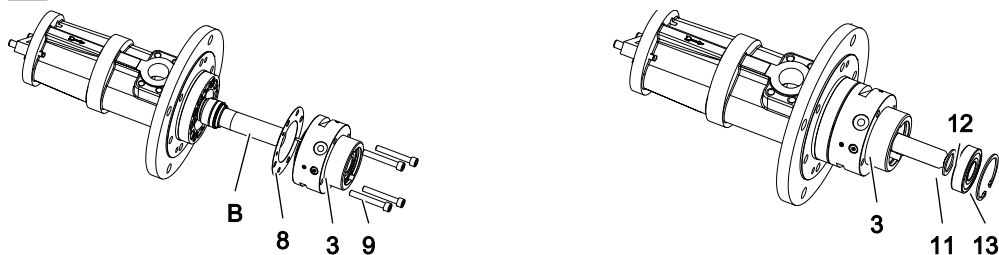

6. ➤ **Size 32 – 42:** Insert the O-ring in the seal housing.

-or-

Size 55 – 118, 160 – 660: Position the flat gasket **8** at the seal housing **3**.

7. ➤ **Attention:** Ensure that the spring ring is not damaged while mounting the seal housing. Take the holes in the pump flange into account.


Carefully slide the seal housing with flat gasket until the pump flange stops at the main screw.

8. ➤ Remove the mounting sleeve main screw **B**.

9. ➤ Tighten the socket screws **9** between the seal housing and pump with torque.

10. ➤ **Size 370 – 450:** Insert the seal (Nilos ring).

11. ➤ Insert the supporting ring **11** and press the ball bearing **12** with mounting sleeve ball bearing **C** into the seal housing and mount the circlip **13**.

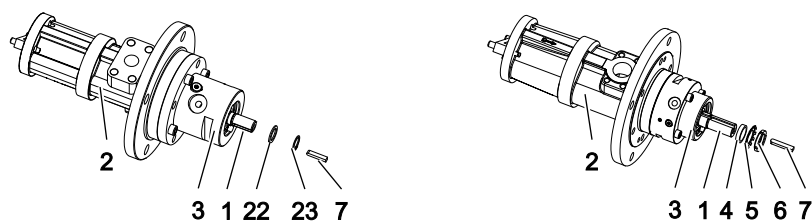


12. ➤ **Size 32 – 42, 55 – 118:** Mount the supporting ring **22** and circlip **23** onto the main screw.

-or-

Size 160 – 880: Mount the distance ring **4**, locking plate **5**, groove nut **6** onto the main screw.

13. ➤ Mount the feather key **7**.

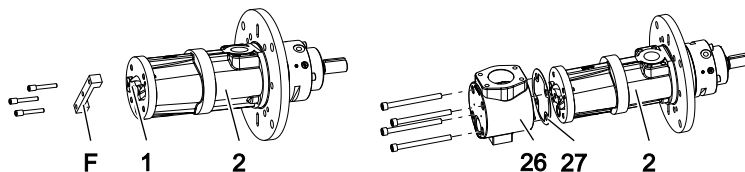

14. ➤ Remove the main screw stop for the outer bearing **F** from the pump housing.

15. ➤ Mount the suction housing **26** with flat gasket **27** on the pump housing **2**.


12.8 Replacing the screw set (outer bearing)

12.8.1 Removing the screw set




| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Plastic hammer <input type="checkbox"/> Extractor |

Requirement:

- ✓ Cartridge pump removed
- ✓ Shaft seal removed

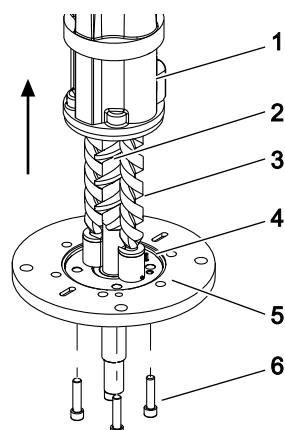

1. ➤ Clamp the pump at the main screw 2. Ensure that the shaft is not damaged in the process.
2. ➤ Remove the socket screws 6 at the flange cover 5.
3. ➤ Lift the cartridge housing 1 of the flange cover. Hold the idle screws 3 in the process.
4. ➤ Remove the idle screws.

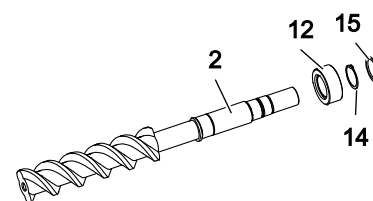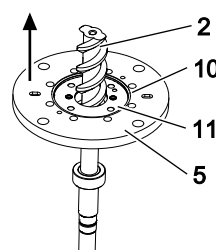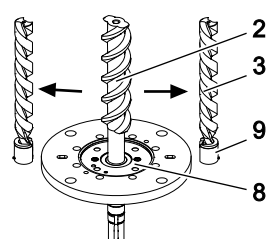

5. ➤ Take the bearing bush set 9, consisting of bearing bush and segment washer, off the idle screws and keep it for mounting.
6. ➤ Remove the edge sealing rings 8 from the flange cover.
7. ➤ Remove the flat gasket 11 at the flange cover.
8. ➤ **Series CLL:** Remove the O-ring 10 from the flange cover.
9. ➤ Lift the flange cover from the main screw.
10. ➤ Unclamp the main screw 2 and rotate it by 180° and clamp it again. Remove the supporting ring 14 and circlip 15 from the main screw. Pull the balancing cylinder 12 from the main screw.


12.8.2 Installing the screw set

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Mounting sleeve ball bearing |



Requirement:

- ✓ Cartridge pump removed
- ✓ Ball bearing removed
- ✓ Shaft seal removed

12.8 Replacing the screw set (outer bearing)

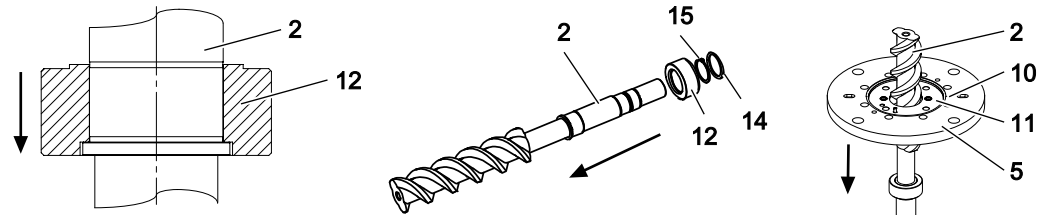

1. ➤ Press the balancing cylinder **12** onto the shaft of the main screw **2**. Slide the circlip ring **15** and supporting ring **14** onto the main screw.
2. ➤ Unclamp the main screw, rotate it by 180° and clamp again.
3. ➤ Mount the flange cover **5** onto the main screw.

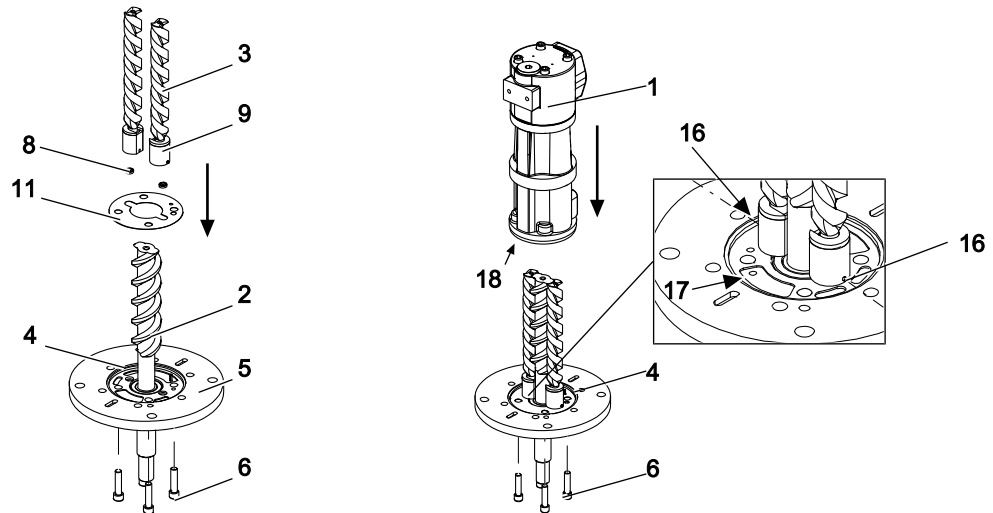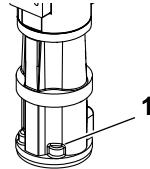

4. ➤ Clean the fitting surfaces carefully, position the flat gasket **11** in the flange cover.
5. ➤ Position the edge sealing rings **8** in the flange cover. Take the recesses for the edge sealing rings into account.
6. ➤ Mount the bearing bush set **9**, consisting of the bearing bush and segment washer, on the shafts of the idle screws **3**.
7. ➤ Place the idle screws left and right of the main screw so that the fitting surfaces of the bearing bushes contact the shaft of the main screw. Observe the alignment of the positioning pins **16**.
8. ➤ **Attention:** Ensure that the adapter sleeve **18** is not damaged when mounting the cartridge housing. Take the hole **17** into account.
Slide the cartridge housing **1** over the pre-mounted idle screws and main screw.
9. ➤ Tighten the socket screws **6** with torque.
10. ➤ **Series CLL:** Mount and lightly grease the O-ring **4** in the flange cover.

13 Disposal

13.1 Dismantling and disposing of the pump

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Face protection <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Solvents or industrial cleaners suitable for the pumped liquid <input type="checkbox"/> Collection tank |



WARNING

Danger of poisoning and environmental damage through residues.

- ▶ Wear personal protective clothing during all the work. Ensure face protection.
- ▶ Before disposal collect any pumped liquid still present safely and dispose of it in an environmentally compatible manner in accordance with the applicable local regulations.
- ▶ Before disposing neutralize the residues.

Requirement:

- ✓ Disconnect the pump unit from the power supply and secure it against being switched back on
 - ✓ Pump unit cooled down to the ambient temperature and disconnected from the pipe system
 - ✓ Pump emptied completely
 - ✓ Pump placed at a location suitable for dismantling
1. ▶ Dismantle the pump and disassemble it into its individual parts.
 2. ▶ Clean residues of the pumped liquid from the individual parts.
 3. ▶ Separate sealing elements made of elastomers and ceramics (SiC) from the pump and dispose of them in separately.
 4. ▶ Recycle iron parts.

14 Troubleshooting

14.1 Possible faults

Faults can have different causes. The following tables list the symptoms of a fault, the possible causes and measures for troubleshooting.

| Identification | Fault |
|----------------|-----------------------|
| 1 | No pump suction |
| 2 | Delivery rate too low |
| 3 | Pump too loud |
| 4 | Motor overload |
| 5 | Uneven delivery rate |
| 6 | Pump has seized |
| 7 | Shaft seal leaks |

14.2 Troubleshooting

| Fault identification | Cause | Remedy |
|----------------------|-------------|--|
| 1 | – – – – – | Pump suction line closed |
| | | ▶ Check the shut-off devices. If required, open. |
| 1 | 2 3 – 5 – – | Parts soiled (filter, suction line, suction valve, strainer) |
| | | ▶ Clean parts. |

14 Troubleshooting

14.2 Troubleshooting

| Fault identification | | | | | | | Cause | Remedy |
|----------------------|---|---|---|---|---|---|--|---|
| 1 | 2 | 3 | – | 5 | – | – | Suction head too high | <p>—> Reduce the level difference.</p> <p>-or-</p> <p>Reduce the line length.</p> <p>-or-</p> <p>Increase the line cross-section.</p> <p>-or-</p> <p>Heat up the pumped liquid.</p> <p>-or-</p> <p>Install a filter / strainer with a larger mesh width. Ensure that the permissible mesh width is not exceeded.</p> |
| 1 | – | 3 | – | – | – | – | Level in the intake container too low | <p>—> Fill the intake container.</p> |
| 1 | – | – | – | – | – | – | Too little pumped liquid in the pump | <p>—> Fill the pump with pumped liquid.</p> |
| 1 | – | – | – | – | – | – | Incorrect pump direction of rotation | <p>—> Swop the two electrical connection phases ↗ Connection, Page 18.</p> |
| – | – | – | 4 | – | – | – | Differential pressure too high | <p>—> Reduce the differential pressure.</p> |
| 1 | – | 3 | 4 | 5 | – | – | Viscosity of the pumped liquid too high | <p>—> Increase the temperature of the pumped liquid.</p> <p>-or-</p> <p>Decrease the speed.</p> |
| – | 2 | – | – | – | – | – | Viscosity of the pumped liquid too low | <p>—> Reduce the temperature of the pumped liquid.</p> <p>-or-</p> <p>Increase the speed.</p> |
| – | 2 | 3 | – | 5 | – | – | Airlock/gas in the pumped liquid | <p>1. —> Test the pipe system for air admission, replace leaking parts.</p> <p>2. —> Reduce the suction head.</p> <p>-or-</p> <p>Increase the inlet pressure.</p> |
| – | 2 | – | 4 | – | – | – | Speed/frequency/voltage of the motor false | <p>1. —> Ensure that the motor frequency and voltage match the operating voltage.</p> <p>2. —> Ensure that the speed of the motor matches the rating plate of the pump. If necessary adjust the speed.</p> |
| – | 2 | 3 | – | 5 | – | – | Overflow valve opens during normal operation | <p>—> Set the opening pressure to 110% of the differential pressure ↗ During operation, Page 23.</p> |
| – | 2 | – | – | 5 | – | – | Overflow valve leaks | <p>—> Contact the manufacturer.</p> |
| – | 2 | – | – | – | – | – | Advanced wear of the housing/screw set | <p>—> Contact the manufacturer.</p> |
| – | – | – | – | – | – | 7 | Advanced wear of sealing surfaces | <p>—> Replace the seal and check the pumped liquid for abrasive substances. If required, replace the filter/strainer.</p> <p>-or-</p> <p>Contact the manufacturer.</p> |
| – | – | 3 | – | – | – | – | Coupling aligned incorrectly | <p>—> Assemble the coupling and motor correctly ↗ Connection, Page 18</p> |
| – | – | 3 | – | – | – | – | Pump subject to mechanical stress | <p>—> Connect the pump correctly to the pipe system ↗ Connection, Page 18.</p> |

| Fault identification | | | | | | | Cause | Remedy |
|----------------------|---|---|---|---|---|---|--|--|
| – | – | 3 | – | – | – | – | Vibrations/pulsations in the system | <div> <div></div> <div> Bear the pump unit elastically. -or- Make the connections with hoses. </div> </div> |
| – | – | 3 | – | – | – | – | Flow speed in the pressure line or suction line too high | <div> <div></div> <div> Set the flow speed in the pressure line so that it does not exceed 3 m/s. -or- Set the flow speed in the suction line so that it does not exceed 1 m/s. -or- Contact the manufacturer. </div> </div> |
| – | – | 3 | 4 | – | – | 7 | Ball bearing damaged | <div> <div></div> <div> Replace the ball bearing ↗ Servicing, Page 27. </div> </div> |
| – | 2 | 3 | 4 | – | – | 7 | Superficial damage to pump parts coming into contact with the liquid | <div> <div></div> <div> Contact the manufacturer. </div> </div> |
| – | – | – | – | – | – | 7 | Shaft seal damaged through dry running | <div> <div></div> <div> Replace the shaft seal ↗ Servicing, Page 27. </div> </div> |
| – | – | – | – | – | – | 7 | Inlet pressure too high | <div> <div></div> <div> 1. ➔ Reduce the inlet pressure at the system side. 2. ➔ Replace the shaft seal ↗ Servicing, Page 27. </div> </div> |
| – | – | – | – | – | – | 7 | Inlet pressure too low | <div> <div></div> <div> Install a non-return valve at the pressure side. </div> </div> |
| – | – | – | – | – | – | 7 | Shaft seal is overloaded through thermal/chemical influences | <div> <div></div> <div> 1. ➔ Check the maximum operating temperature. 2. ➔ Check the suitability and resistance of the elastomers with regard to the pumped liquid. -or- Contact the manufacturer. </div> </div> |
| – | – | – | – | – | – | 7 | Overload of the shaft seal by pressure build-up during the heating process | <div> <div></div> <div> Open the pressure-side/suction-side shut-off device in order to avoid a pressure build-up through heat expansion of the pumped liquid. </div> </div> |
| 1 | 2 | 3 | 4 | 5 | – | – | Cold start when delivering high-viscosity liquids | <div> <div></div> <div> Install the heating system. </div> </div> |
| – | – | – | 4 | – | – | 7 | Foreign bodies in the pump | <div> <div></div> <div> Contact the manufacturer. </div> </div> |
| – | – | – | – | – | – | 7 | Differential pressure is too high and has overloaded the idle screws | <div> <div></div> <div> Contact the manufacturer. </div> </div> |
| – | – | – | – | – | – | 7 | Viscosity is too low and has overloaded the idle screws | <div> <div></div> <div> Contact the manufacturer. </div> </div> |
| 1 | 2 | 3 | 4 | – | – | 7 | Pump damaged through dry running | <div> <div></div> <div> Contact the manufacturer. </div> </div> |
| 1 | – | – | – | – | – | – | Pump does not vent | <div> <div></div> <div> Vent the pressure line at the highest point. </div> </div> |

Tab. 11: Fault table

15 Accessories

15.1 Heating


15.1.1 Possible types of heating

The pump can optionally be equipped with a heating system. The manufacturer recommends a heating system at high-viscosity pumped liquids that do not flow sufficiently if not heated. This can result in excessive wattage or in problems arising through cavitation or sealing.


Possible types of heating:

- ☐ Electrical heating system
- ☐ Fluid heating system
- ☐ Special heating system


15.1.2 Electrical heating system

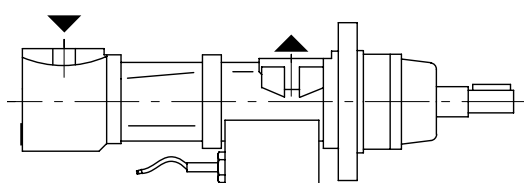


Electric heating system position

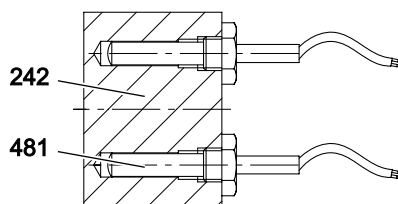

Electrical heating system for Size 5 – 42 and 235 – 275

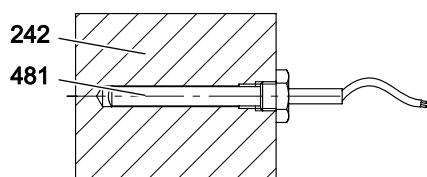

Electrical heating system for Size 55 – 210

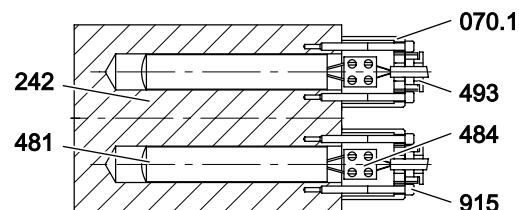

Electrical heating system for Size 370 – 880

- 071.1** End cover
242 Heating block
481 Heating element

- 484** Terminal strip
493 Screwed gland
915 Socket screw

The electric heating system consists of one or two heating elements **481** that are integrated in a heating block **242**. The heating block is fastened with a hose clamp to the pump housing. The output of the elements corresponds to the radiation and convection losses of the pump in the required temperature range so that overheating is not possible.

| Size 5 – 42 and 235 – 275 | Size 55 – 210 | Size 370 – 880 |
|---------------------------|-------------------|---|
| 2 heating elements | 1 heating element | 2 heating elements with terminal strip and screw connection |
| 1 heating block | 1 heating block | 1 heating block |
| 1 hose clamp | 1 hose clamp | 1 hose clamp |

Tab. 12: Scope of delivery of electrical heating system

Operating data

| Parameter | Unit | Value |
|--------------------|--------------------|-------|
| Voltage | [V] | 230 |
| Frequency | [Hz] | 50/60 |
| Wire cross-section | [mm ²] | 2 x 1 |

Tab. 13: Operating data electrical heating system

Heating-up period

Required heating-up period for temperature differences of 20 °C or 50 °C at pumps without thermal insulation:

| Size | Wattage [W] | Heating-up period [min] at a temperature difference of | |
|-----------|----------------|--|-------|
| | | 20 °C | 50 °C |
| 5 – 42 | 2 x 100 | 25 | 40 |
| 55 – 85 | 1 x 180 | 30 | 50 |
| 105 – 210 | 1 x 250 | 30 | 55 |
| 235 – 275 | 2 x 210 | 40 | 60 |
| 370 – 880 | 2 x 280 | 55 | 90 |

Tab. 14: Heating-up period for electric heating system

Installing the electrical heating system

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Electrician |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Thermal conductive paste |

ATTENTION

Damage to the electrical heating system through leakage currents or flashovers at the emission point of the connecting cable.

- Protect the area of the connecting head against liquid and pasty liquids (lubricants, oil, plastics, etc.) as well as their vapours.

Requirement:

- ✓ Area of the connecting head protected against liquid and pasty liquids (lubricants, oil, plastics, etc.) as well as their vapours.
 - ✓ Supply lines protected against mechanical vibrations in the area of the emission from the heating element. Any vapours arising have to escape freely.
 - ✓ Heating element absolutely dry.
1. ► Apply thermal conductive paste to the contact areas of the heating block and pump housing.
 2. ► Fasten the heating block to the pump housing using the hose clamp.
 3. ► Push the heating element into the heating block and screw it on.

Connecting the electrical heating system**⚠ DANGER**

Risk of death resulting from electric shock.

- Ensure that the electrical power supply is de-energized and is secured against being switched back on.
- Observe the operating instructions of the electrical components.

- Connect the connecting cable of the heating element.

Commissioning the electrical heating system



DANGER


Risk of injury through discharging pumped liquid.

The pump housing may burst through heat expansion of the pumped liquid.


- ▶ Open all the valves during the heating process.

1. ➡ Switch on the electric heating system.
2. ➡ Take the required heating-up periods into account ➡ Accessories, Page 46.

15.1.3 Fluid heating system

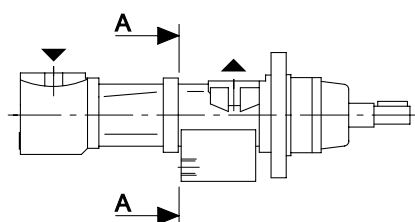


Fluid heating system position

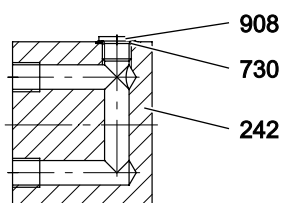


Fluid heating system for Size 5 – 275

- 242** Heating block
730 Flat gasket

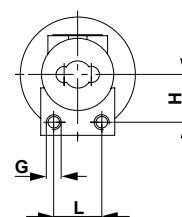

Sectional view A–A

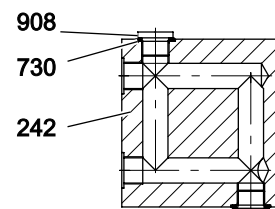

Fluid heating system for Size 370 – 880

- 908** Screw plug

The fluid heating system consists of a heating block **242** through which a heating liquid (e.g. vapour, thermal oil) flows. The heating block is fastened with a hose clamp to the pump housing.

Size 5-880

1 heating cover

1 hose clamp

Tab. 15: Scope of delivery of the fluid heating system

Heating liquid operating data

| Parameter | Unit | Value |
|---------------------------------|-------|-------|
| Max. allowable working pressure | [bar] | 16 |
| Max. temperature | [°C] | 220 |

Tab. 16: Heating liquid operating data

Heating-up period

Required heating-up period for temperature differences of 20 °C or 50 °C at pumps without thermal insulation and a liquid temperature of 200 °C:

| Size | Steam amount [kg/h] | Heating-up period [min] at a temperature difference of | |
|-----------|------------------------|--|-------|
| | | 20 °C | 50 °C |
| 5 – 26 | 3 | 20 | 35 |
| 32 – 42 | 3 | 20 | 40 |
| 55 – 85 | 3 | 20 | 40 |
| 105 – 118 | 3 | 25 | 45 |
| 160 – 210 | 5 | 30 | 50 |
| 235 – 275 | 5 | 30 | 50 |
| 370 – 450 | 5 | 40 | 60 |
| 550 – 880 | 6 | 45 | 75 |

Tab. 17: Heating-up period for fluid heating system

Installing the fluid heating system

| | |
|--------------------------------|---|
| Personnel qualification: | <input type="checkbox"/> Fitter |
| Personal protective equipment: | <input type="checkbox"/> Work clothing <input type="checkbox"/> Protective gloves <input type="checkbox"/> Safety boots |
| Aids: | <input type="checkbox"/> Thermal conductive paste |

1. ➤ Apply thermal conductive paste to the contact areas of the heating block and pump housing.
2. ➤ Fasten the heating block to the pump housing using the hose clamp.
3. ➤ Mount the piping.

Commissioning the fluid heating system**⚠ DANGER****Risk of injury through discharging pumped liquid.**

The pump housing may burst through heat expansion of the pumped liquid.

- Open all the valves during the heating process.

1. ➤ Take the required heating-up periods into account ↪ Accessories, Page 46.
2. ➤ When setting the pressure and temperature of the heating fluid take the permissible operating limits of the pump into account ↪ Technical data, Page 8.

15.1.4 Heating system special design


Please contact the manufacturer for special designs.

16 Spare parts

16.1 Overview of inner bearing

16 Spare parts

16.1 Overview of inner bearing

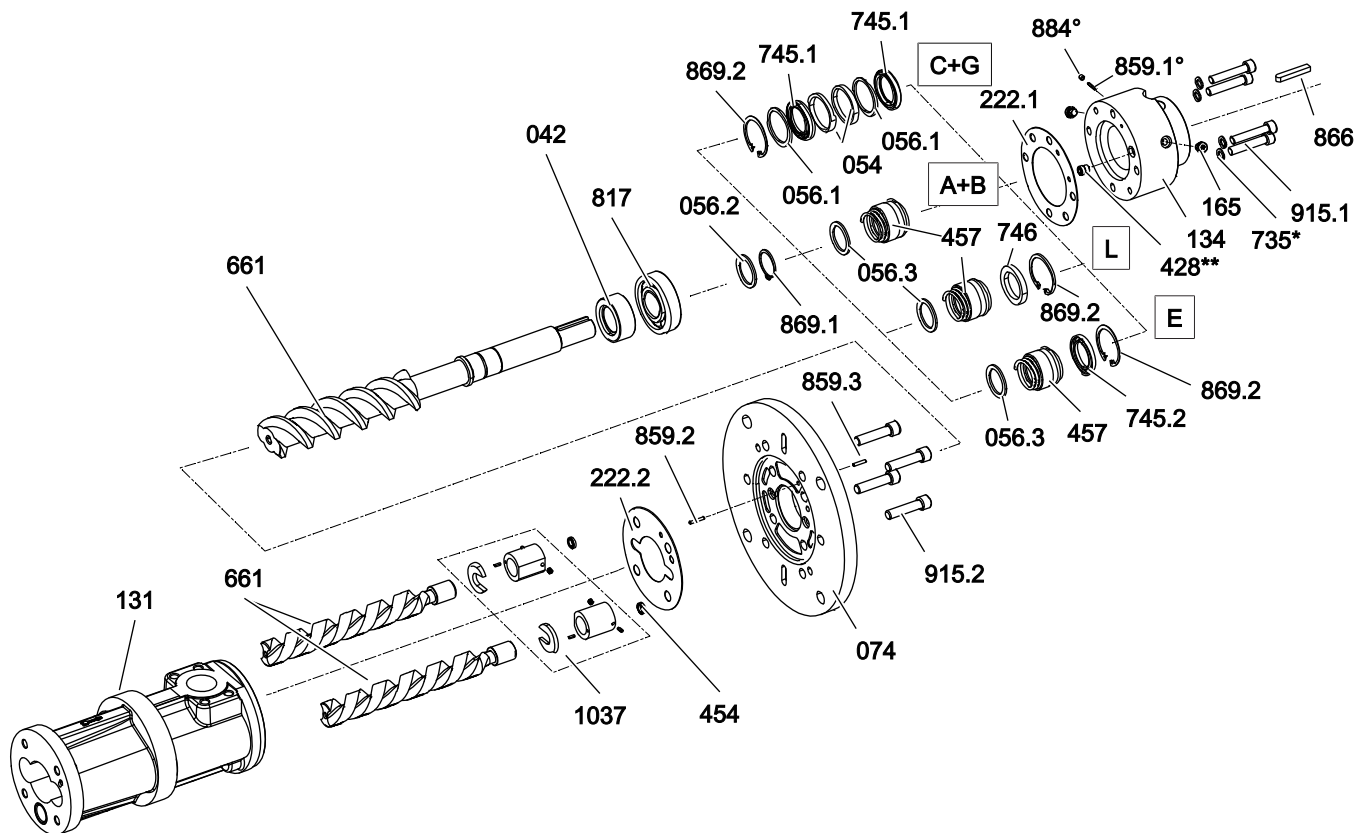


A+B Mechanical seal standard/hard material
C+G Radial shaft seal standard/high-temperature

E Mechanical seal with receiver
L Mechanical seal with throttle ring

| Qty. | Item no. | Part | Qty. | Item no. | Part |
|------|----------|---|------|----------|------------------------|
| 1 | 042 | Balancing cylinder | 4 | 735* | Copper seal |
| 2 | 054 | Spacer ring | 2 | 745.1 | Radial shaft seal ring |
| 2 | 056.1 | Supporting ring | 1 | 745.2 | Radial shaft seal ring |
| 1 | 056.2 | Supporting ring | 1 | 746 | Throttle ring |
| 1 | 056.3 | Supporting ring | 1 | 817 | Ball bearing |
| 1 | 074 | Flange cover | 1 | 859.1° | Adapter sleeve |
| 1 | 131 | Cartridge housing | 1 | 859.2 | Adapter sleeve |
| 1 | 134 | Seal housing | 1 | 859.3 | Adapter sleeve |
| 2 | 165 | Screw plug | 1 | 866 | Feather key |
| 1 | 222.1 | Flat gasket | 1 | 869.1 | Circlip |
| 1 | 222.2 | Flat gasket | 1 | 869.2 | Circlip |
| 1 | 428** | Counter-pressure valve | 1 | 884° | Threaded pin |
| 2 | 454 | Edge sealing ring | 4 | 915.1 | Socket screw |
| 1 | 457 | Mechanical seal | 4 | 915.2*** | Socket screw |
| 1 | 661 | Screw set | 1 | 1037 | Bearing bush set |
| | | | | | |
| | * | For size 15 – 26 only | | | |
| | ** | Only pumps with inlet pressure under the ambient pressure | | | |
| | *** | For size 55 – 660, 880 only | | | |
| | ° | Only for mechanical seal | | | |

Tab. 18: Inner bearing spare parts

16.2 Overview of outer bearing

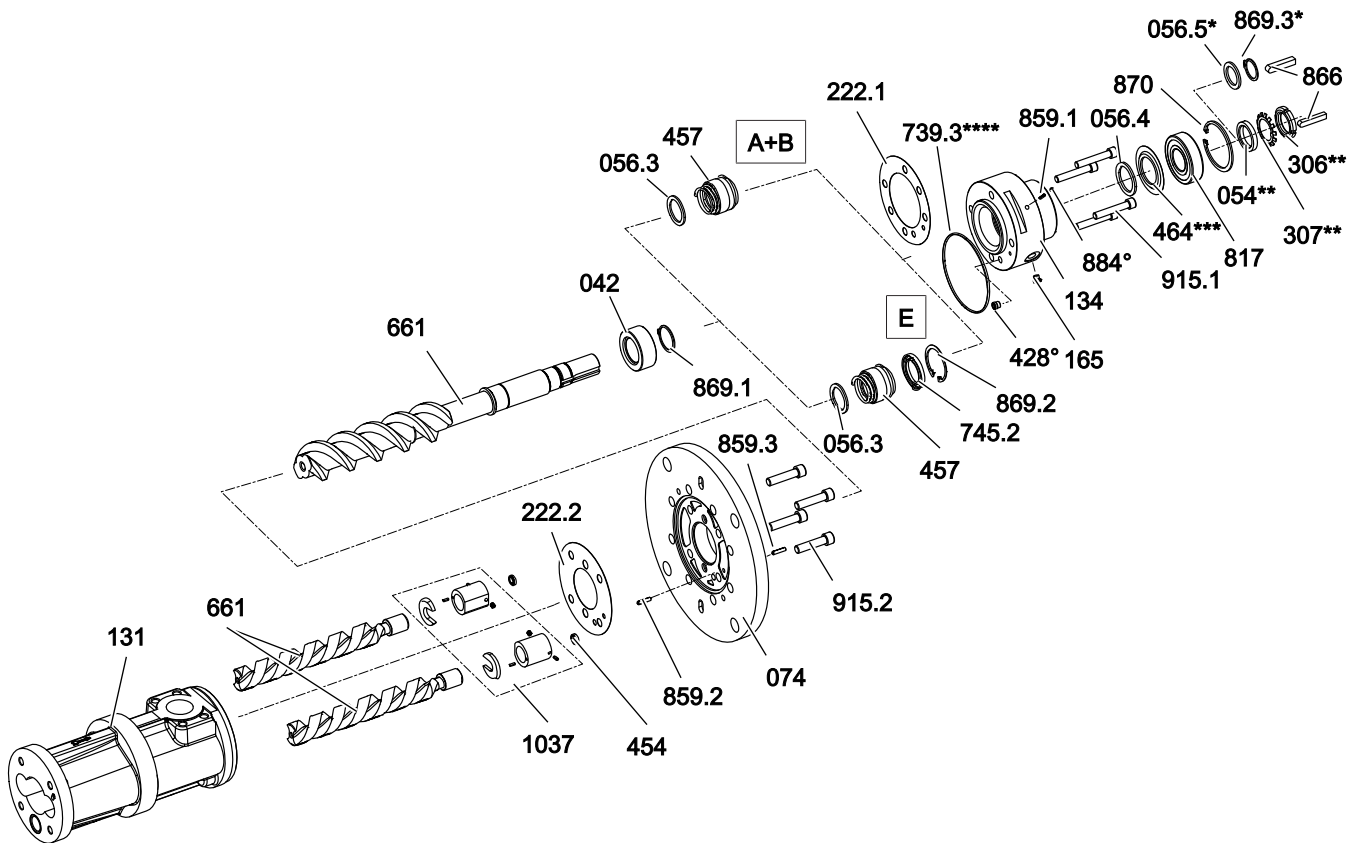

A+B Mechanical seal standard/hard material

E Mechanical seal with receiver

| Qty. | Item no. | Part | Qty. | Item no. | Part |
|------|----------|---|------|-----------|-------------------------|
| 1 | 042 | Balancing cylinder | 1 | 661 | Screw set |
| 1 | 054** | Spacer ring | 1 | 739.3**** | O-ring |
| 1 | 056.3 | Supporting ring | 1 | 745.2 | Radial shaft seal ring |
| 1 | 056.4 | Supporting ring | 1 | 817 | Ball bearing |
| 1 | 056.5* | Supporting ring | 1 | 859.1 | Adapter sleeve |
| 1 | 074 | Flange cover | 1 | 859.2 | Adapter sleeve |
| 1 | 131 | Cartridge housing | 1 | 859.3 | Adapter sleeve |
| 1 | 134 | Seal housing | 1 | 866 | Feather key |
| 2 | 165 | Screw plug | 1 | 869.1 | Circlip |
| 1 | 222.1 | Flat gasket | 1 | 869.2 | Circlip |
| 1 | 222.2 | Flat gasket | 1 | 869.3* | Circlip |
| 1 | 306** | Groove nut | 1 | 870 | Circlip |
| 1 | 307** | Locking plate | 1 | 884* | Threaded pin |
| 1 | 428° | Counter-pressure valve | 4 | 915.1 | Socket screw |
| 2 | 454 | Edge sealing ring | 4 | 915.2 | Socket screw |
| 1 | 457 | Mechanical seal | 1 | 1037 | Bearing bush set |
| 1 | 464*** | Seal (Nilos ring) | | | |
| | * | For size 32 – 42, 55 – 118 only | | *** | For size 370 – 450 only |
| | ** | For size 160 – 660, 880 only | | **** | For size 32 – 42 only |
| | ° | Only pumps with inlet pressure under the ambient pressure | | | |


Tab. 19: Outdoor storage spare parts

16 Spare parts

16.3 Repair kit, overflow valve

16.3 Repair kit, overflow valve


Note The repair kit contains only the numbered parts and is only supplied complete.

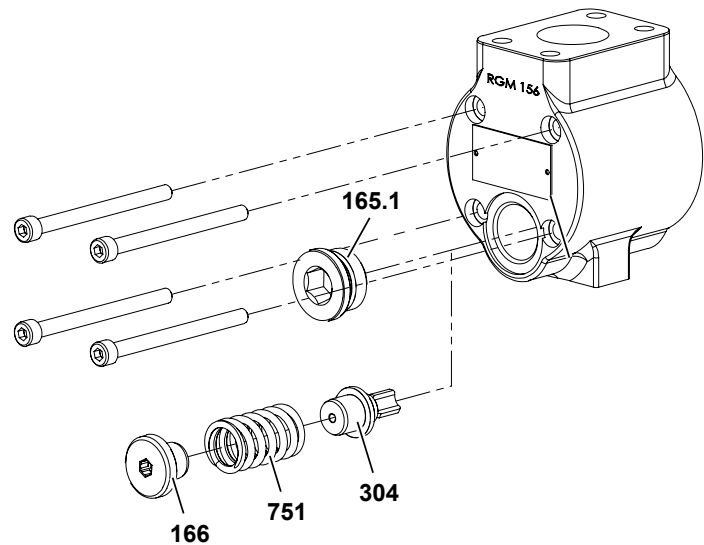

| Qty. | Item no. | Part | Qty. | Item no. | Part |
|------|----------|-----------------|------|----------|-----------------|
| 1 | 165.1 | Screw plug | 1 | 304 | Valve cone |
| 1 | 166 | Adjusting screw | 1 | 751 | Pressure spring |

Tab. 20: Repair kit, overflow valve

16.4 Overview of accessories

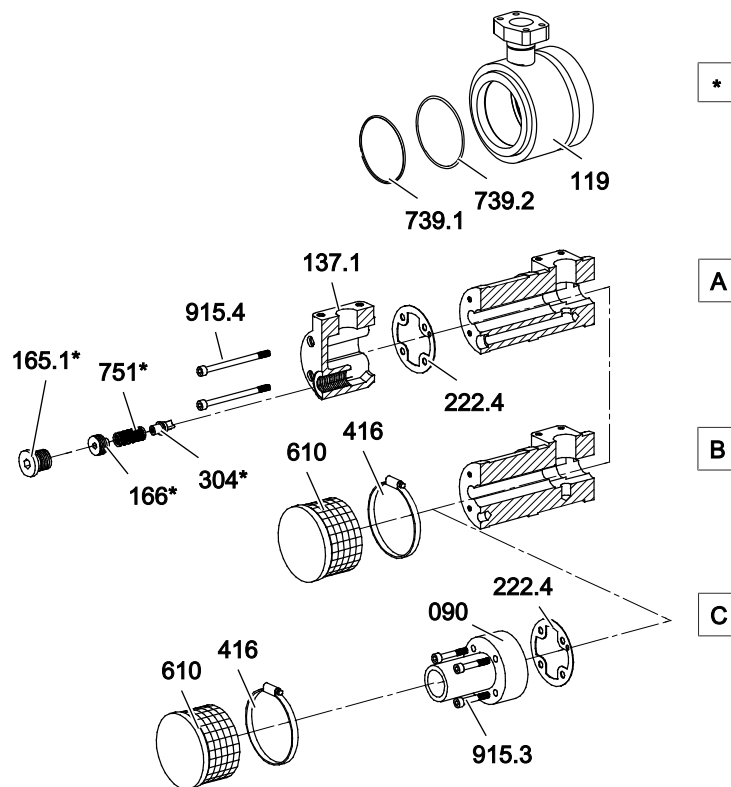

- * Pressure housing
A Suction housing
B Suction strainer
C Connection for suction pipe

| Qty. | Item no. | Part | Qty. | Item no. | Part |
|--|---------------|---|------|--------------|------------------|
| 1 | 090 | Suction cover (suction pipe connection) | 1 | 416 | Hose clamp |
| 1 | 119 | Pressure housing | 1 | 610 | Suction strainer |
| 1 | 137.1 | Suction housing | 1 | 739.1 | O-ring |
| 1 | 165.1* | Screw plug | 1 | 739.2 | O-ring |
| 1 | 166* | Adjusting screw | 1 | 751* | Pressure spring |
| 1 | 222.4 | Flat gasket | 4 | 915.3 | Socket screw |
| 1 | 304* | Valve cone | 4 | 915.4 | Socket screw |
| * Parts are included in the overflow valve repair kit. | | | | | |

Tab. 21: Spare parts attachments

17 Appendix

17.1 Tightening torques for screws with metric screw threads with and without wedge lock washers

Note In the case of galvanised screw plugs and screw plugs made of stainless steel the inner thread and outer thread have to be greased thorough before mounting in order to prevent threads from seizing.

Note The manufacturer recommends tightening screws with wedge lock washers according to the table three times after another with the same tightening torque

| Tightening torque [Nm] | | | | | | | |
|----------------------------------|------|------|------|-----------|----------------------------------|-------------------|------|
| Screws with head contact surface | | | | | Countersunk screws | | |
| Thread | | | | | Stainless steel screws A2 and A4 | | 8.8 |
| | 5.6 | 8.8 | 10.9 | 8.8+ Alu* | Property class 70 | Property class 80 | |
| M 3 | 0.6 | 1.5 | – | 1.2 | 1.1 | 1.3 | 1.0 |
| M 4 | 1.4 | 3.0 | 4.1 | 2.3 | 2.0 | 2.3 | 2.0 |
| M 5 | 2.7 | 6.0 | 8.0 | 4.8 | 3.9 | 4.7 | 5.0 |
| M 6 | 4.7 | 10.3 | 14.0 | 7.6 | 6.9 | 8.0 | 9.0 |
| M 8 | 11.3 | 25.0 | 34.0 | 18.4 | 17.0 | 22.0 | 14.0 |
| M 10 | 23.0 | 47.0 | 68.0 | 36.8 | 33.0 | 43.0 | 36.0 |
| M 12 | 39.0 | 84.0 | 117 | 64.0 | 56.0 | 75.0 | 60.0 |
| M 14 | 62.0 | 133 | 186 | 101 | 89.0 | – | 90.0 |
| M 16 | 96.0 | 204 | 285 | 155 | 136 | 180 | 100 |
| M 18 | 133 | 284 | 390 | 224 | 191 | – | – |
| M 20 | 187 | 399 | 558 | 313 | 267 | 370 | 135 |
| M 24 | 322 | 687 | 960 | 540 | 460 | 605 | 360 |

Tab. 22: Tightening torques metric screw thread

*When screwing into aluminium, the tightening torque reduces by 20 % when the screw-in depth is less than double the thread diameter.

17.2 Tightening torques for screw plugs with thread measured in inches and elastomer seal

Note In the case of galvanised screw plugs and screw plugs made of stainless steel the inner thread and outer thread have to be greased thorough before mounting in order to prevent threads from seizing.

| Tightening torque [Nm] | |
|------------------------|------------------------------|
| Thread | Galvanized + stainless steel |
| G 1/8" | 13.0 |
| G 1/4" | 30.0 |
| G 3/8" | 60.0 |
| G 1/2" | 80.0 |
| G 3/4" | 120 |
| G 1" | 200 |
| G 1 1/4" | 400 |
| G 1 1/2" | 450 |

Tab. 23: Tightening torques with thread measured in inches

17.3 Contents of the Declaration of Conformity

The products described in these instructions are machinery in the sense of the Directive 2006/42/EC. The original of the EC Declaration of Conformity is enclosed with the machinery at delivery.

The machinery fulfils all the relevant provisions of the following directives:

| Number | Name | Remark |
|------------|--|---|
| 2006/42/EC | Machinery Directive | – |
| 2014/68/EU | Pressure Equipment Directive | – |
| 2014/30/EU | Directive on Electromagnetic Compatibility | Only for machinery with electrical components |
| 2014/35/EU | Low Voltage Directive | Only for machinery with electrical components |
| 2014/34/EU | Directive on Use in Potentially Explosive Areas (ATEX) | Only for machinery in ATEX version |

Tab. 24: Directives observed



KRAL

